

E-LOCK® – Fit Chart







Can't find your unit on the fit chart?
Contact us direct and we'll find the screw you need.

*Screws: E, R, and V are available upon request. Contact us direct and we'll ship it to you – no extra charge.

| MFG BRAND | MFG MODEL # | UEL50 FIT | SCREW |
|---|---|-----------------------------|------------|
| COBRA | All Models | YES | A |
| FURUNO | FCV 585, 587, 620, 627 Models | Special Order - Please Call | V |
| | All Other Models | YES | B-1 or D-1 |
| <i>For Garmin units that have a swivel base that is being used, request a Garmin swivel screw pack when ordering.</i> | | | |
| GARMIN | All Models | YES | B-1 |
| | Striker 7 (Needs Thinner Outer Housing) | Special Order - Please Call | B-1 |
| HUMMINBIRD | 1100 SERIES All Models | Special Order - Please Call | E |
| | 800 SERIES All Models | YES | C |
| | 900 SERIES All Models | YES | C |
| | HELIX SERIES All Models | YES | S |
| | ONIX SERIES All Models | YES | C |
| | SOLIX SERIES All Models | YES | C |
| HYDRO WAVE | H2 | Special Order - Please Call | R |
| ICOM | All Models | YES | A |
| LOWRANCE | Elite-9 & 12 ONLY | YES | B-1 |
| | HDS SERIES All Models | YES | B or B-1 |
| | HOOK SERIES 7-12 | YES | B-1 |
| | LINK SERIES All Models | YES | A |
| | LVR SERIES All Models | YES | A |
| RAYMARINE | All Models (Most Models Use Screws B & D) | YES | B-1 or D-1 |
| SIMRAD | 30-50 SERIES All Models | YES | B-1 |
| | AP35 | YES | B-1 |
| | GO7-9 | YES | D-1 |
| | NSE 8-12 | YES | D-1 |
| | NSS 7-16 All | YES | D-1 |
| STANDARD HORIZON | All Models | YES | A |
| UNIDEN | All Models | YES | A |

E-LOCK® (UEL50) Installation Instructions

- Find your unit on our fit chart
- Select proper screw and washer (Washer must be used. Use more than one provided washer if screw bottoms out before tight.)
- Remove existing knob, assemble as shown
- Tighten screw

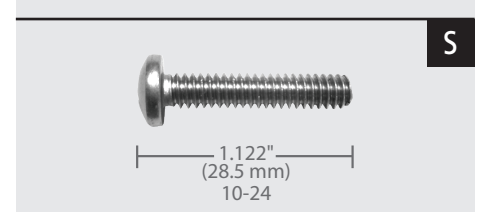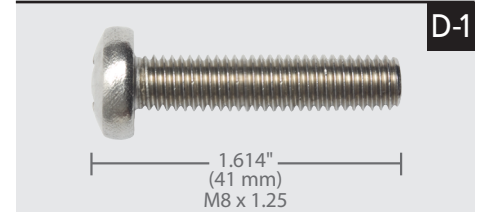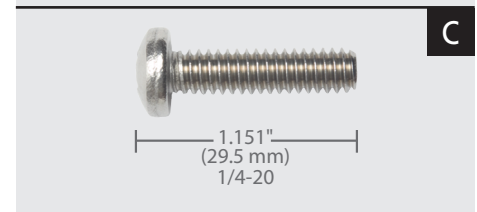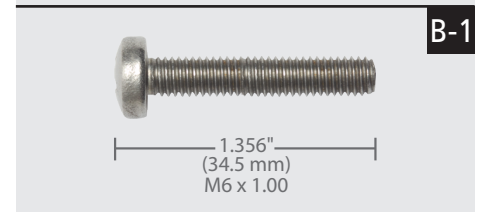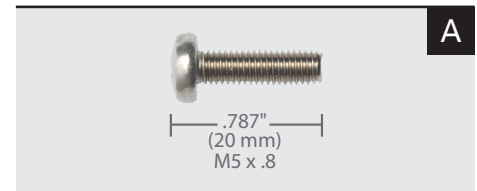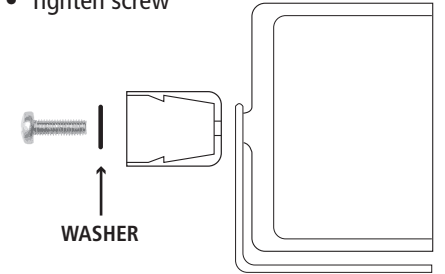

E-LOCK® for Minn Kota® Quick Release Brackets Installation Instructions

- 1) Remove lock from package, insert key and turn counter-clockwise to allow inner piece of lock body to drop out. Then turn key back clockwise so it is in the locked position.
- 2) Using Screw C and a medium washer from fit chart, place washer on screw and feed through hole of inner piece.
- 3) Unscrew thumb screw from side of Quick Release Bracket. Remove washer from thumb screw and place on screw protruding from bottom of lock.
- 4) Screw bottom of lock in place of thumb screw and tighten.
- 5) Install outer piece of the lock body and be sure it is secure by pulling back.

Fits These Minn Kota® Quick Release Brackets

MKA-16-02
MKA-16-03
MKA-42
MKA-52/62
MKA-47

*Does not fit puck style composite mounts