

# Self-adhesive Wallpaper Installation Guide

## General

Our removable self-adhesive wallpaper will allow for effortless, no mess installations. With a strong, long lasting, bond to the wall, that can be removed. Please follow the below installation guidelines to achieve the best results.

## Advisory

- Freshly painted walls should be left for 4 weeks before application, please refer to the paint manufacturers instructions for guidance
- Ensure the wall is flat, clean, smooth and dry before application
- To guarantee performance in cold conditions, bumps and rough patches on the wall should be sanded smooth with 1200 grit sandpaper
- **Allow the wall paper to acclimatise in the room it will be applied in for a minimum of 48 hours before application**

## Application Tools

- Plastic Smoother
- Razor knife
- Spirit Level
- Tape measure
- Pencil

## Surface Preparation

1. Clean the walls with warm water only
2. Allow the walls to dry for a minimum of 24 hours


## First Panel

1. Using a spirit level and pencil, mark a vertical line equal to a panels width on the wall, use this as a guide to hang the first panel as straight as possible
2. Remove approx. 25 cm of backing paper and move the panel into the correct position
3. Applying the adhesive to the wall
4. Remove trapped pockets of air from behind
5. Ensure the edges are firmly sealed flat to the wall
6. Remove a further 25cm of backing paper and apply to the wall. Repeat this process with each panel.


**Repeat Step 4. After a week for longer lasting results**

Wallpaper  
*Mural.com*


## Step-By-Step Guide

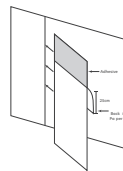


- 1 Remove approximately 25cm of the release liner to expose the adhesive surface

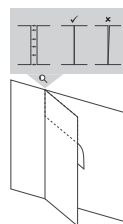


- 2 Butt join the drops tightly. A slight overlap of the drops gives best results

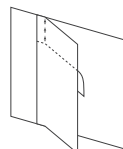


- 3 Apply pressure to the join to fix it to the wall

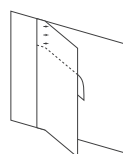


- 4 Moving from left to right apply pressure to the rest of the panel, fixing it to the wall

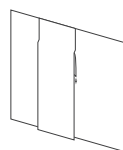

- 5 Remove a further 25CM of backing paper

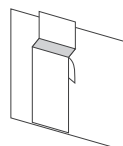

- 6 Apply pressure left to right fixing the panel to the wall

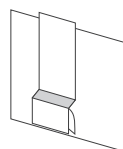

- 7 Repeat this process until the pane has been applied

JOHN IS A PINK