

ASSEMBLY INSTRUCTIONS
Wiwiurka
Climbing Arch



- Assembly time 30-40 mins
- Difficulty level
  Basic

## Please make sure you have the following pieces:

- 9 rods
- 2 Sideboards
- Stainless steel screws

You will need an electric or manual screwdriver.



## **Before** starting

## **IMPORTANT**

- Remove all wrapping material before you start to assemble.
- Sorting your pieces will make assembly easier.
- Do not tighten all screws until completely assembled and make sure to screw the pieces at a low speed to avoid them from cracking.
- The color sequence will vary depending on each color palette.




1

Start with one sideboard, screw the rods one by one making sure they are fully inserted into their corresponding slots and that they are not pushed away from the sideboard when screwing them in the piece.



Complete all the rods on this side. Do not tighten them in full yet.



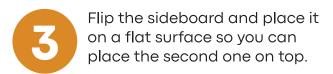







Carefully insert the rods in their corresponding slots and partially insert the screws to make sure the rods are properly aligned. You can use a toothpick or alike tool as an aide.





Once aligned, fasten all screws but do not tighten them in full yet.



6

Place the arch in its climbing arch position and apply downward pressure in order to ground it. You may hear some tiny cracks which is normal when the pieces are sitting into place. Once you have verified that the Climbing Arch is properly aligned and grounded, tighten in full all the screws.







## Ready for some fun?



