




TERRA SUMMER

CONTENT


1 - MEASUREMENTS AND PREPARATION	04
2 - ASSEMBLING THE BOTTOM AND THE TOP	05
3 - INSTALLING THE VERTICAL MOUNTING FRAMES	08
4 - INSERTING THE SCREEN	11
5 - ADJUSTING THE SCREEN	15

IN THE BOX

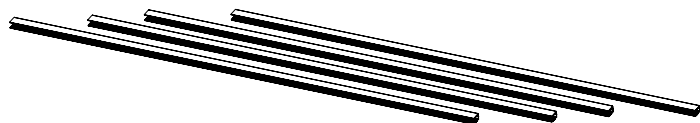


4X Mounting frames (GE03)

- 2 Horizontal mounting frames (H)
- 2 Vertical mounting frames (V)



4X Clips (GE02)


- 2 Horizontal clips (H)
- 2 Vertical clips (V)

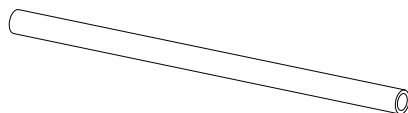


Screen




Screws for clips
(Step 5C)

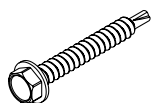

Metal Screws

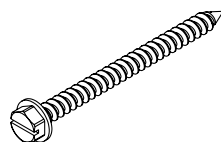


Wood Screws

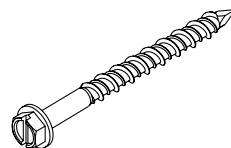

Concrete Screws




Metal bar

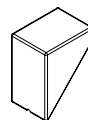


Stake


NEEDED TOOLS

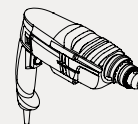


Drill

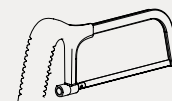


Saw or
Miter saw

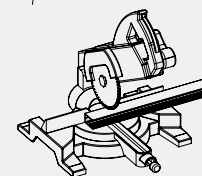


Hammer

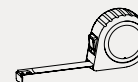

Measuring tape

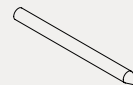

Pencil

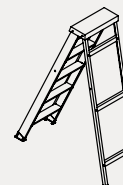


Step ladder

MEASUREMENTS AND PREPARATION

1


A

Referring to the order sheet, make sure the inside dimensions of the opening match the dimensions of the Dura Fixed screen. Please note that the dimensions of the mounting frames (GE03) will be a little longer than the dimensions ordered to allow you to perfectly adjust the frame to your opening.

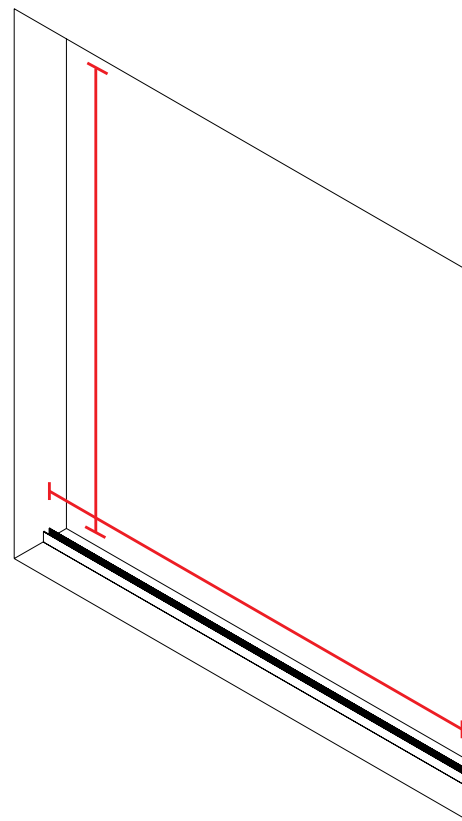

B

Open the boxes.

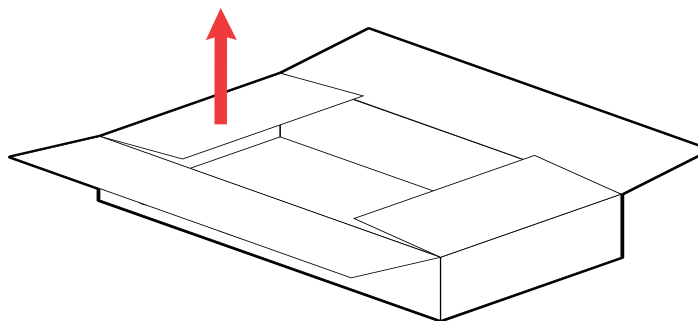


ASSEMBLING THE BOTTOM AND THE TOP

2


A

Take one of the horizontal mounting frames (GE03) marked with the letter H and insert the right part inside the base of the opening.

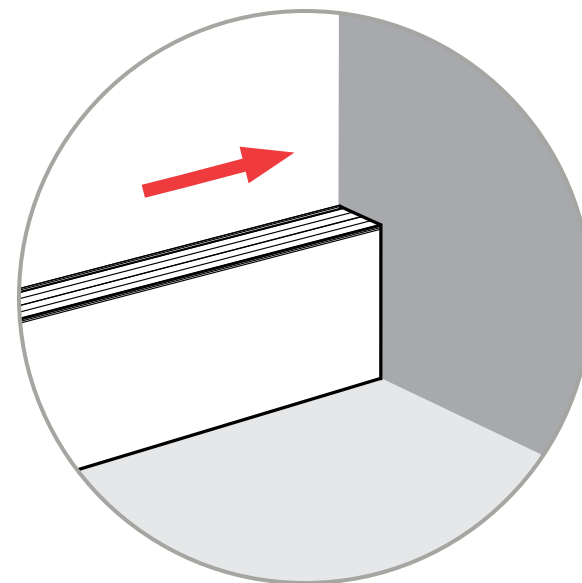


B

Press the left mounting frame against the outside of the left opening. Mark the point where the left side of the mounting frame contacts the frame of the opening.

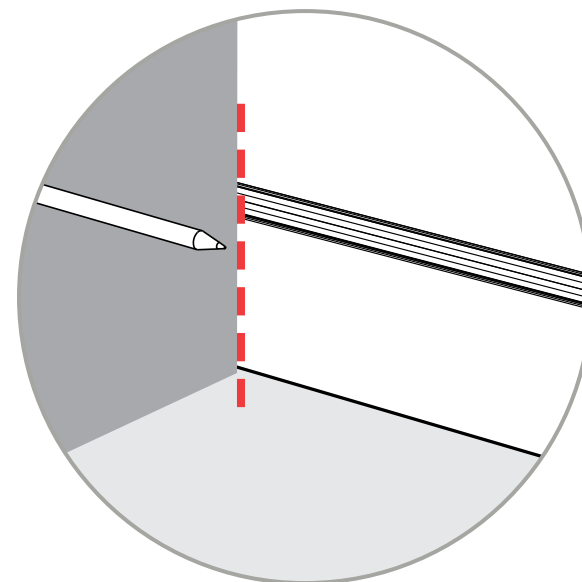


C

Cut the horizontal mounting frame at the point marked.

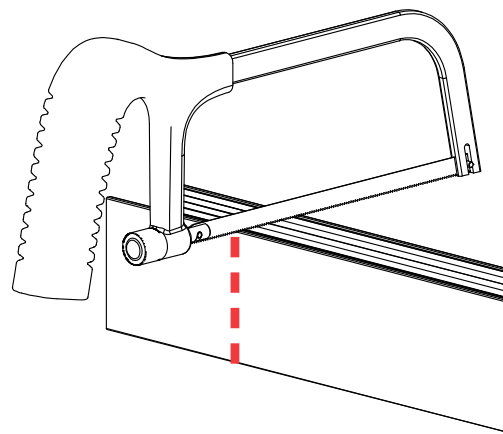

IT IS RECOMMENDED TO ALWAYS
WEAR SAFETY GLASSES DURING
THE CUTTING STEP.

or


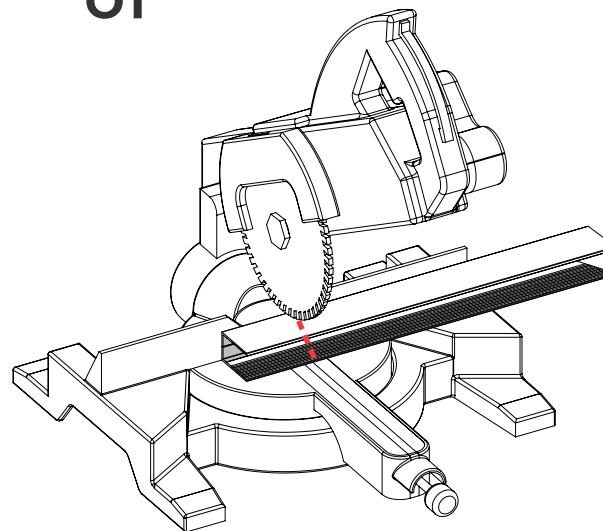


D

Secure the mounting frame in the holes located inside it with the appropriate screws depending on the material in which it will be mounted.



MAKE SURE THAT THE POSITIONING OF ALL THE MOUNTING FRAMES (GE03) CAN BE INSTALLED INSIDE THE OPENING.

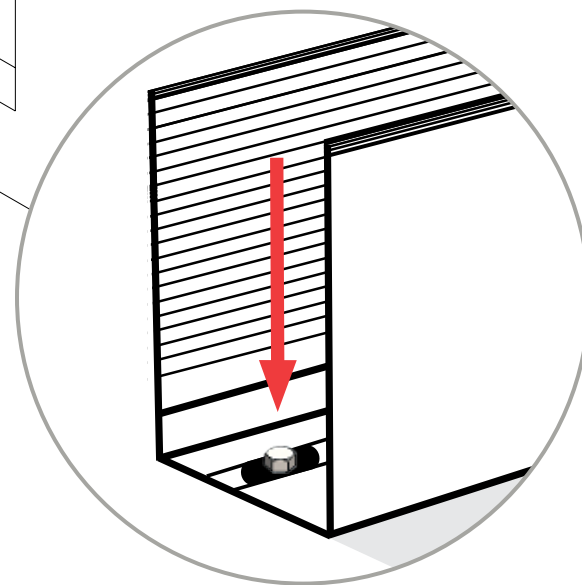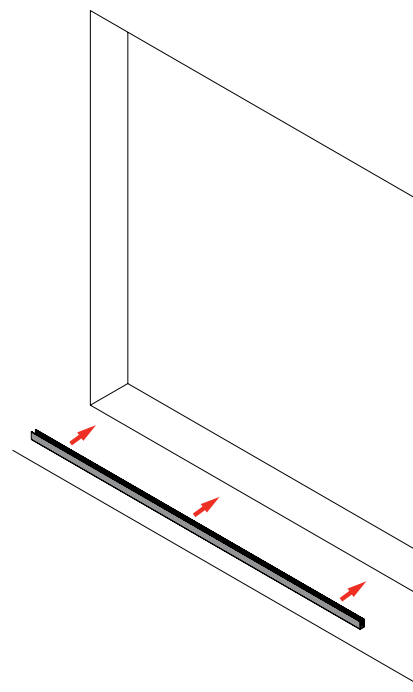

E


Repeat steps 2A, 2B, 2C and 2D with the top mounting frame (GE03) marked with the letter H.

INSTALLING THE VERTICAL MOUNTING FRAMES

3

A


Take one of the vertical mounting frames (GE03) marked with the letter V and place it on top of the bottom mounting frame (GE03).

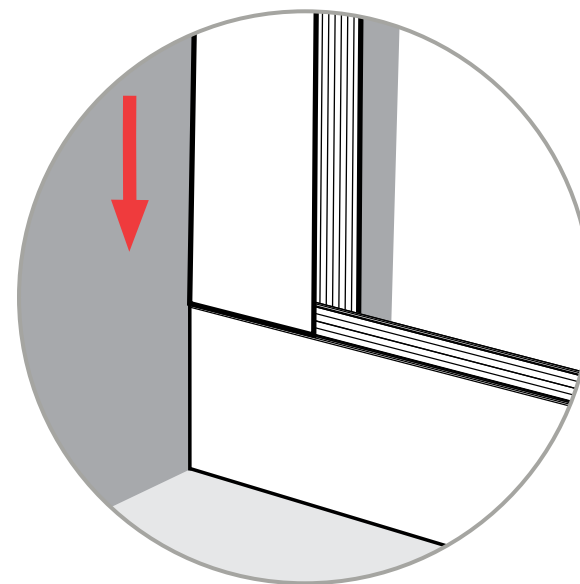

B

In a straight line, press the top of the vertical mounting frame onto the outside of the top mounting frame.

Mark the point where the vertical mounting frame makes contact with the top mounting frame.

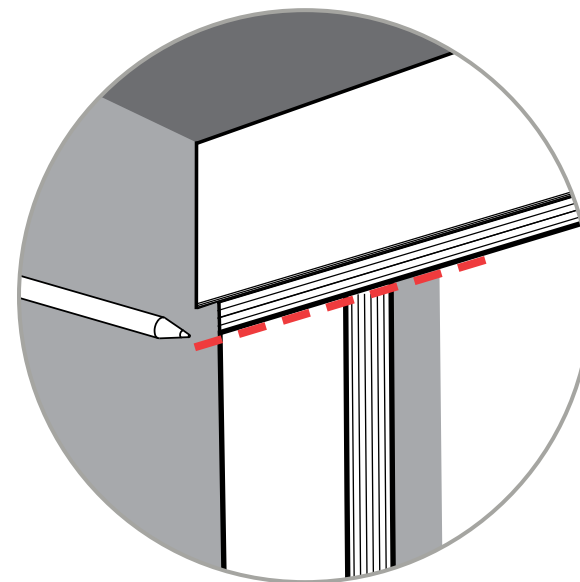


C


Cut the vertical mounting frame at the point marked.



IT IS RECOMMENDED TO ALWAYS
WEAR SAFETY GLASSES DURING
THE CUTTING STEP.

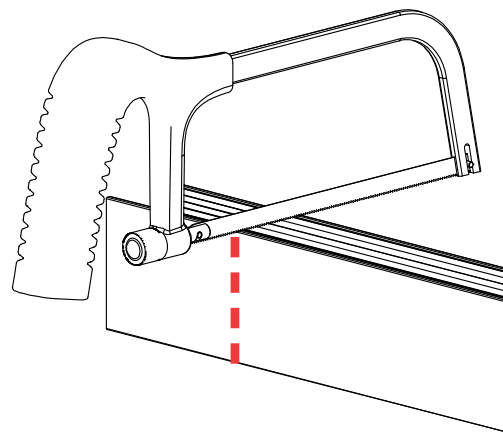

or

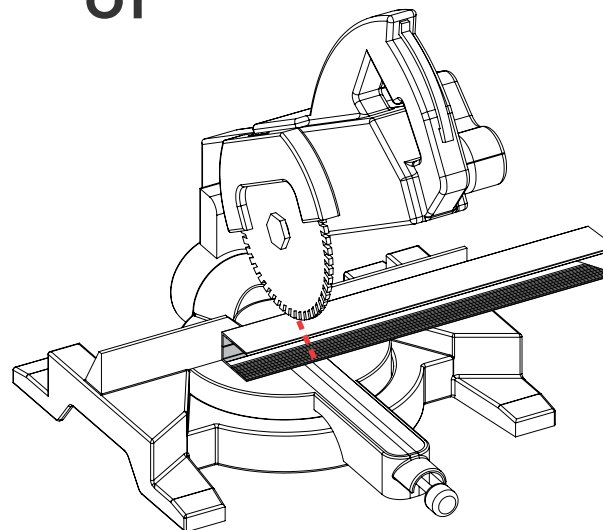

D


Take the cut vertical mounting frame (GE03) and insert it between the bottom and top mounting frames.

E

Secure the mounting frame in all the mounting holes located on the inside of the frame with the appropriate screws depending on the material.

F

Repeat steps 3A, 3B, 3C, 3D and 3E with the second vertical mounting frame (GE03) marked with the letter V.

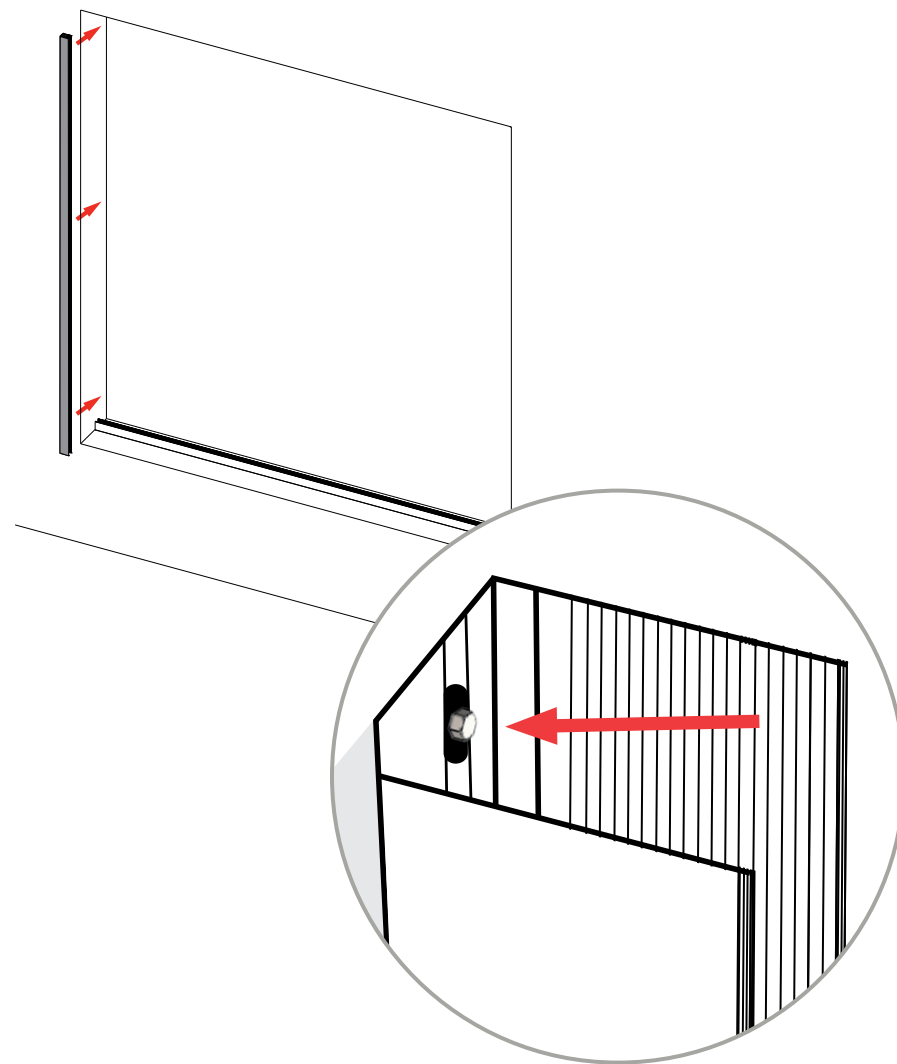


INSERTING THE SCREEN

4

A

Before inserting the screen, take note of where the 2 small screws on the clips (GE02) are and make sure they are towards the outside of your room.

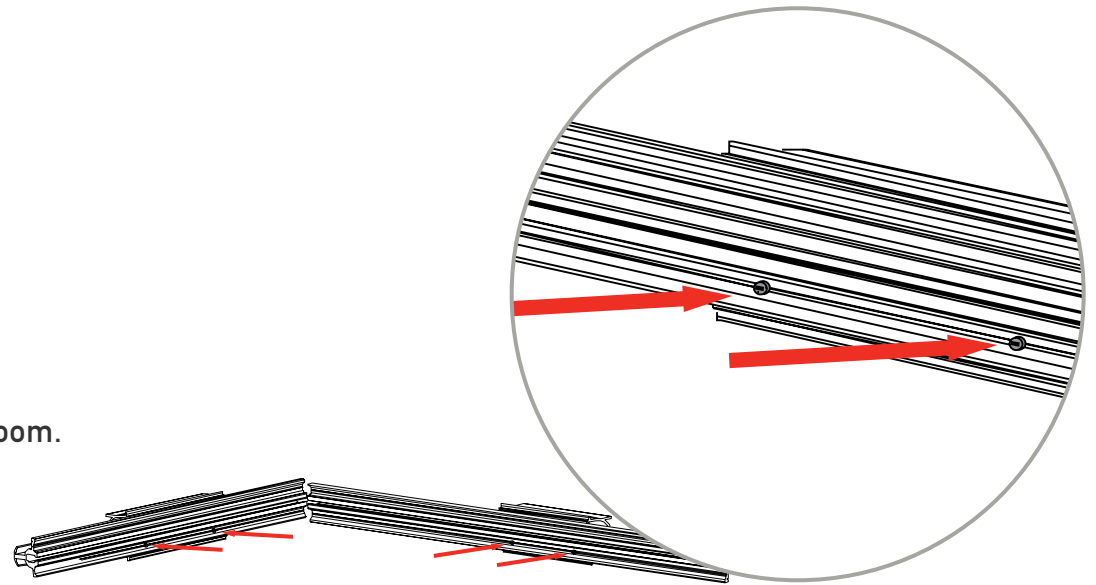


B

Take the top clip and slide the screen over it. Make sure that the length of the screen is equal to the length of the clip (GE02).




THE FUSION (SHINY SIDE AT THE JUNCTION OF THE ZIP AND THE FABRIC) MUST BE INSIDE YOUR ROOM, TO PROTECT IT FROM THE SUN.

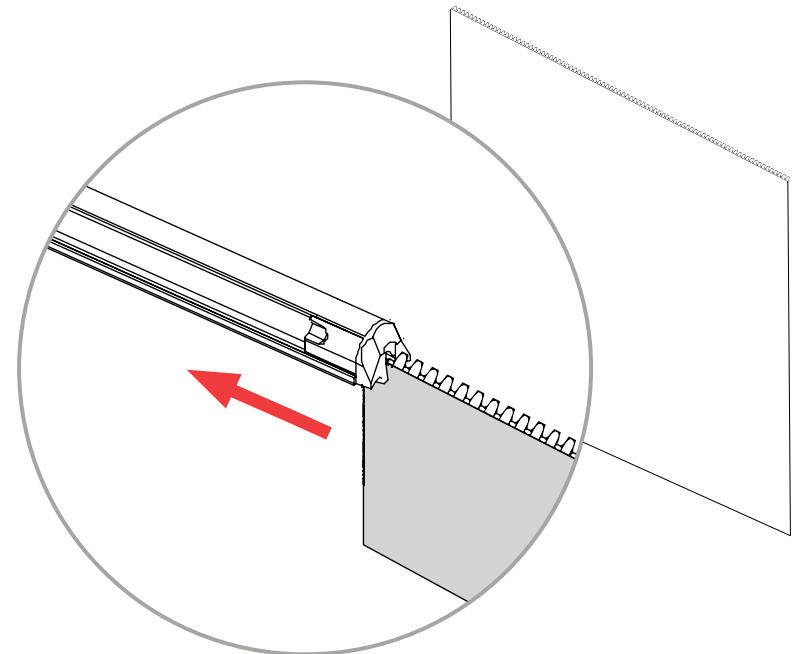


C

Center the clip (GE02) in the mounting frame (GE03) at the top and press until you hear 2 clicks.

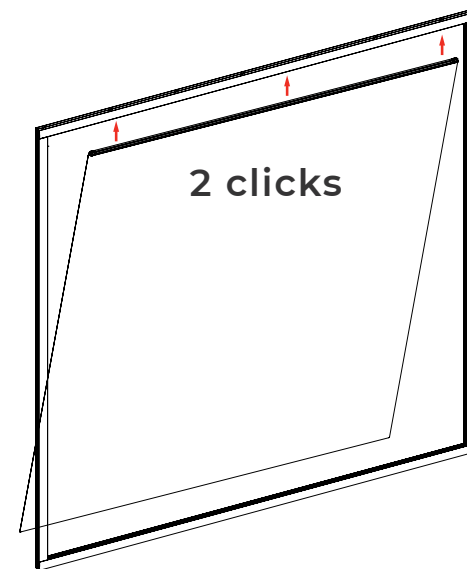


D

Slide the vertical clip (GE02) on the left zip of the screen.

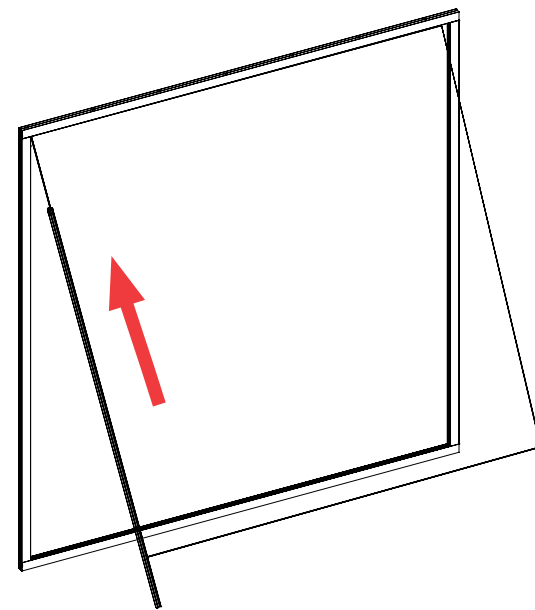


E

Insert the left vertical clip into the left mounting frame taking care to insert it completely behind the top clip to allow the next steps to be done easily.

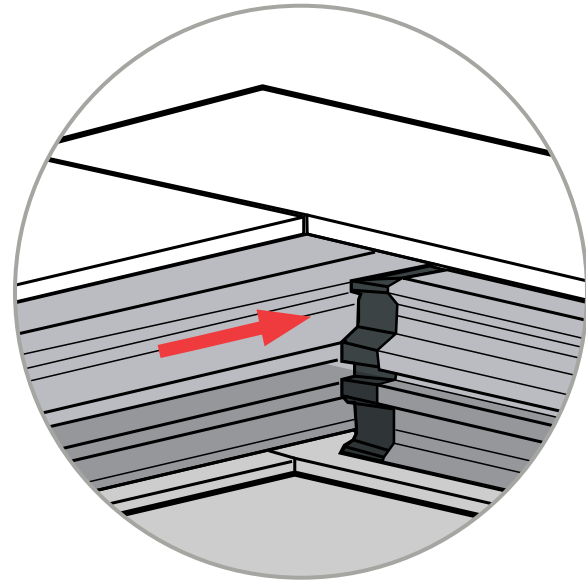

F

Press on the TOP SECTION ONLY until you hear 2 clicks.

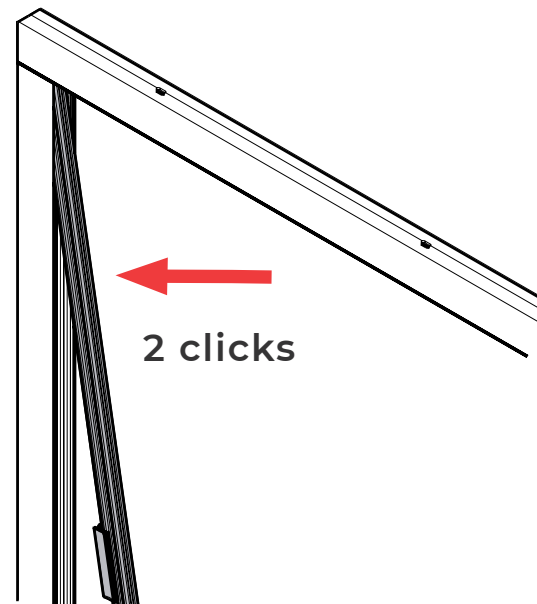


G

Repeat the previous steps on the right side.


H

Slide the bottom horizontal clip (GE02) onto the bottom zip of the screen.

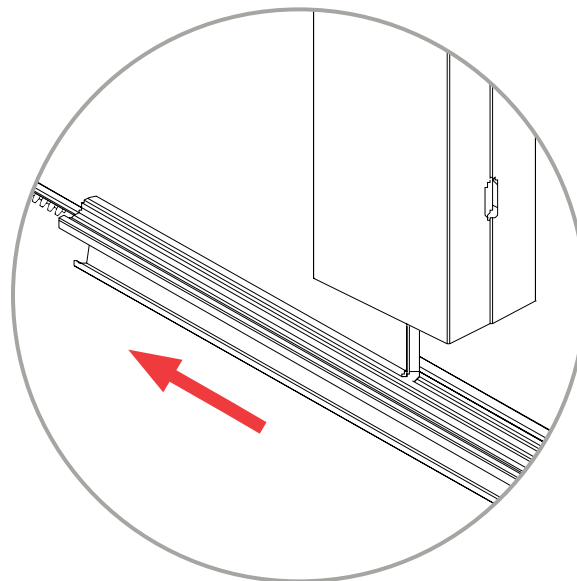


I

Lower and center the side clips.
Press until you hear 2 clicks.

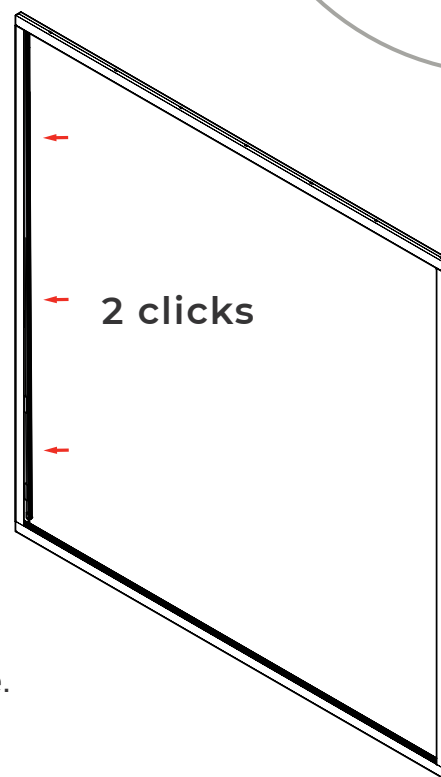

J

Center and insert the bottom clip on the mounting frame.
Press until you hear 2 clicks.

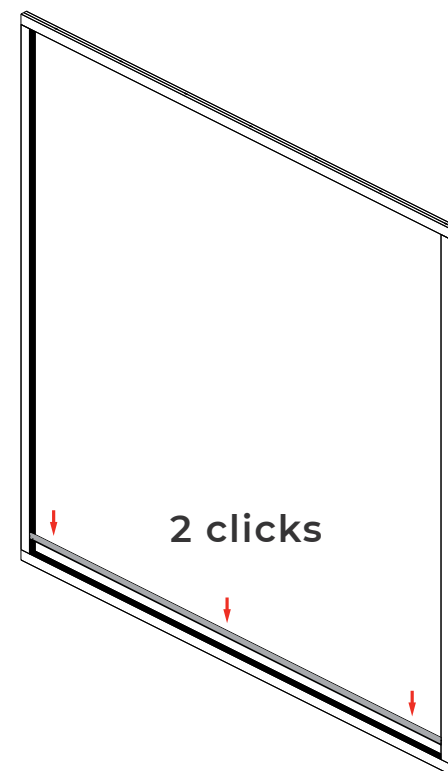

ADJUSTING THE SCREEN

5

A


Push in the clips (GE02) click by click starting at the top left corner, working clockwise.

To increase the tension at the top and bottom, adjust the top bar before the bottom bar.

Continue until the desired tension is achieved. This may require several turns.




PLEASE NOTE THAT TOO MUCH TENSION ON THE FABRIC COULD CAUSE IT TO TEAR.

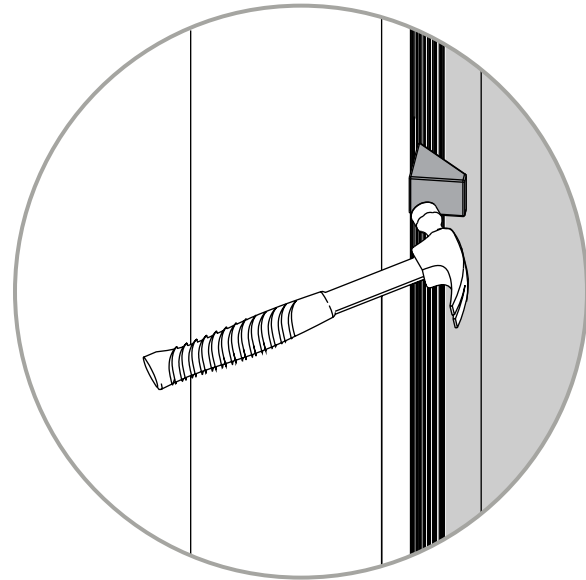


B

Lower and center the side clips using the metal bar.

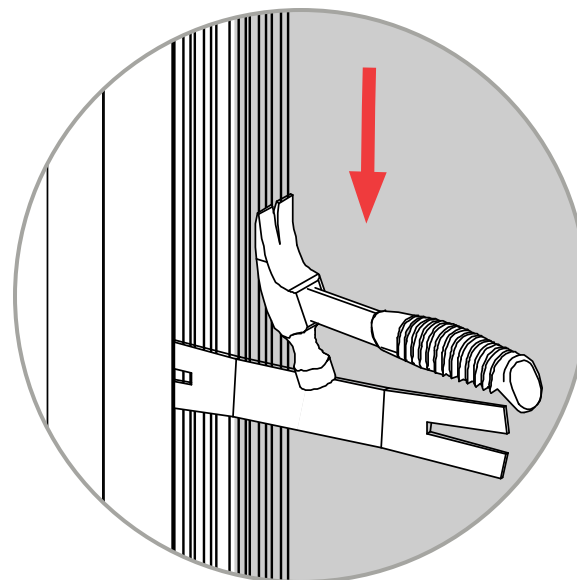

C

Once the desired tension is obtained, lock the screen in place by screwing the 3rd small screws of the horizontal and vertical clips all around the system.

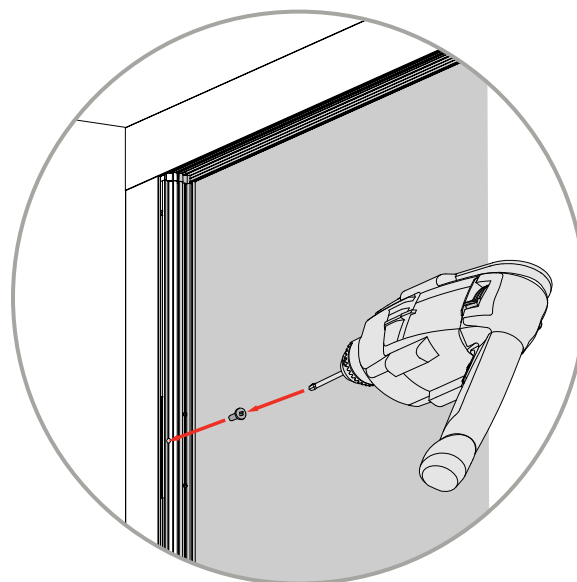

TERRA SUMMER

1-800-515-6652

info@terrasummer.com

terrasummer.com