




Step 1  
Attach Braces to Back Panel

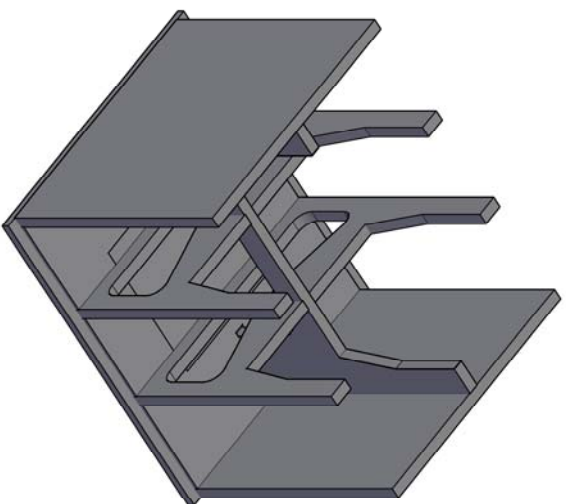


Step 2  
Attach Top and Bottom Panel

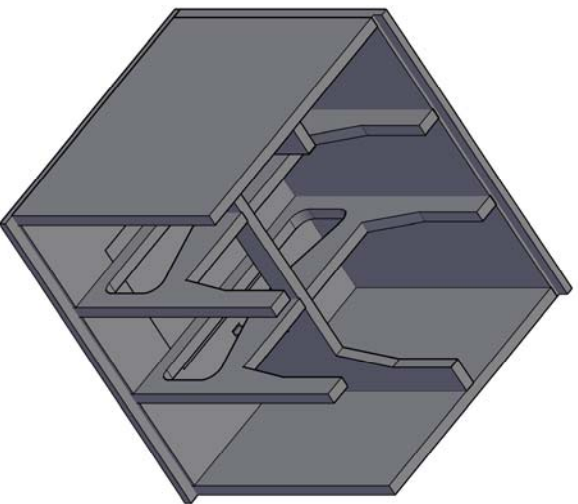


Step 3  
Attach One Side Panel

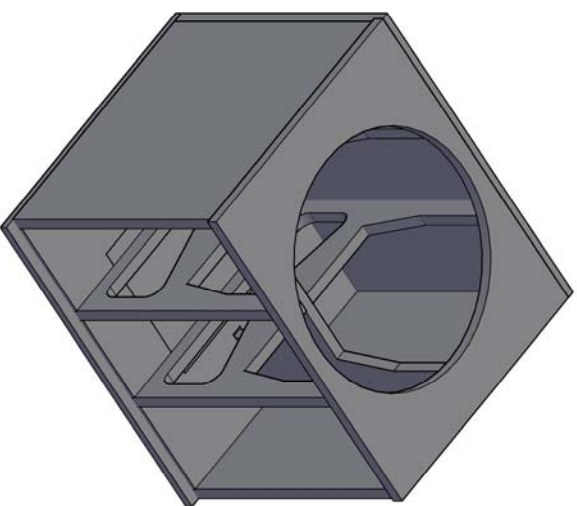

Step 4  
Attach Inner Front Baffle

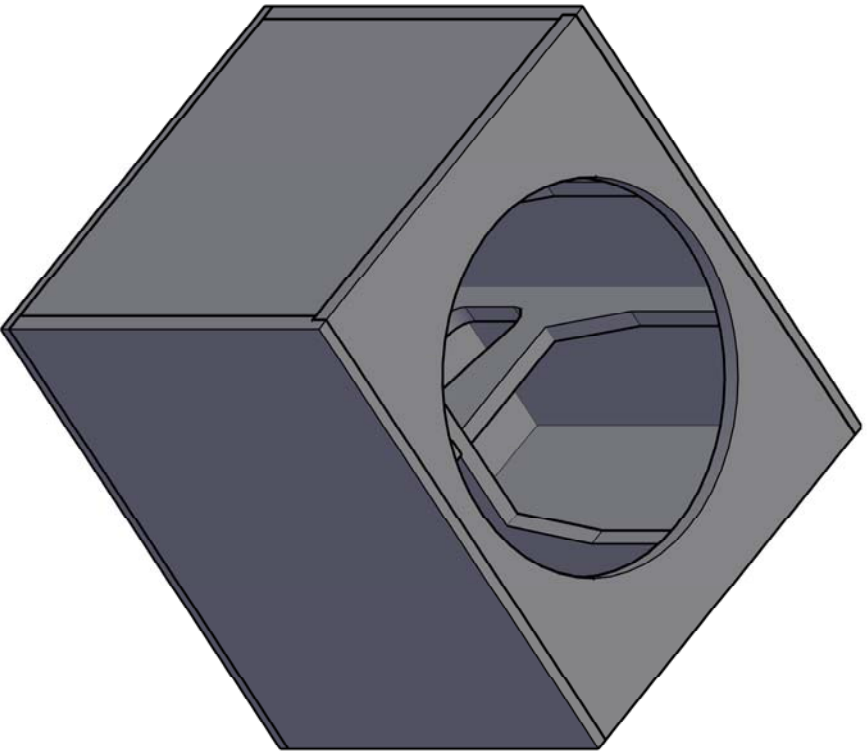

Step 5  
Attach Remaining Side Panel

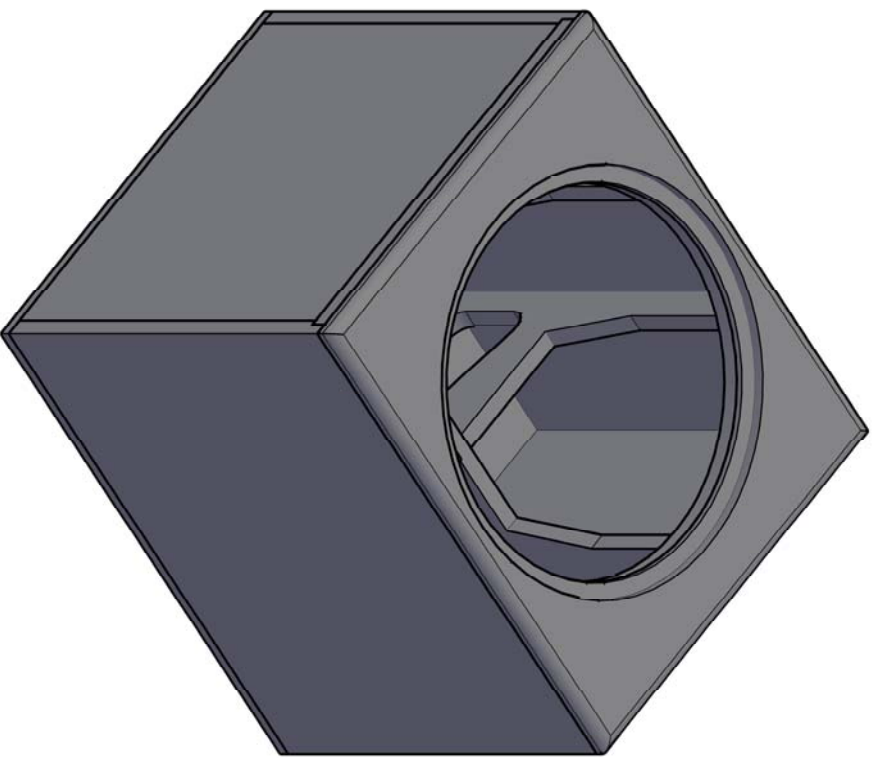

Step 6  
Attach Baffle