




Drill here  
with a 1/4"  
drill bit.



Drill here  
with a 1/4"  
drill bit.

# Place Template On Top of Base

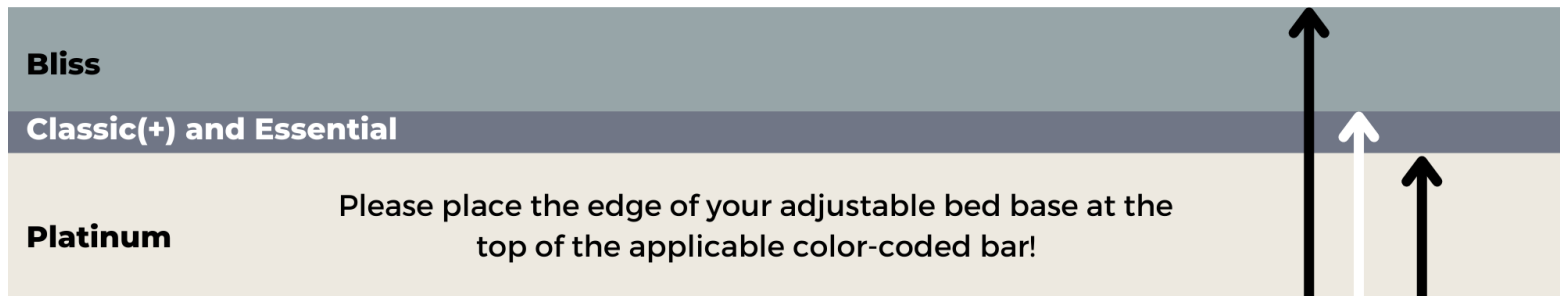

## **Bliss**

From the head of the base, place the dot, closest to the edge 9 inches in. For the foot of the base place the dot closest to the edge 6 inches from the foot of the base.

## **Platinum**

The head holes come predrilled from the top of the base. For the foot of the base place the dot closest to the edge 5 inches from the foot of the base.

## **Classic(+)/Essential**

From the head of the base, place the dot, closest to the edge 11 inches in. For the foot of the base place the dot closest to the edge 6 inches from the foot of the base.

**If you have any questions please call our customer service team at 904-474-9998.**

