



Loosely place an adhesive-lined heat shrink over the braided wire cable.

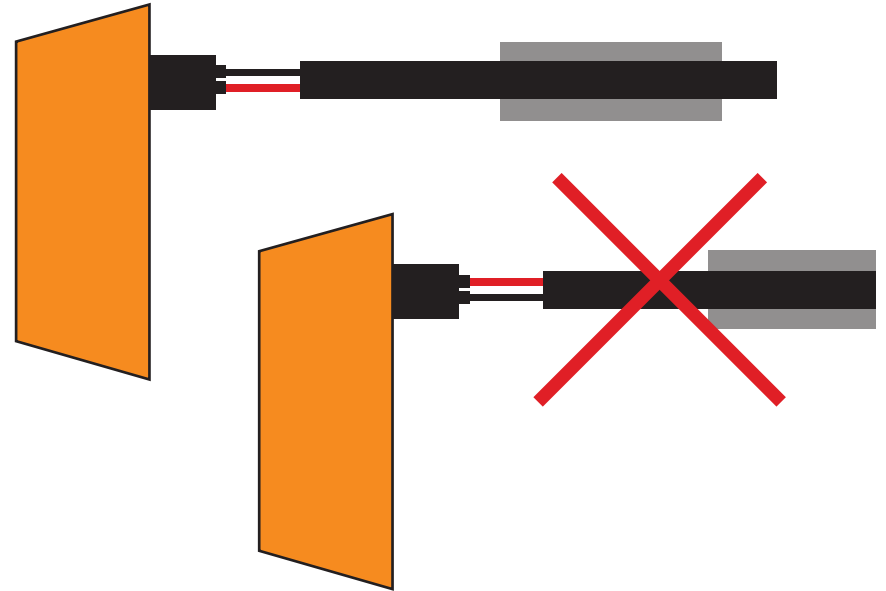

Plug the female wire terminals into the male terminals on the inside of the connector using caution not to bend the male terminals. Red (+) goes on the inside, black (-) towards the edge of the light fixture as pictured.



Move the adhesive-lined heat shrink over the connector so that it mounts completely over the top of the connector.

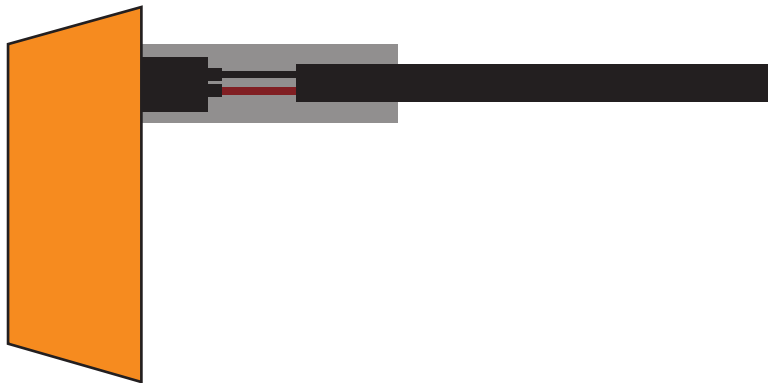

Using a heat gun, shrink the heat shrink over the connector cable, creating a permanent bond between the connector and the cable.

