




"DON'T GET LEFT IN THE DARK"

**PLEASE NOTE: IF YOUR LIGHTS ARE NOT SYNCING WITH THE SAME COLOR ON BOTH SIDES, IT DOES NOT MEAN THE LIGHTS ARE DEFECTIVE. PLEASE PRESS THE BLUE SWITCH TO SELECT THE COLOR OF YOUR CHOICE AND THEN DISCONNECT NEGATIVE BATTERY TERMINAL FOR 20 MINUTES. THIS WILL ALLOW THE CAN BUS SYSTEM TO RESET. THE LIGHTS SHOULD BE SYNCHRONIZED AFTER YOU RECONNECT THE NEGATIVE BATTERY TERMINAL.**

PLEASE CONTACT TECH SUPPORT SHOULD YOU NEED FURTHER ASSISTANCE:  
EMAIL: [TECHSUPPORT@ANZOUSA.COM](mailto:TECHSUPPORT@ANZOUSA.COM) CALL (909) 590-8618

**STEP 1**

AFTER REMOVING BUMPER,  
REMOVE THE OE/FACTORY AIR DUCT COVER TO  
BEGIN INSTALLATION OF YOUR NEW DRL AIR VENT LIGHTS.


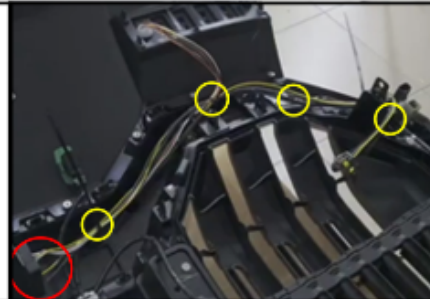


**STEP 2**

ATTACH THE AIR VENT LIGHTS LED DRIVER USING  
DOUBLE-SIDED TAPE AT THE LOCATION ON THE INNER SIDE  
OF BUMPER (CIRCLED IN RED). USE RUBBING ALCOHOL TO  
REMOVE ANY DIRT OR GRIME BEFORE ATTACHING. ROUTE  
AND SECURE DRL AIR VENT LIGHT HARNESS WITH ZIP TIES  
AT THE 4 LOCATIONS CIRCLED IN YELLOW.

**STEP 3**

LOCATE PROVIDED 3-PIN DOUBLE-CONNECTOR HARNESS.  
CONNECT A TO THE HEADLIGHT CONNECTOR  
CONNECT VB TO OE VEHICLE SIDE CONNECTOR

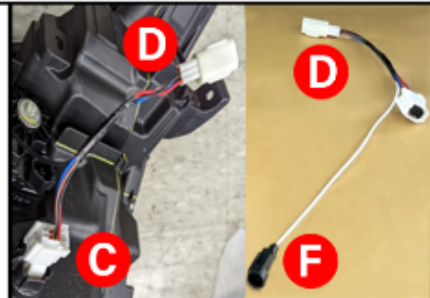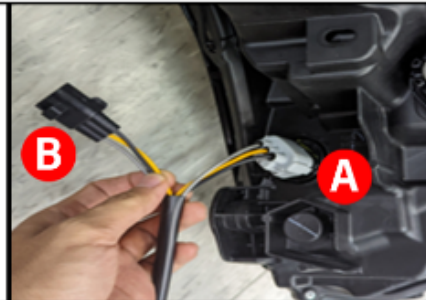

**STEP 4**

LOCATE PROVIDED  
WHITE DOUBLE-CONNECTOR HARNESS AS SHOWN.  
CONNECT C TO HEADLIGHTS CONNECTOR,  
AND D TO OE VEHICLE SIDE CONNECTOR.  
F WILL BE USED IN NEXT STEP.





"DON'T GET LEFT IN THE DARK"

### STEP 5

INSTALL AND FINISH BUMPER INSTALLATION.  
CONNECT THE REST OF THE CONNECTORS FROM THE  
HARNESSES IN STEP 3 AND 4 TO THE CONNECTORS  
OF NEW DRL AIR VENT LIGHT HARNESS.

**E1** DRL AIR VENT LIGHT TO **E2** TURN SIGNAL HARNESS,  
**F1** AIR VENT LIGHT FEMALE CONNECTOR TO **F2** HEADLIGHT  
HARNESS MALE CONNECTOR.

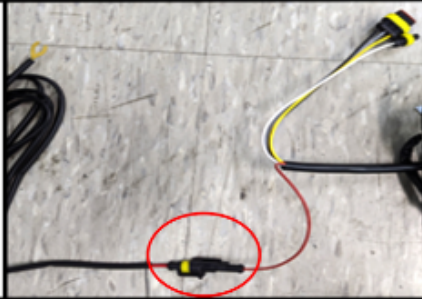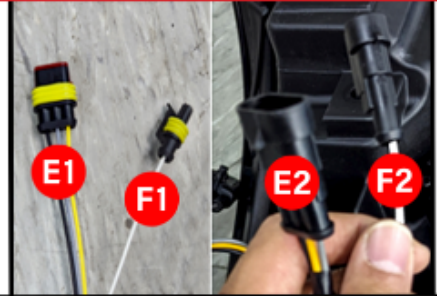

### STEP 6


IF YOU HAVE OUR NEW TUNDRA HEADLIGHTS  
IGNORE STEP 6 AND CONTINUE TO STEP 7.

LOCATE PROVIDED BATTERY FUSE HARNESS AND  
CONNECT FEMALE CONNECTOR TO SINGLE-WIRE MALE  
CONNECTOR OF NEW DRL AIR VENT LIGHT AS SHOWN.  
CONNECT FORK SPADE CONNECTOR  
TO POSITIVE(+) SIDE OF BATTERY.

### STEP 7

IF YOU HAVE 111593X (ANZO TUNDRA HEADLIGHTS)  
LOCATE THE PROVIDED 5-CONNECTOR HARNESS IN THE PACKAGING FOR  
THE HEADLIGHTS AND CONNECT ACCORDING TO BELOW INSTRUCTIONS:

- G1** DRIVER'S SIDE HEADLIGHT
- G2** DRIVER'S SIDE DRL AIR VENT LIGHT
- H1** PASSENGER'S SIDE HEADLIGHT
- H2** PASSENGER'S SIDE DRL AIR VENT LIGHT
- I** POSITIVE (+) SIDE OF BATTERY

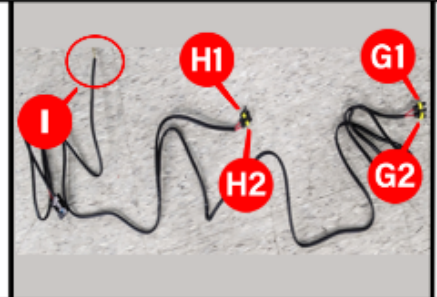


### STEP 8

ROUTE AND SECURE DRL HARNESS  
AT LOCATIONS CIRCLED IN RED  
USING PROVIDED ZIP TIES.

### STEP 9

WIPE THE AREA CIRCLED IN RED OF BUMPER CLEAN USING  
RUBBING ALCOHOL AND USE DOUBLE-SIDED TAPE TO ATTACH THE  
WATER-RESISTANT AMBER/WHITE LIGHT SWITCH OF DRL/PARKING  
LIGHT ONTO IT. REPEAT FOR OPPOSITE SIDES.

BLUE BUTTON POPPED UP: WHITE DRL/PARKING LIGHT MODE  
BLUE BUTTON PRESSED DOWN: AMBER DRL/PARKING LIGHT MODE

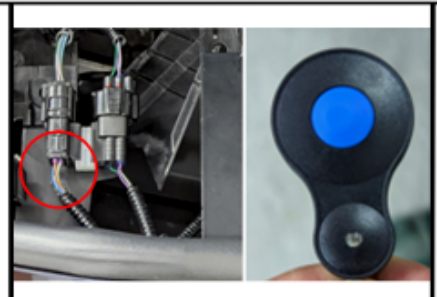

TITLE: **2022-2023 TOYOTA TUNDRA DRL AIR VENT LIGHTS**

PAGE 2 OF 2

PART NUMBER: **511089X**