hand dispenser & stand

260000 SERIES ASSEMBLY INSTRUCTIONS



	NOTE: 1. MODEL VIEWS MAY NOT REPRESENT EXACT MODEL PURCHASED						ALL DIMENSIONS ARE IN INCHES IN UNIT EMR DATE 6/7/20 NOTEO DIFENSIOE BY: BY: DATE 6/7/20 DECIMALS: X = 1.003 XX = 1.005 APR: DATE 6/7/20 APR: DATE 6/7/20 APR: DATE 6/7/20 SP: DATE 5/7/20 SP: DATE 5/7/20	DIVERSIFIED		
							THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC. ASSEMBLY INSTRUCTION THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING	THE HAND DISPENSER & STAND ASSEMBLY INSTRUCTIONS		
						EMR N/A	THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIFIED WOODCRAFTS, INC. ANY DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
		BEDOKA HOM					REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.	NITC	1.05.0	REV A
	REVISION LEVEL						CONSENT IS SUBJECT TO LEGAL ACTION. 260000	NTS	1 OF 9	REV A

K:\AutoCAD\Assembly Instructions\260000.dwg, 11/2/2021 11:29:48 AM, DWG To PDF.pc3



STAND INSTALLATION

STEP 1:

- INSERT THE (4) FLOOR GLIDES INTO THE BASE AND ATTACH WITH THE DOME NUTS.
- INSERT A HEX BOLT INTO THE BASE AND ATTACH TO ONE END OF THE COLUMN.
- PLACE DISPENSER BRACKET ON TOP OF COLUMN AND ATTACH
 USING REMAINING HEX BOLT.
- NOTE: TIGHTEN BOLTS SNUG. DO NOT OVER TIGHTEN!

Parts Included:

Part#	Size (I x w x d)	List Price	
1	BASE	1	EA
2	FLOOR GLIDES	4	EA
3	DOME NUT	4	EA
4	HEX BOLT	2	EA
5	COLUMN	1	EA
6	DISPENSER BRACKET 10.5	1	EA

	<u>NOTE:</u> 1.				ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE BY: BY: BY: DECIMALS: X + 2.00 XXX = 2.00 XXX = 2.00 BY: ANGLES: + 1.00 XXX = 0.00 BY: CABRIET SOLUCENESS = 2.025 BY:	R DATE DWN: 6/7/ DATE APR: DATE APR:	/20	300 South Krueger Street Suring, WI 54174 diversifiedwoodcrafts.com				
					ALL DESIGN RIGHTS RESERVED THE INFORMATION, DATA, DESIGN, AND E IN THIS DOCUMENT AND ALL REPRODUCT THE EXCLUSIVE PROPERTY OF DIVERSIFIED	IONS THEREOF AR WOODCRAFTS, II	NC.	me: HAND DISPENSER & STAND ASSEMBLY INSTRUCTIONS				
						THESE DOCUMENTS ARE SUPPLIED WITH TH THAT THEY WILL NOT BE DISCLOSED TO TH						
		А	CREATED DRAWING	6/7/20	EMR N/A	WRITTEN CONSENT OF DIVERSIFIED WOOD	OCRAFTS, INC. AN		DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
		REV.	DESCRIPTION REVISION LEVEL	DATE	NAME ECN No.	REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.			260000	NTS	2 OF 9	REV A

K:\AutoCAD\Assembly Instructions\260000.dwg, 11/2/2021 11:29:52 AM, DWG To PDF.pc3

STEP 2:

- ATTACH DISPENSER TO STAND WITH BOLTS AND WASHERS TO THE BOTTOM OF BRACKET FIRST(SEE IMAGE 1).
- NOTE: DISPENSER MUST BE MOUNTED ON OPPOSITE SIDE OF POST! DISPENSER NEEDS TO BE CLEAR OF ANY OBJECTS OR
 SURFACES, OTHERWISE DISPENSER WON'T PROPERLY RESET ITSELF!
- FOR ADDED SECURITY, ALTHOUGH NOT REQUIRED, USE THE REMAINING HARDWARE AT THE TOP OF THE DISPENSER AND TOP ROW OF THE SLOTS IN METAL BRACKET (SEE IMAGE 2).

 $\frac{\text{DISPENSER ATTACHMENT:}}{\text{ALLEN HEAD } - \frac{5}{64}}{\text{HEX NUT } - \frac{1}{32}}$





BACKSIDE OF METAL BRACKET SHOWN



IMAGE 2





K:\AutoCAD\Assembly Instructions\260000.dwg, 11/2/2021 11:29:57 AM, DWG To PDF.pc3

STEP 3:

• INSERT KEY INTO LOCK LOCATION LOCATED ON TOP OF HAND DISPENSER TO OPEN LID.






STEP 4:

- REMOVE HAND SANITIZER JUG (NOT SHOWN).
- SLIDE BATTERY COVER TOWARDS YOU TO ACCESS BATTERY LOCATION.



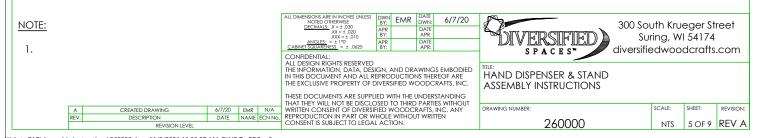

STEP 5:

ADD BATTERIES IN CORRECT LOCATIONS (NOT INCLUDED).





K:\AutoCAD\Assembly Instructions\260000.dwg, 11/2/2021 11:30:12 AM, DWG To PDF.pc3

STEP 6:

- SLIDE BATTERY COVER BACK ON.
- PLACE HAND SANITIZER JUG BACK INTO DISPENSER.





STEP 7:

- TURN DISPENSER ON (SWITCH LOCATED ON SIDE OF DISPENSER).
- CLOSE FRONT LID.



SIDE OF DISPENSER SHOWN

<u>NOTE:</u> 1.					ALL DIMENSIONS ARE ININCHSI UNLESS DWN EMR DATE 6/7/20 NOED ON DEWXISE BY EMR DATE DWN DWN<			300 South Krueger Street Suring, WI 54174 diversifiedwoodcrafts.com						
					ALL DESIGN RIGHTS RESERVED THE INFORMATION, DATA, DESI IN THIS DOCUMENT AND ALL RI THE EXCLUSIVE PROPERTY OF E THESE DOCUMENTS ARE SUPPL	PROI IVERS	DUCTIONS THI SIFIED WOOD	EREOF ARE CRAFTS, INC.	TITLE: HAND DISPENSER & STAND ASSEMBLY INSTRUCTIONS					
	Δ.	CREATED DRAWING	6/7/20	EMR	N/A	THAT THEY WILL NOT BE DISCLO WRITTEN CONSENT OF DIVERSI				DRAWING NUMBER:		SCALE:	SHEET:	REVISION:
	REV.	DESCRIPTION		NAME		REPRODUCTION IN PART OR W CONSENT IS SUBJECT TO LEGAL	HOLE	WITHOUT WR		260000		NTS	8 OF 9	REV A
		REVISION LEVEL						10111		200000		1413	O UF 7	

STEP 8:

• PLACE HAND DISPENSER AND STAND IN DESIRED LOCATION.



COMPLETE UNIT SHOWN

<u>NOTE:</u> 1.					ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE <u>DECIMALS:</u> X = ± .030 XX = ± .020 ANGLES: - XX = 1.010 ANGLES: - XX = 1.010 CABINET SQUARENESS = ± .0625	DWN BY: EMR DATE DWN: APR BY: DATE APR: DATE APR: APR DATE APR: DATE APR:	6/7/20	300 South Kruege Suring, WI 54 diversifiedwoodcre			
				CONFIDENTIAL: ALL DESIGN RIGHTS RESERVED THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOF ARE THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.			TITLE: HAND DISPENSER & STAND ASSEMBLY INSTRUCTIONS				
					THESE DOCUMENTS ARE SUPPL THAT THEY WILL NOT BE DISCLO						
	А	CREATED DRAWING	6/7/20	EMR N/A	WRITTEN CONSENT OF DIVERSI	IED WOODCRAFTS,	NC. ANY	DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
	REV.	DESCRIPTION REVISION LEVEL	DATE N	IAME ECN No.	REPRODUCTION IN PART OR W CONSENT IS SUBJECT TO LEGAI		ΈN	260000	NTS	9 OF 9	REV A