


TABORET

T-1000 & T-1000 LCS ASSEMBLY INSTRUCTIONS

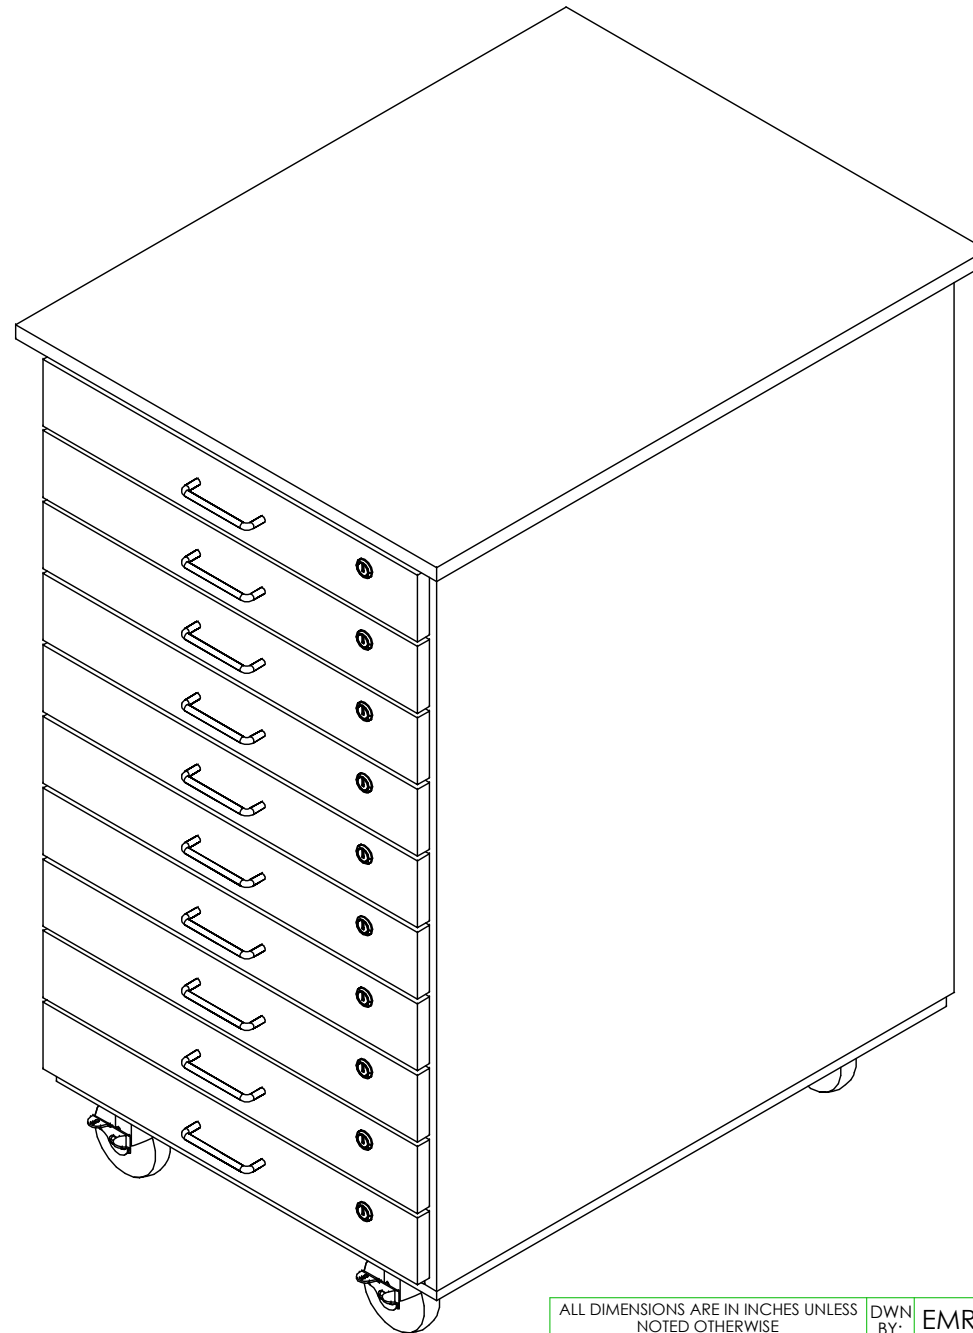

NOTE:

1. MODEL VIEWS MAY NOT REPRESENT EXACT MODEL PURCHASED

ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE DECIMALS: .X = ± .030 .XX = ± .020 .XXX = ± .010 ANGLES: = ± 1° CABINET SQUARENESS = ± .0625	DWN BY:	EMR	DATE DWN:	9/17/14
	APR BY:		DATE APR:	
	APR BY:		DATE APR:	
	APR BY:		DATE APR:	



300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

CONFIDENTIAL:
ALL DESIGN RIGHTS RESERVED.
THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOF ARE THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.

TITLE:
**TABORET
ASSEMBLY INSTRUCTIONS**

THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIFIED WOODCRAFTS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.

DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
T-1000 & T-1000 LCS SERIES	NTS	1 OF 5	REV B

REV.	DESCRIPTION	DATE	NAME	ECN No.
B	UPDATED TO INCLUDE 3/4" APPLIED BOTTOM	10/17/22	RJM	1390
A	CREATED ASSEMBLY INSTRUCTIONS	9/17/14	EMR	N/A
REVISION LEVEL				

TOOLS REQUIRED

****1/2" WRENCH****

****ADJUSTABLE PLIERS****

ASSEMBLY COMPONENTS

ITEMS INCLUDED	PART #	PART DESCRIPTION	QTY
CASTERS	100081	CASTER,4IN SWIVEL TOP PLATE, W/BRAKE	4
CASTER HARDWARE KIT	206509	CASTER,ASSY,HDWRE,16-SCREW,16-NUTS	1
APPLIED BOTTOM	N/A	T-1000LCS APPLIED BOTTOM	1
APPLIED BOTTOM HARDWARE	100597	SCREW,#8X1.5 QUAD ROUND WASHER	10

NOTE:

- **XX**** INDICATES ITEMS THAT ARE ONLY USED FOR MODELS WITH CASTERS (T-1000LCS).

REV.	DESCRIPTION	DATE	NAME	ECN No.
B	UPDATED TO INCLUDE 3/4" APPLIED BOTTOM	10/17/22	RJM	1390
A	CREATED ASSEMBLY INSTRUCTIONS	9/17/14	EMR	N/A
REVISION LEVEL				

ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE DECIMALS: .X = ± .030 .XX = ± .020 .XXX = ± .010 ANGLES: = ± 1° CABINET SQUARENESS = ± .0625	DWN BY: EMR APR BY: APR BY:	DATE DWN: 9/17/14 DATE APR: DATE APR:
---	-----------------------------------	---

CONFIDENTIAL:
ALL DESIGN RIGHTS RESERVED
THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOF ARE THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.


THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIFIED WOODCRAFTS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.



300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

TITLE:
TABORET TOOLS AND ASSEMBLY COMPONENTS

DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
T-1000 & T-1000 LCS SERIES	NTS	2 OF 5	REV B

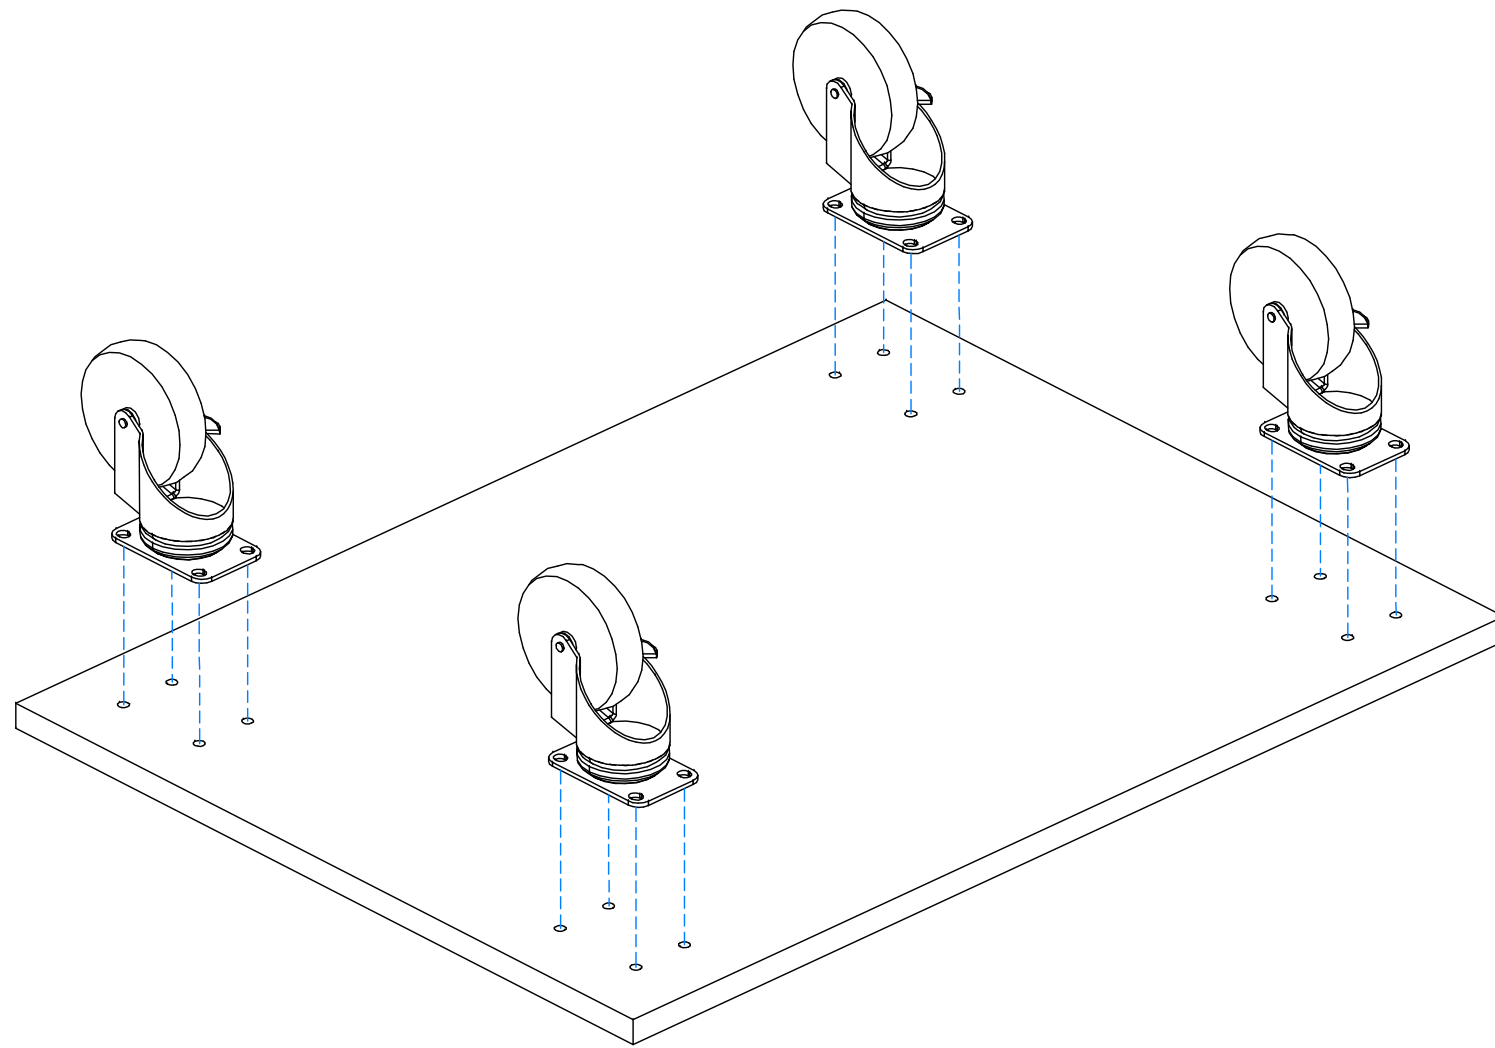

STEP 1:

- IF YOUR UNIT DOES NOT HAVE CASTERS, SKIP TO STEP 3.
- ATTACH CASTERS TO APPLIED BACK USING PROVIDED HARDWARE.

NOTE:


1.


REV.	DESCRIPTION	DATE	NAME	ECN No.
B	UPDATED TO INCLUDE 3/4" APPLIED BOTTOM	10/17/22	RJM	1390
A	CREATED ASSEMBLY INSTRUCTIONS	9/17/14	EMR	N/A
REVISION LEVEL				

ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE DECIMALS: .X = ± .030 .XX = ± .020 .XXX = ± .010 ANGLES: = ± 1° CABINET SQUARENESS = ± .0625	DWN BY: EMR APR BY: APR BY:	DATE DWN: 9/17/14 DATE APR: DATE APR:
---	-----------------------------------	---

CONFIDENTIAL:
ALL DESIGN RIGHTS RESERVED
THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOF ARE THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.

THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIFIED WOODCRAFTS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.

	300 South Krueger Street Suring, WI 54174 diversifiedwoodcrafts.com		
	TITLE: TABORET ASSEMBLY INSTRUCTIONS		
DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
T-1000 & T-1000 LCS SERIES	NTS	3 OF 5	REV B

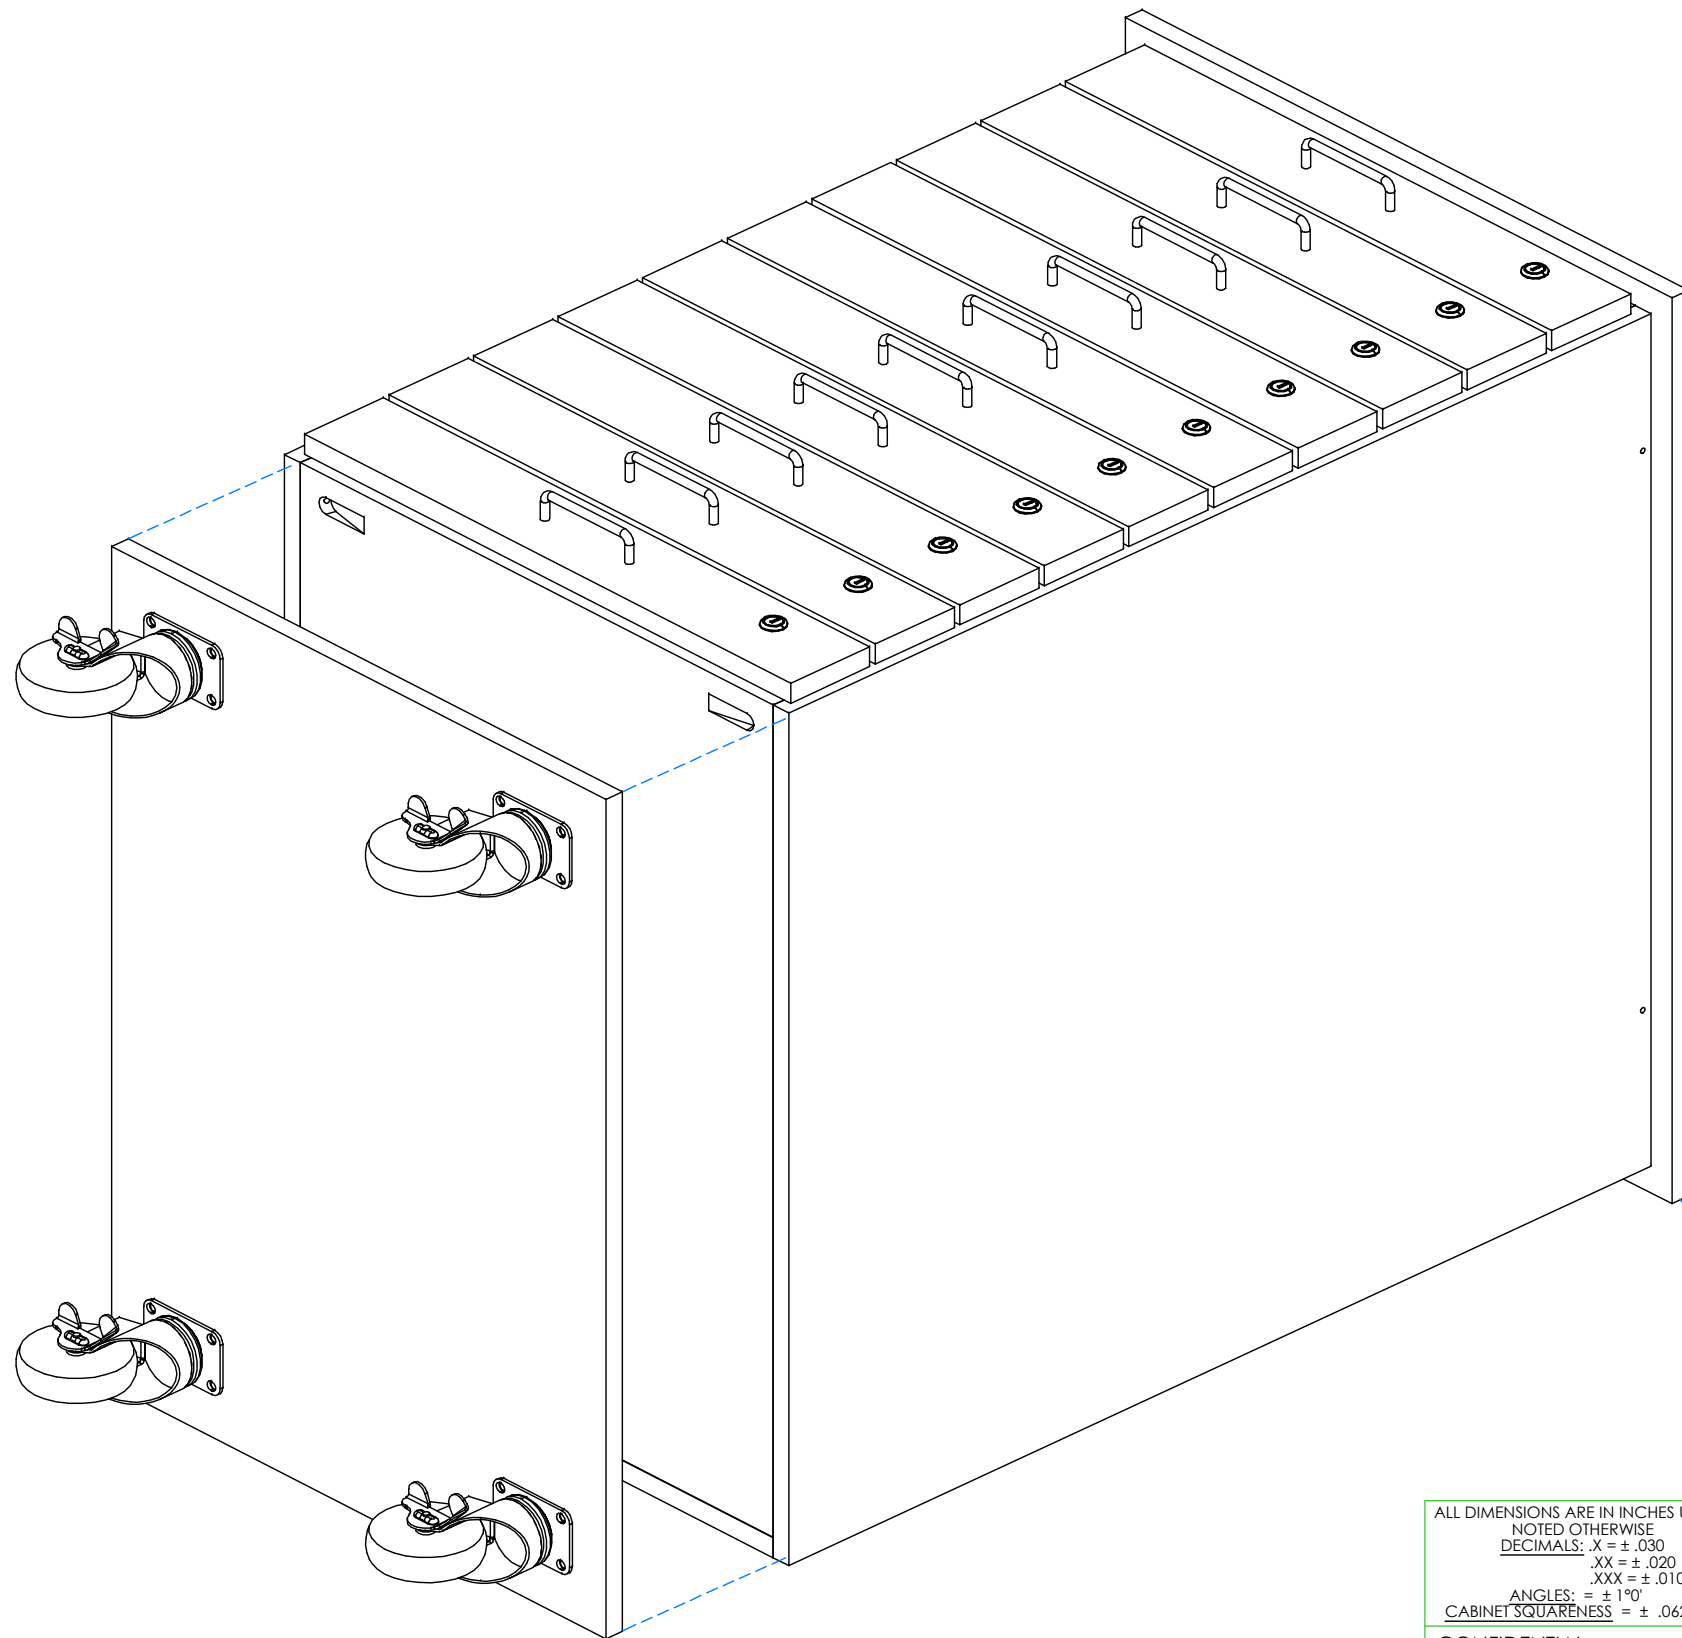

STEP 2:

- LAY CABINET ON ITS BACK.
- ATTACH APPLIED BACK TO BOTTOM OF CABINET WITH PROVIDED HARDWARE SPACING SCREWS EVENLY.

****NOTE****
 BE SURE CABINET IS ON
 A CLEAN SURFACE TO
 PREVENT DAMAGE

NOTE:

1.

ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE	DWN BY:	EMR	DATE DWN:	9/17/14
DECIMALS: .X = ± .030	APR BY:		DATE APR:	
.XX = ± .020	APR BY:		DATE APR:	
.XXX = ± .010	APR BY:		DATE APR:	
ANGLES: = ± 1°				
CABINET SQUARENESS = ± .0625				

CONFIDENTIAL:
 ALL DESIGN RIGHTS RESERVED.
 THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOF ARE THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.

THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIFIED WOODCRAFTS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.




300 South Krueger Street
 Suring, WI 54174
 diversifiedwoodcrafts.com

TITLE:
TABORET ASSEMBLY INSTRUCTIONS

REV.	DESCRIPTION	DATE	NAME	ECN No.
B	UPDATED TO INCLUDE 3/4" APPLIED BOTTOM	10/17/22	RJM	1390
A	CREATED ASSEMBLY INSTRUCTIONS	9/17/14	EMR	N/A

REVISION LEVEL

DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
T-1000 & T-1000 LCS SERIES	NTS	4 OF 5	REV B

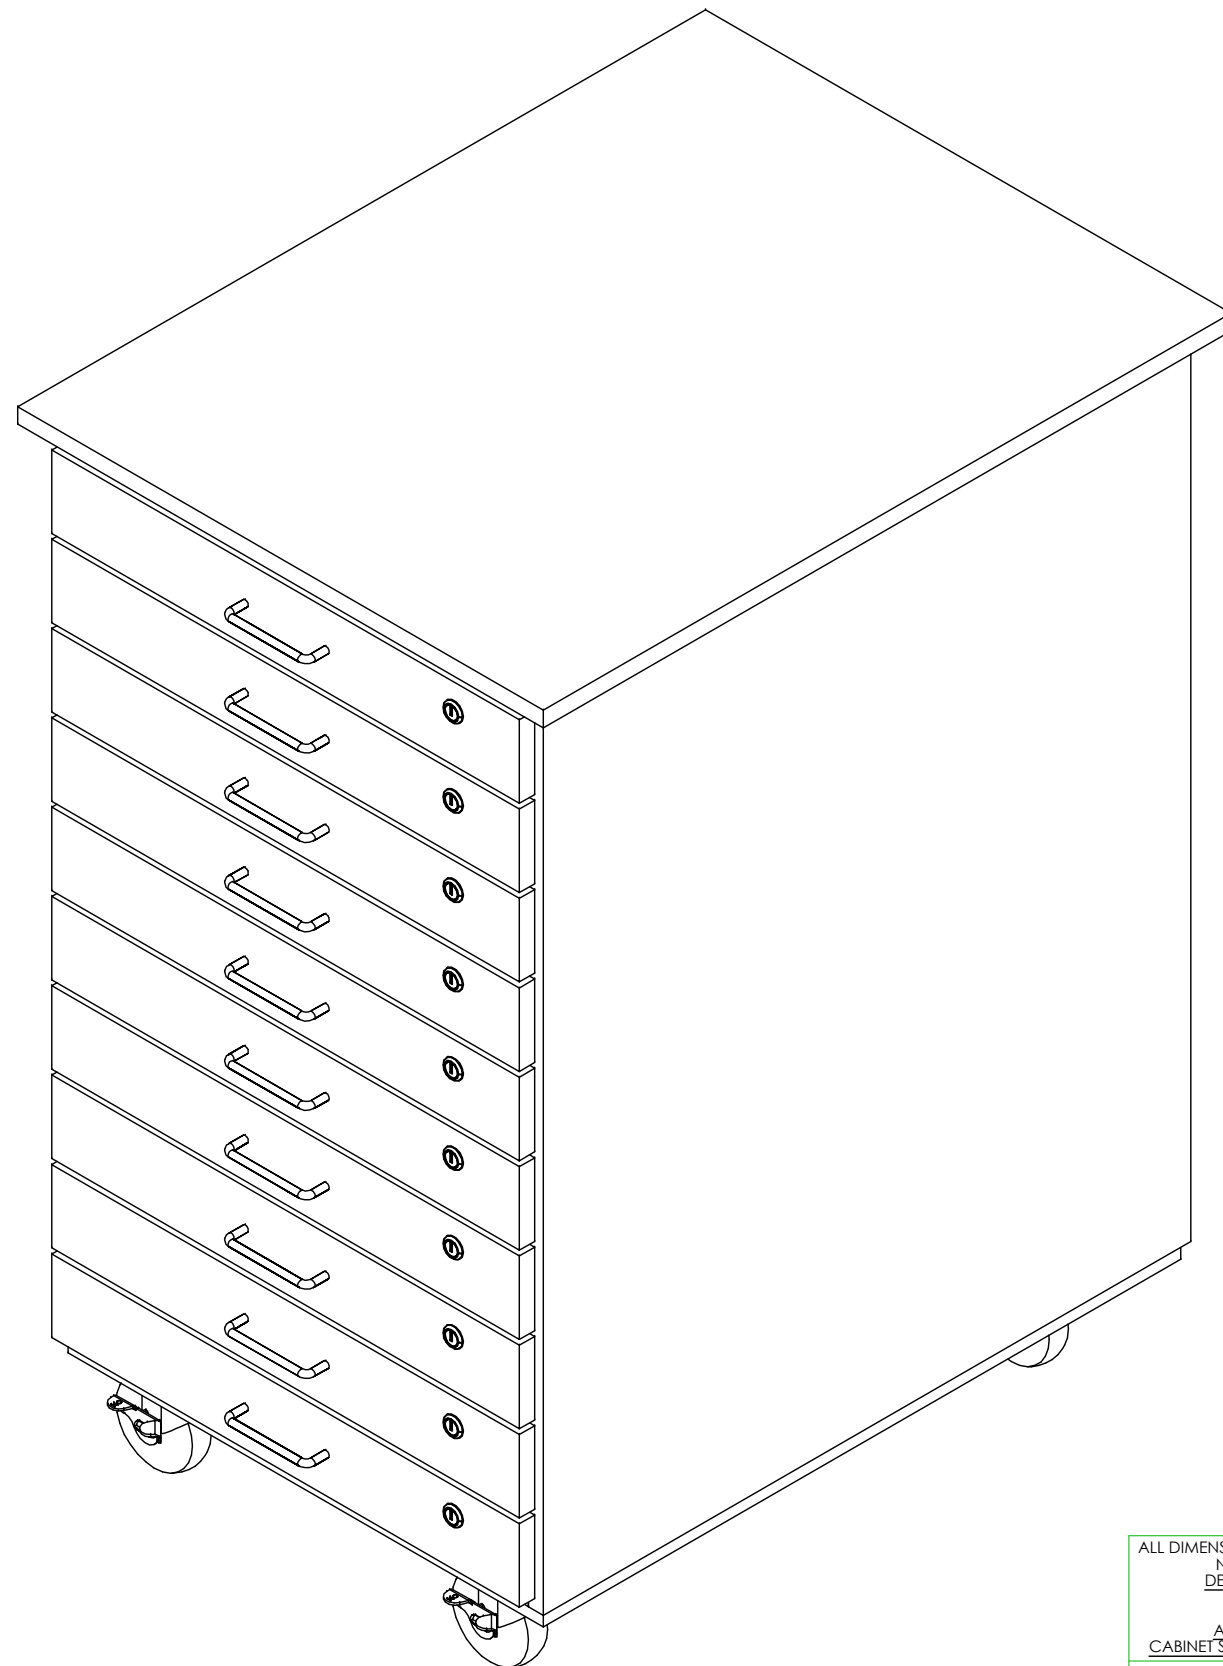

COMPLETE UNIT SHOWN

NOTE:

1.

STEP 3:

- TIP CABINET UP.
- PUT DRAWERS BACK IN PLACE.
- PLACE UNIT IN DESIRED LOCATION.

ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE DECIMALS: .X = ± .030 .XX = ± .020 .XXX = ± .010 ANGLES: = ± 1° CABINET SQUARENESS = ± .0625	DWN BY: EMR APR BY: APR BY:	DATE DWN: 9/17/14 DATE APR: DATE APR:
---	-----------------------------------	---



300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

CONFIDENTIAL:
ALL DESIGN RIGHTS RESERVED
THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOF ARE THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.

TITLE:
TABORET
ASSEMBLY INSTRUCTIONS

THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIFIED WOODCRAFTS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.

DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
T-1000 & T-1000 LCS SERIES	NTS	5 OF 5	REV B

REV.	DESCRIPTION	DATE	NAME	ECN No.
B	UPDATED TO INCLUDE 3/4" APPLIED BOTTOM	10/17/22	RJM	1390
A	CREATED ASSEMBLY INSTRUCTIONS	9/17/14	EMR	N/A
REVISION LEVEL				