



## Wall-mounted Whiteboard Instructions

**Note:** After assembly, remove the protective film from the board with a utility knife.


**Parts List** Note: Hardware provided is for drywall installation. If attaching to other material fasteners are to be furnished by other.



**A** x4



**B** x4



**C** x4





**D** x4

## Tools Required

- Tape Measure
- Chalk Line
- Drill
- 1/4" Drill Bit
- Extended Drive Phillips
- Hammer

- 1** Slide tray into groove on bottom of wall board. Snap two horizontal chalk lines at the heights indicated from the floor. If attaching to drywall drill four 1/4" holes as specified.
- 2** Insert drywall anchors **B** into holes then attach brackets **A** at the bottom with screw **C** making sure the bracket is in the lowest position.
- 3** Attach brackets **A** at the top with screw **C** making sure the bracket is in the highest position. Tighten screw just enough so that the bracket can be tapped down with hammer.
- 4** Place white board on lower brackets making sure to center it with middle lower bracket **A**. Attach bracket to wallboard using screw **D** starting with the middle lower bracket.
- 5** Tap the top brackets down so they are touching the top of the board. Attach bracket to wallboard using screw **D**.

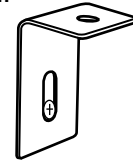

### 35 1/2" x 47 1/4" Board

