



GRAYSON INSTALLATION GUIDE

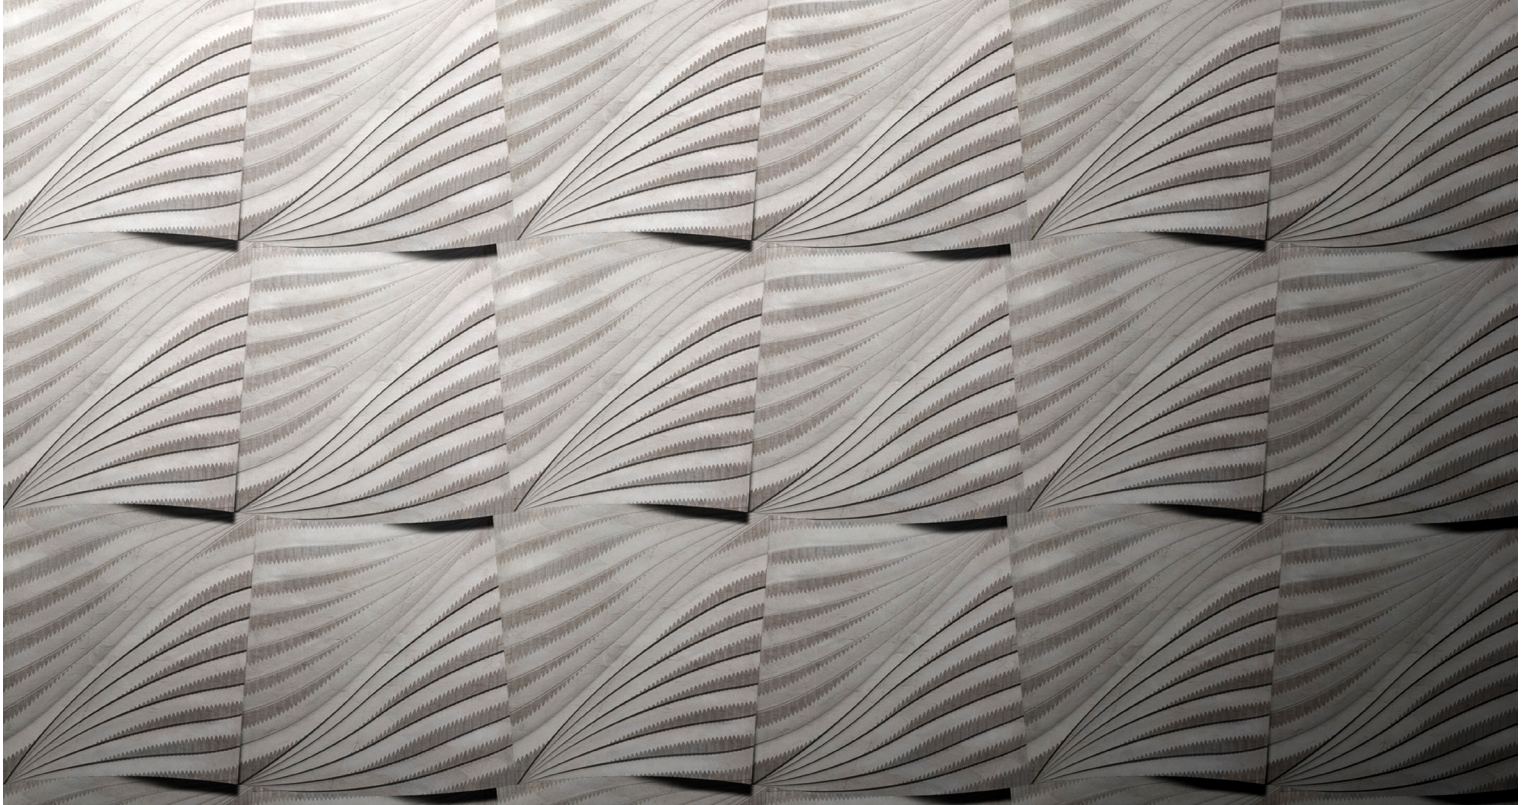


STEP 1

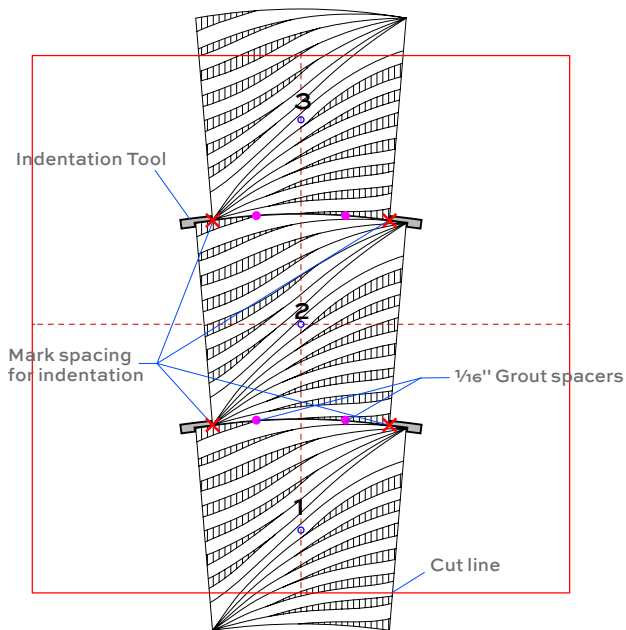

- Dry lay the central vertical row (1, 2, 3) with $\frac{1}{16}$ " grout spacers on floor.
- Use included indentation tool to space each tile evenly.
- MARK spacing with stone-appropriate soft pencil.
- Place marked tiles 2 and 3 aside for later use.

STEP 2

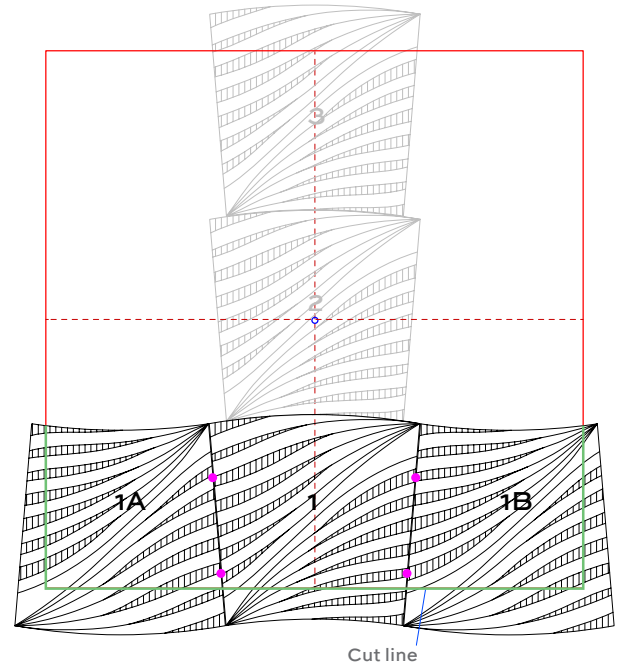


- Rotate tiles to the left and right of tile 1 by 180° .
- Dry lay bottom row (1A, 1, 1B) with edges & corners evenly aligned.
- Add $\frac{1}{16}$ " grout spacers.
- Measure and MARK bottom edge of wall for cutting on 1A, 1, 1B.




GRAYSON INSTALLATION GUIDE

STEP 3

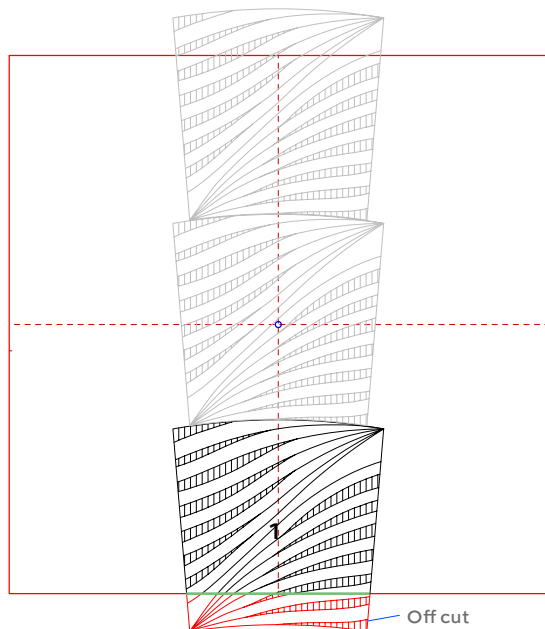


- Cut and install bottom center tile 1.

STEP 4

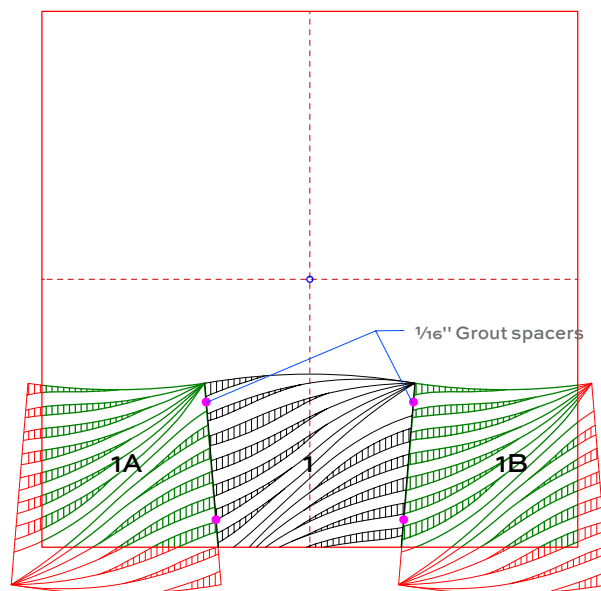

- Cut tiles 1A and 1B and install with $\frac{1}{16}$ " grout spacers.

STEP 5

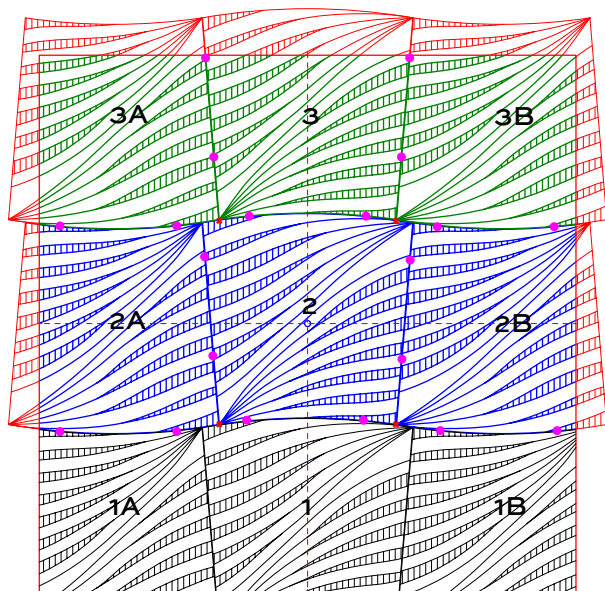

- Install tile 2, lining up original centering marks.
- Repeat steps 2-4 for each horizontal row.

GRAYSON INSTALLATION JIG TOOL

