


RIB Seat Swivel Installation JUMPY / EXPERT / SCUDO G9 DRIVER & PASSENGER

Installation diagram for CBTO17D2

PASSENGER

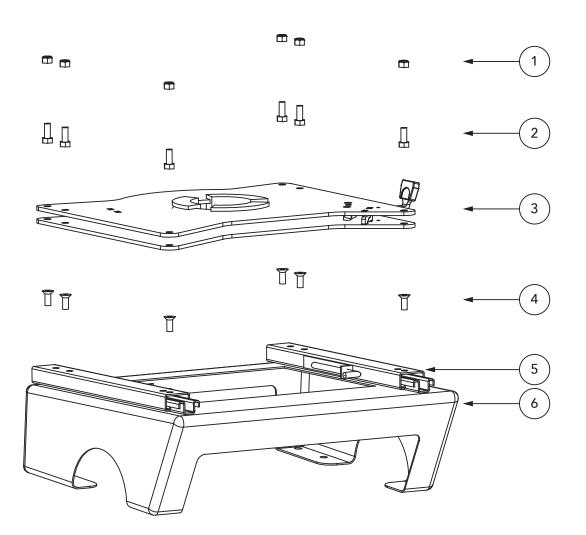

6 Nylstop nuts M8
 6 Threaded bolts M8x20
 Swivel base CBTO17D2
 6 Countersunk hexagon bolts M8x20
 Original G9 sliders
 Original G9 seat base

Installation diagram for CBTO17G2

DRIVER

