


RIB Seat Swivel Installation FORD TRANSIT CUSTOM V362 + ACAFMTC Handbrake adapter - DRIVER & PASSENGER

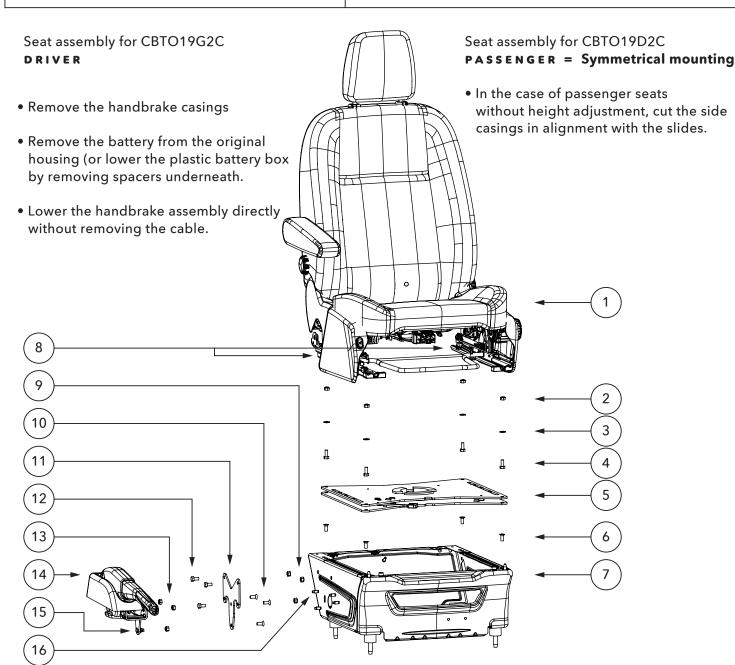

1	Original Seat
2	4 Nylstop nuts M8
3	4 Washers M8x18x1.5
4	4 Threaded bolts M8x20
5	Swivel base CBTO19G2C handle facing forward
6	2 Countersunk hexagon bolts M8x40
7	Original seat box
8	Cut 10mm off the rear of each slider to avoid damaging the door / pillar
9	3 Nylstop nuts M8
10	3 Countersunk hexagon bolts M8x20
11	Handbrake lowering plate ACAFMTC
12	3 Threaded bolts M8x20
13	3 Nylstop nuts M8
14	Original handbrake - plastic casing will need to be removed or cut to a new height
15	Remove the 2 welded screws
16	Remove the bolts

Handbrake cable passes through a 'waved' plate on the floor. Cut the plate to remove it.