

Vivaro / Traffic / Primastar (UK Right hand drive) Driver & Passenger Single Swivel Fitting guide

KIT INCLUDES

- 8 Num: M8 x 20 bolts
- 8 Num: M8 x 20 Countersunk bolts
- 8 Num: M8 Nyloc nuts
- Certificate of safety


INSTALLATION

Tip: Apply loc-tite to each bolt to prevent loosening over time

⚠ Lever is located in centre of van, red handle up.

1. 20mm countersunk bolts & original captive nuts in seat base x 8
2. M8 x 20mm bolts & nyloc nuts x 8
3. Original T5 sliders
4. Seat on the left rotates clockwise,
Seat on the right rotates counter clockwise.

CBT011 RG2 (Driver)
CBT011 RD2 (passenger)

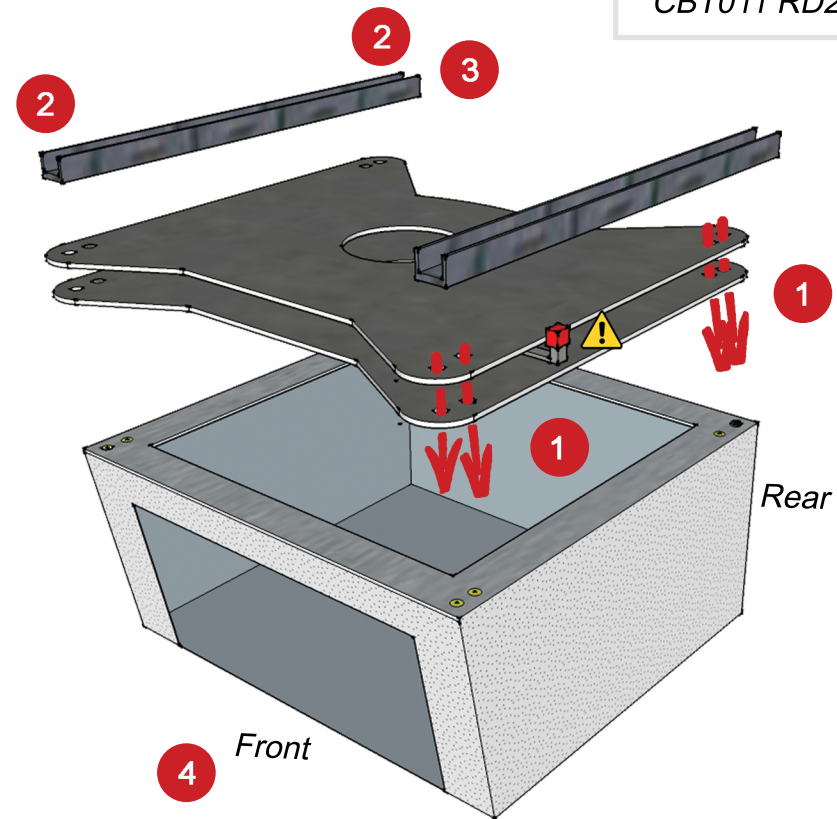

TIPS



- Before fitting:** Swivel may not spin easily, this is because the grease on the mechanism can be quite sticky when new, bolt the swivel to the seat base first and then you will be able to rotate it.
- Plastic trim on the rear of your seat base?** You will need to cut off the top horizontal section to make room for the swivel.
- Height adjustable seats?** Raise seat up to prevent seat trim plastics catching on the swivel during rotation. If you tend to sit with the seat down low you may need to cut off some of the trim to make space for the release lever.
- In use:** do not sit on the seat while rotating. Your seat will rock a little now as it is attached in the centre rather than at all 4 corners, but it should not rattle.
- Safety:** only drive with the seat facing forwards and locked into position.
- Certification:** All RIB swivels have been tested in-vehicle & approved by TUV.