




Jimny Frames Fitment Instructions

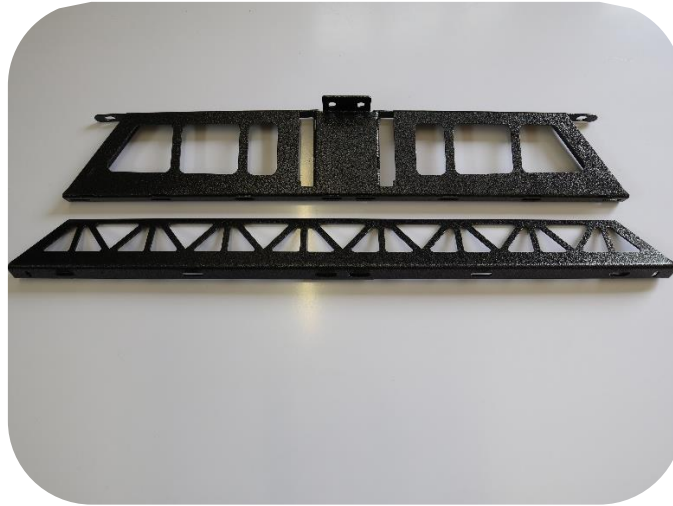

Installation Time: 30 min



Congratulations & welcome to the Bushtech family.

We are so excited to have you on board and we want to give you peace of mind that, we, here at **Bushtech**, had you in mind throughout our entire assemble process to ensure you received nothing less than the **Bushtech** standard.

This Fitment manual will guide you Step by Step through our DIY processes on our Slide Mounting frames.

Let's get started.

What's in the box:



- 1 x Front Mounting Frame
- 1 x Rear Mounting frame
- 2 x Allen Cap Bolts
- 2 x Washers

Tools you need:



- 1 x #4 Allen Key
- 1 x Ratchet
- 1 x Ratchet Extension
- 1 x Size 14 Socket
- 1 x #14 Spanner
- 1 x Box Knife


Step 1:

Situated on each side of the foot well wall of your back passenger seat are two plastic nut covers. Remove both covers to reveal a factory mounted nut that will be utilized to fasten the front mounting frame.



Step 2:

Place the front frame as displayed in the image below.

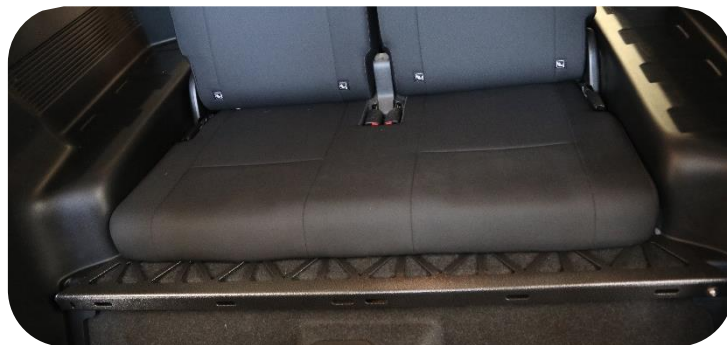

Step 3:

With the two bolts supplied. Secure the front mounting frame in place using the two factory nuts on either end of the car.



Step 4:

Before moving into the boot. Remove the seat cushions of your back passenger seats. To do this pull up on the seat where the front mounting frame rests to unclip the cushion. Now slide it towards the front of the car to remove the cushion.



Step 5:

Loosen the seat bracket bolts under the seat cushion you just removed. (Do **Not** remove the bolts, Just loosen them.)



Step 6:

Let us move into the boot.

Open the boot door and remove the black plastic box and carpeted board on top of the jack and spanner.



Note: You will not be able to utilize the black plastic box once you have installed our mounting frames. Best put this in a safe place if needed in the future.

Step 7:

Remove the plastic covers on the seat mounting brackets. These are clip in plastics which will require you to pull up on one end of the plastic until it pops out and then slide the covers out.

Plastic Cover



Pro Tip: The center plastic cover is also a clip on. Slide your fingers under the cover and pull up until the bottom and top of the cover unclips.

Step 8:


Remove all four bolts holding the back seat brackets.



Step 9:

Before proceeding any further, you will need to cut the board that is placed on top of your jack and spanner.


With the use of a box knife shorten the board to accommodate the mounting frame, Use the line in the image below as a reference to cut the board. **(DO NOT Trim the carpet! Only the board.)**

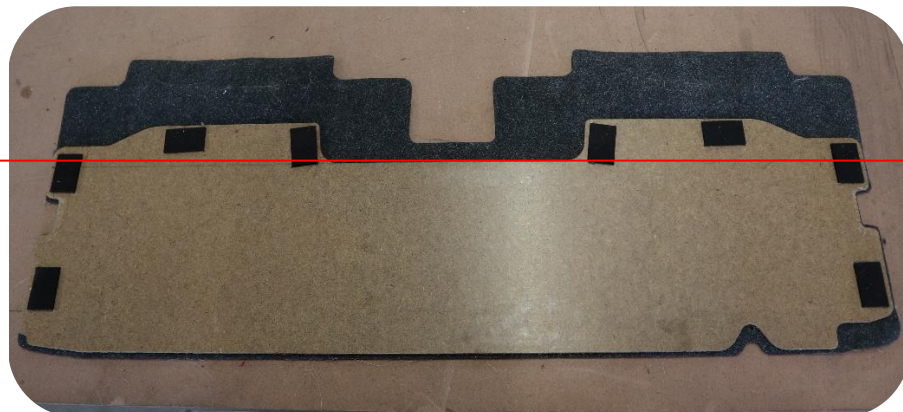

Step 10:

Once you have trimmed the board, place it back into place on top of your jack and spanner.

Now slide the mounting frame under the back seat brackets ensuring all the holes line up with the factory holes in the floor.

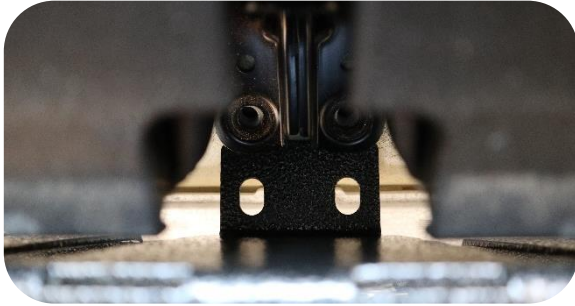

Pro Tip: Tilt the bracket towards the front of the car, then lift the seats and slide the centre of the bracket into place before focusing on the side brackets.

Step 11:

Apply some downwards pressure on to the mounting bracket while hand tightening all four bolts back in.

Once you have hand fitted all four bolts to ensure no cross threading has occurred, Secure the seat and mounting frame into place with the use of a ratchet and spanner.



Step 12:

Great work!

Now all we need to do is climb back into the back of the car and tighten those bolts we loosened on the brackets under the cushion.



Step 13:

Slide the cushion back in and press down on each corner to clip the cushion in place. (Remember to lift your seat belt clips up while you slide your cushion in.)



Step 14:

Now you are ready to install the Bushtech Jimmy Slides onto your mounting frames. You can also use these frames to secure a false floor or other slider should you wish to do so.

