



LEGENDEX ROGUE M.O.L.L.E

PRODUCT CODE: MR-SETJNY-FT

Suzuki Jimny Folding Table



CHECK YOUR PACK LIST

Once you have unpacked the system from the box make sure you have all parts that are listed on the packing list below.

PRODUCT CODE: MR-SETJNY-FT

COMPONENTS

1 x ASSEMBLED FOLDING TABLE

10 X M6X30mm ALAN KEY HEAD BOLTS

10 X M6 NUTSERTS

2 X 700mm PARACORD - LEGENDEX RED

1 X FOAM STRIP

1 X PARACORD CLEAT (SLIDER)

TOOLS REQUIRED

- 9mm Drill bit
- Hex4 Allen Key
- Screwdriver- Flat
- Nutsert's gun



IMPORTANT

- Wear protective clothing including eye wear.
 - Clean Hands work best.
 - Disconnect the Battery to ensure you don't earth out. Or Use an Auto-electrician.
-

INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-SETJNY-FT

STEP 1

Start with double checking you all the correct nut & bolt, and all the components

STEP 2

Next remove the plastic backing board – use the flat head crew driver to pop it off- Put aside just in case you need it later



STEP 3

Double check the Table holes line up with the Jimny holes

If you like it can be easier to mount the table, if you separate the backing board from the drop table and the blade



STEP 4

With the 9mm drill bit drill out all the holes, which are 8mm so it will be easy. After that apply an anti-rust spray to the fresh drill holes, (could use paint)



INSTALLING YOUR NEW ROGUE M.O.L.L.E


PRODUCT CODE: MR-SETJNY-FT

STEP 5

Now bolt up the table- start at the edges and only do up finger tight, this will allow play, so all the bolts can be fitted

STEP 6

Fit supplied foam strip to the back of the backing board

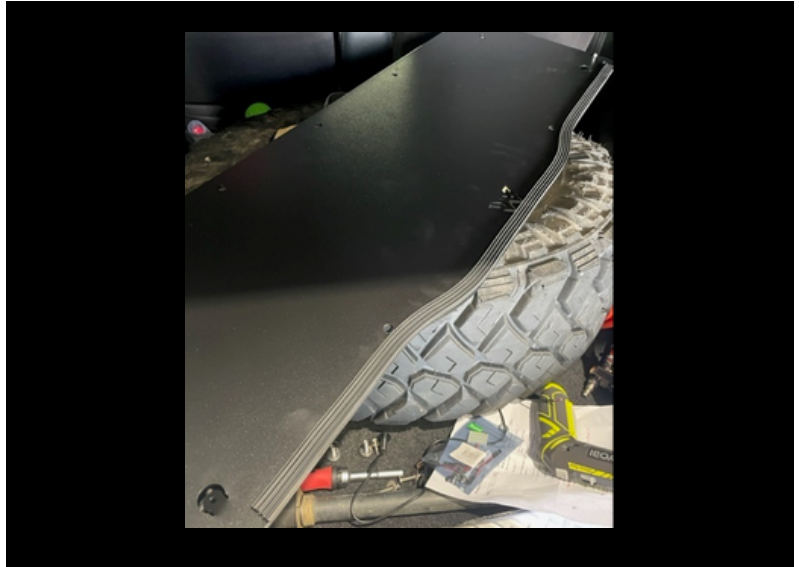


STEP 7

Step back and check you are happy with the alignment and all the holes are correct before setting up the rope ties

STEP 8

On the LH Side thread one end of the red paracord through the hole top of the backing board and knot closely to the end of paracord.

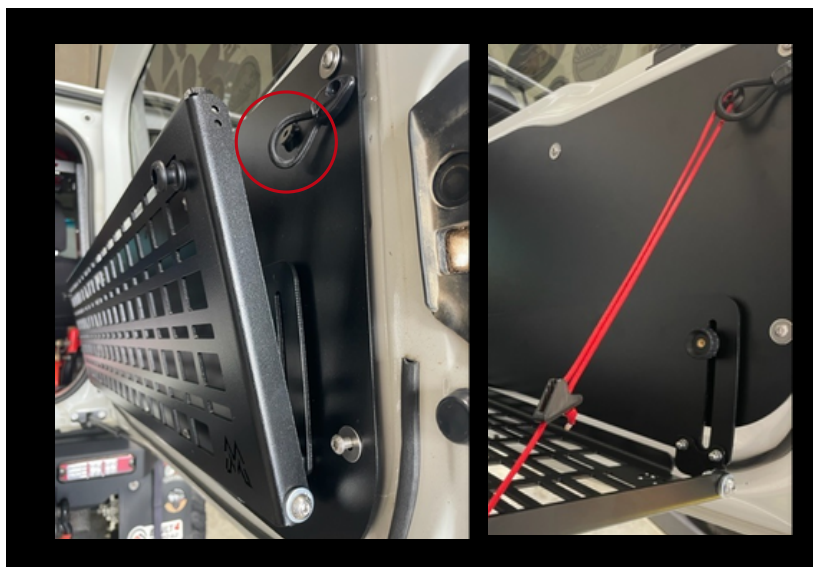


INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-SETJNY-FT

STEP 9

On the opposite end thread through the front of the MOLLE panel. (Thread from the outside and Knot at your desired length and cut off excess) (Carefully sear rope end to prevent fraying)

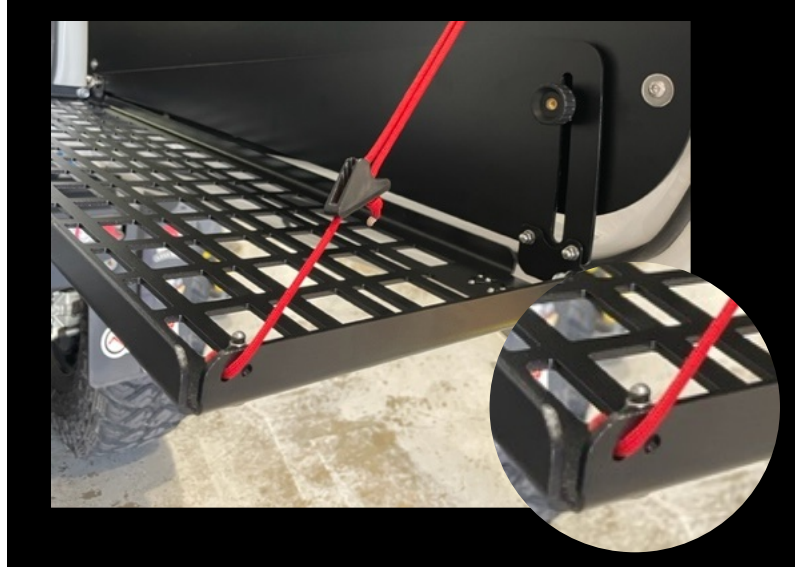


STEP 10

On the RH Side thread one end of the red paracord through the hole on the front of the MOLLE panel First. (Thread from the outside and knot on the inside)

Thread the Para cord through the Paracord cleat (front hole only)

Then Trim to desired length making sure the table is at the lowest height position first.

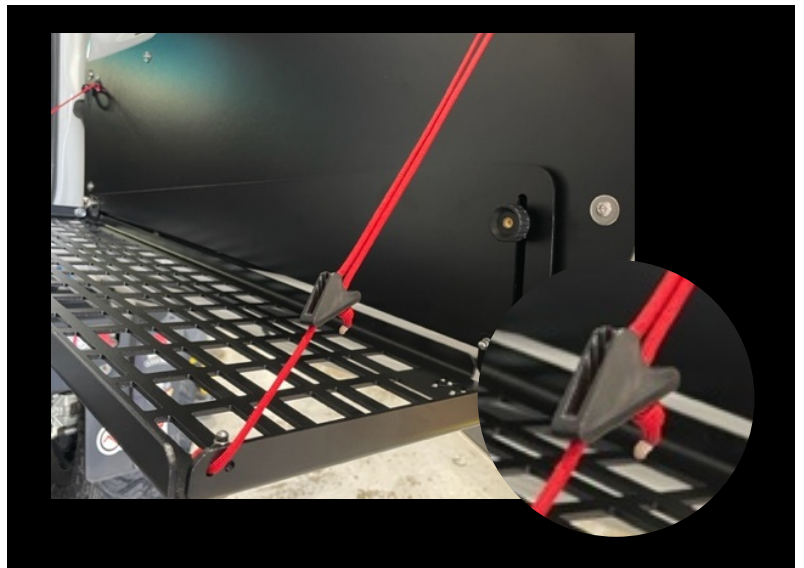

FINAL STEPS ONCE M.O.L.L.E. IS MOUNTED

- Double check all nuts and bolts are tight.
- RE-connect your battery.
- You may now start the vehicle and run at idle for a couple of minutes and listen for any vibration / rattle noises.
- Also, re-check tightness of the bolts after 20-50km

