



# Wildog Accessories

## *INSTALLATION INSTRUCTION*

### **PRODUCT DESCRIPTION:**

- Suzuki Jimny rear bumper



### PRODUCT SAFETY & LEGAL DISCLAIMER

**• IMPORTANT READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING. FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY.**

- Review the product package and contents prior to beginning the installation.

**Take care when opening the packaging and removing items. If a return is needed you will want to return the product in its original packaging if possible.**

- This instruction guide is provided as a GENERAL installation guide, some vehicles vary dimensionally and may require additional steps.
- Test fit the product on the vehicle prior to any third party modifications and or finishing. The manufacturer and/or distributors do not accept responsibility for third party charges, labor and or third part replacement modifications. Some modifications may void the factory warranty.
- Exercise due-diligence when installing this product. The manufacturer and distributors of this product do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product. Careless installation and operation can result in serious injury or equipment damage.
- This product is for general off-road use. All liability for installation and use rests with the owner/operator.




# Wildog Accessories

## INSTALLATION INSTRUCTION

### PARTS INCLUDED IN THE LIST:

A	Complete & assembled rear bumper	1
B	Resistors	2
C	Tightening bracket	2
D	M12 x 40 x 1.75 Hex Bolts	2
E	M12 x 120 x 1.75 Hex Bolts	2
F	M12 Nyloc Nuts	2
G	M12 x 30 Washers	8
H	Sets of light connectors	2

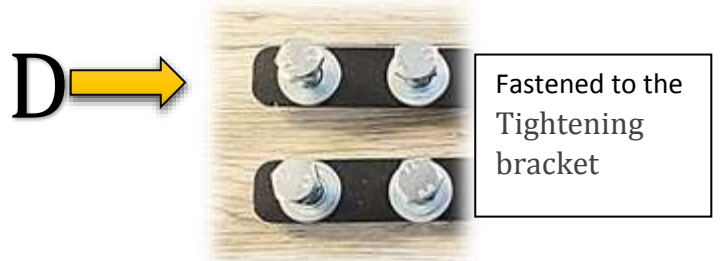



# Wildog Accessories

## *INSTALLATION INSTRUCTION*

**Please insure that all parts and fasteners are accounted for before starting the fitment , if any parts are not included please give us a call on [065 100 62525](tel:06510062525) or [074 227 1524](tel:0742271524) and we will gladly assist you .**

ESTIMATED TIME FOR INSTALLATION:

2-3 hours

*Please follow the necessary steps to complete your fitment.*

**BEFORE**



**AFTER**



### **STEP 1**

Remove the following from the vehicle:

- Plastic bumper
- All Wiring and harnesses for the standard bumper.








# Wildog Accessories

## *INSTALLATION INSTRUCTION*

### STEP 2

- Remove the standard rear tow bar from the vehicles standard chassis mounts.

### Before

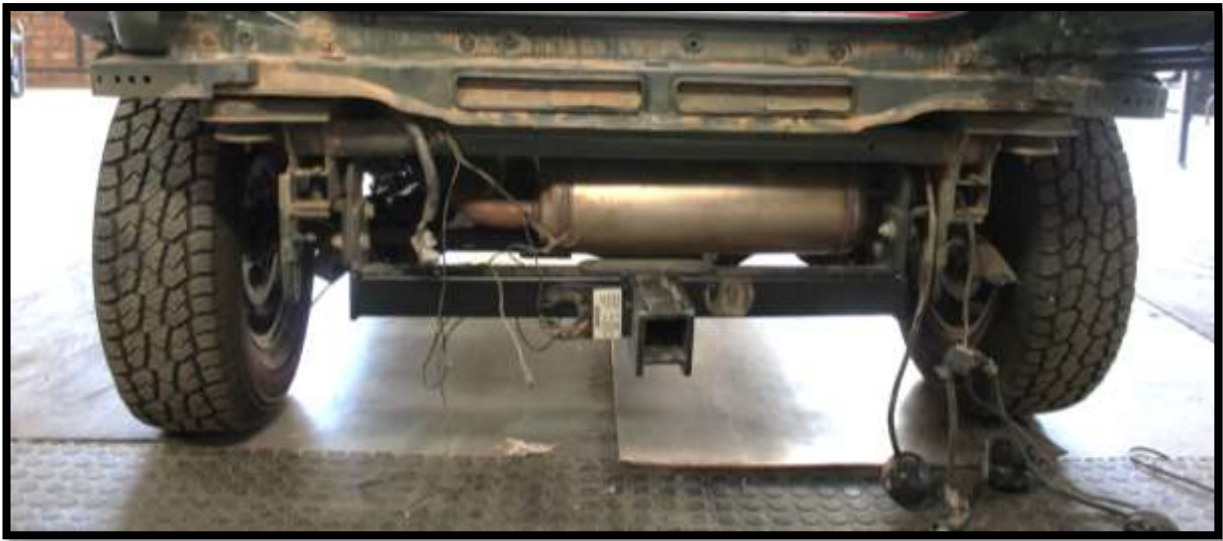

### After





# Wildog Accessories

## *INSTALLATION INSTRUCTION*

### STEP 3

- Remove the standard bumper bracket.



- Remove the parts indicated on both sides of the vehicle
- When removing the bumper brackets as shown above, Tape off all edges with masking tape.
- Spray the area marked with black spray paint.






# Wildog Accessories

## INSTALLATION INSTRUCTION

### STEP 4

- On the standard chassis mount remove the standard tightening bracket.
- Replace the standard bracket with the supplied brackets.

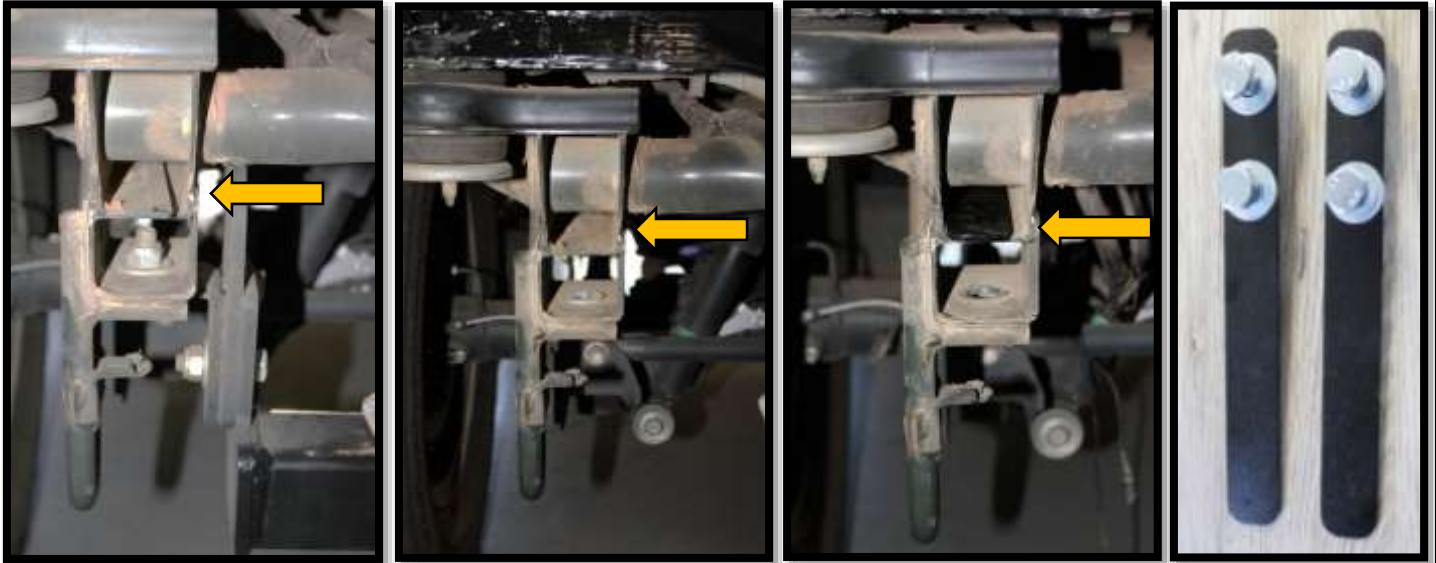

### STEP 5

- Torque the chassis mount fasteners to (95 NM).
- Spray and mark each fastener afterwards.
- Ensure that the bumper is not pinching the lights or the fenders when fastening all bolts.
- Use the M12 x 40 x 1.75 Hex Bolts and the M12 x 120 x 1.75 Hex Bolts to fasten the bumper to the chassis and the tightening brackets.







# Wildog Accessories

## INSTALLATION INSTRUCTION


### Rear bumper wiring

#### STEP 1


- Cut the light plug cables as close as possible to the standard lights.



- Connect the harness cables to the Resistor supplied.

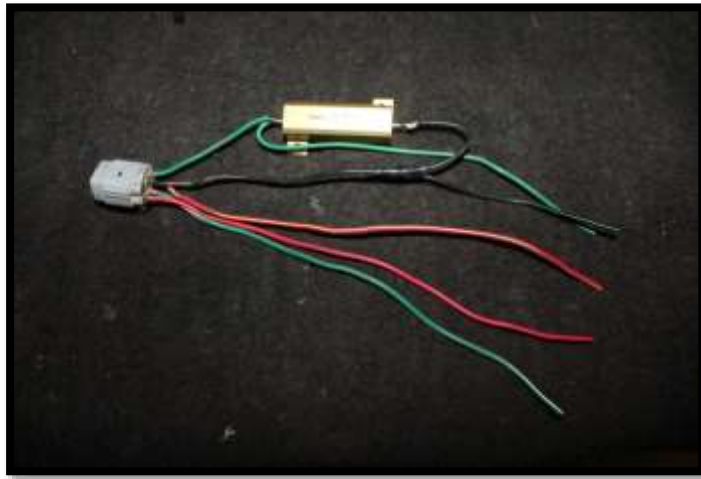

- Connect the rear bumper lights cables to your harness cables.

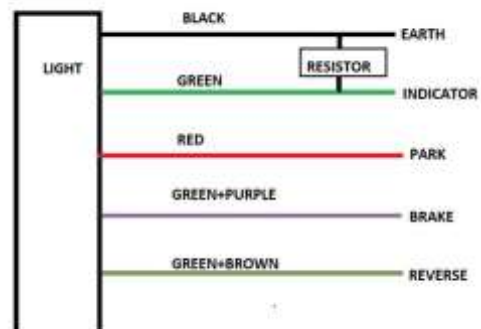



# Wildog Accessories

## *INSTALLATION INSTRUCTION*


- Solder the loose ends where the two cables come together.



- Heat shrink the soldered cables to ensure that there are no open wires.



- Cover and tidy all open wires and loose parts.
- Sika Flex the Rear Resistor to the Resistor Bracket.
- Connect the Rear lights to the harness.

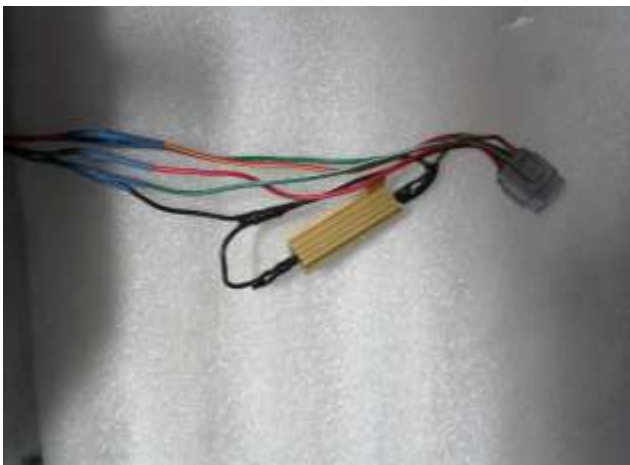

- For the number plate lights do not cut any wires, Only peel back to small pieces of wire coating , Attach the female and male lugs to the harness , cover and tidy all open wires and loose parts.
- Do not remove the original light fitting.
- Please ensure that all parts and fasteners are fitted and tightened before letting the vehicle leave your premises.
- Retention all fasteners after 3 months or 500KM of installation to ensure all parts are still fastened and safe for the client.

**Here is too many safe adventures.**





# Wildog Accessories

## INSTALLATION INSTRUCTION

A Warranty form is included with all Wildog Accessories orders placed, please insure that it is completed with every fitment and retention of the bumper if there is no Warranty form completed your 1 year Warranty on the bumper will be voided.



**Wildog Accessories (Pty) Ltd**

www.wildog.co.za  
 sales@wildog.co.za  
 17 Akwamaryn Street  
 Klerksoord Pretoria

Contact numbers:  
 0651006252  
 0742271524

Jobcard

Fitment Centre Reference:

Date:

### INSTALLATION AND WARRANTY FORM

#### CUSTOMER DETAIL

Customer Name \_\_\_\_\_  
 Address \_\_\_\_\_  
 Telephone No \_\_\_\_\_ Cell Number \_\_\_\_\_ Postal Code \_\_\_\_\_  
 E Mail Address \_\_\_\_\_

#### DISTRIBUTOR / FITMENT CENTRE DETAIL

Company Name \_\_\_\_\_  
 Address \_\_\_\_\_ Contact Person \_\_\_\_\_  
 Telephone No \_\_\_\_\_ Technician Name \_\_\_\_\_

#### VEHICLE DETAIL

Vehicle Make \_\_\_\_\_ Model \_\_\_\_\_ Year \_\_\_\_\_  
 Registration No \_\_\_\_\_ VIN Number \_\_\_\_\_  
 Odo/Speedo Reading \_\_\_\_\_

#### ACCESSORIES FRONT

Bumper	Yes	No
Winch	Yes	No
PDC's	Yes	No
Radar box	Yes	No
Bolt on towbar	Yes	No
Other	_____	

Surface coating \_\_\_\_\_

#### ACCESSORIES REAR

Bumper	Yes	No	
Spare wheel carrier	None	Single	Dual
PDC's	Yes	No	
Towball	Yes	No	
Wiring harness	Yes	No	
Other	_____		

Surface coating \_\_\_\_\_

#### ACCESSORIES

Bash plate	Yes	No
Lower c/arms	Yes	No
Transfer c/p	Yes	No
Rock Sliders	Yes	No
Roof rack	Yes	No
Other	_____	

#### INSTALLATION DETAIL

Torque checks	_____	NW	_____
Lock bolts	_____	NW	_____
Rubbers	_____		
Led lights	_____		

#### RE-CHECK DETAIL

Torque checks	_____
Lock bolts	_____
Rubbers	_____
Led lights	_____

#### COMPONENTS FITTED

Front	Winch plate	Yes	No
	Stiffners	Yes	No
	Bumper Shell		
	Radiator plate	Yes	No
	Lights	Yes	No
	Resistors	Yes	No
	Other	_____	
	Serial #	_____	

Rear	Spine	Yes	No
	Shell	Yes	No
	Resistors	Yes	No
	Recovery points	Yes	No
	Bumper step	Yes	No
	Lights	Yes	No
	Towball	Yes	No
	Trailer plug	Yes	No
	Other	_____	
	Serial #	_____	

Fitment Centre \_\_\_\_\_

Technician Name \_\_\_\_\_

Signature : Fitment Centre (At Re-Check)

#### CUSTOMER DECLARATION

#### OTHER

Signature : Customer (At Re-Check)

Signature : Customer (At Fitment)

Signature : Fitment Centre (At Fitment)

**Copy 1** - Customer copy after 500km Re-check  
**Copy 2** - Customers Copy at Installation  
**Copy 3** - To be returned to Wildog Acc  
**Copy 4** - Remain in book for Fitment Centre Records

It is essential to complete this card in full. Return to Wildog accessories via email to validate this warranty. No warranty form, no claim. Warranty will be void if retention is not done