


2000 - 2002 GRAND TOUR/GRAND TOUR ELITE
ABS 10' & 12' TOP ASSEMBLY WIRING DIAGRAM


Curbside

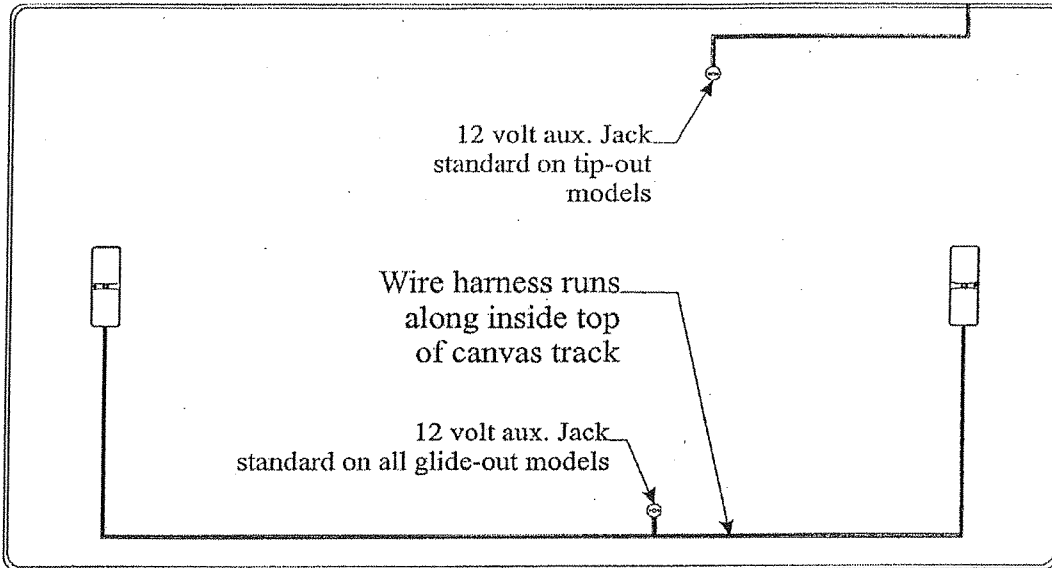

Roadside

Interior View Of Top Assemblies

Curbside

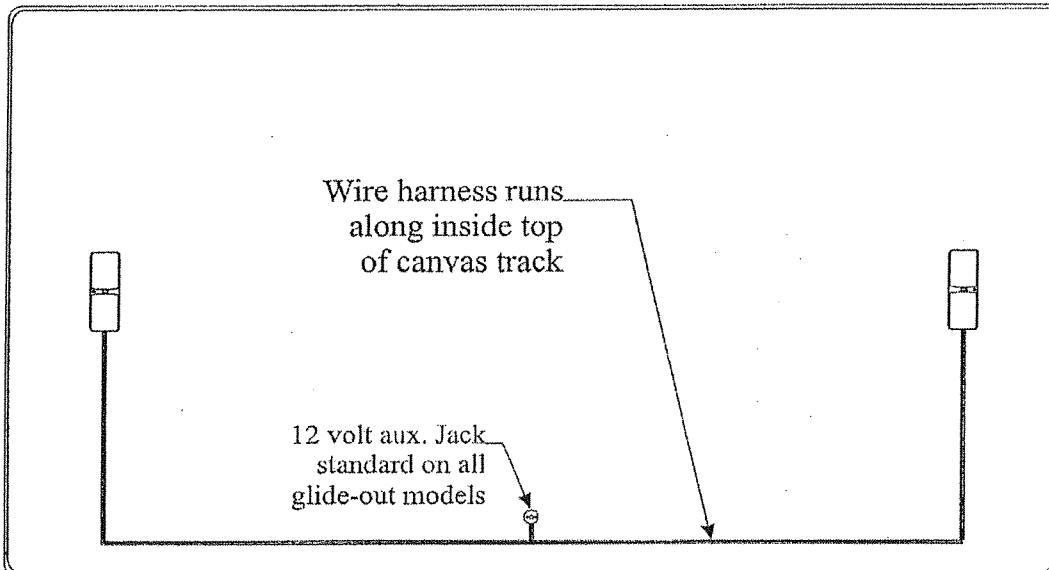

Roadside

Note: all wires are run under the exposed plastic extrusion cover. This cover is fastened with 2 sided tape, cover must be removed to expose 12 volt wires.