



INSTALLATION INSTRUCTIONS

MODEL NUMBER 4749-7951 - BED APRON KIT, COLUMBIA
4749-7961 - BED APRON KIT, NEWPORT
4749-7971 - BED APRON KIT, CHESAPEAKE


This package contains: 2 - Bed Aprons

Tools required: Staple gun
 3/8" Staples

INSTRUCTIONS

1. Unfasten all four top latches and crank top assembly to full height. Lock into open position.
2. Fully extend both front and rear bed assemblies securing bed support legs onto appropriate mounting pins.
3. Swing foldover upper galley assembly into normal setup position.
4. Locate appropriate bed apron package and remove bed apron.
5. Lift or slide mattress assemblies forward approximately 2 feet.
6. Drape supplied bed aprons over the interior bed frames exposing the finished surface of the apron material. See figure.

Note: Orient the bed aprons aligning the double hemmed seams with the bottom edge of the interior bed frames, allowing the upper cut edge to lay atop the bed assembly, centered side to side.

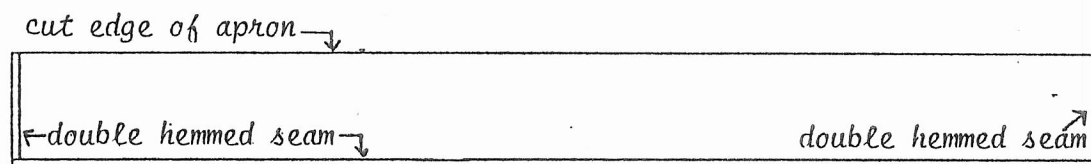

Bed Apron

7. Using a staple gun and 3/8" staples, permanently secure bed apron to wooden surface of bed assemblies.
9. Replace mattress assemblies and slowly check bed functions to ensure bed apron does not become entangled with interior furniture.