FLEETWOOD FOLDING TRAILERS, INC. INSTALLATION INSTRUCTIONS

1968H348 November 2000

MODEL NUMBER: 4753C6781 BATTERY MOUNT KIT

This kit is for use on all 1999 through 2001 model year trailers only.

This package contains:

Acres 1 Daylo Do

1	√ -	4746C900	Battery pan
1	-	4749B553	Wire harness
4	-	4738A089	Bolt
4		1201E603	Lock nut
4		1200E126	Hex bolts
4		1202B043	Washers
2		4755A175	Battery bracket
1	•	4755-859C	Battery connect label
1		4757-878	Connection decal


IMPORTANT NOTICE

These instructions are for the use of qualified individuals specifically trained and experienced in the installation of this type equipment and related system components. Installation and service personnel are required by some states to be licensed. Persons not qualified shall not attempt to install this equipment nor interpret the instructions.

INSTALLATION INSTRUCTIONS:

- 1. Loosely fasten the battery brackets to the bottom of the battery pan with the four 5/8" hex-head bolts, washers, and lock nuts provided. (See figure.) The bolts should be inserted through the battery pan and straps with the threads down. Place the washer and lock nut on the bolts (beneath the straps).
- 2. Place the assembled battery mounting pan onto the tongue of the trailer as shown in figure 1. Adjust the sliding straps so they rest on the frame rails. Securely tighten the battery bracket bolts.
- 3. Using the two holes in the battery pan and the holes in each bracket as a template, drill two 7/32" holes through the top of each frame tube.
- 4. Fasten the battery pan assembly to the frame with the four 3/4" bolts provided.
- 5. Place the battery in an appropriate sized battery box and follow the instructions included with the box to fasten it to the battery mount pan.
- 6. Apply battery connect label to trailer tongue near wire harness.

FIGURE 1

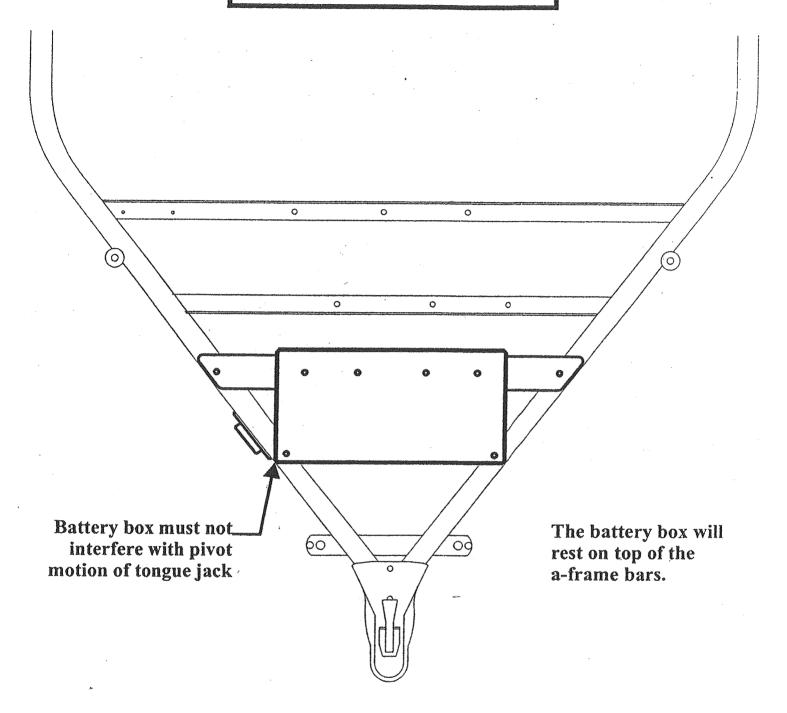

This battery mount kit can only be used on trailers equipped with the black (Norco) tongue jacks. The silver (Atwood) tongue jacks are not tall enough to clear the battery when installed.