

FLEETWOOD FOLDING TRAILERS, INC.

1968-514

November 1998

**INSTALLATION INSTRUCTIONS
FOR INSTALLATION OF VALANCE TRACK ADAPTERS**

This installation instruction applies to only 1996 model year camping trailers with ABS top assemblies needing the valance track upgrade.

NOTE: Purchase one tube of "Super Glue" from a local hardware store prior to beginning.

1. With valance removed from the top assembly, glue the slide adapter to the tabs on the curbside and roadside valance. (See figure 1.)

NOTE: Use only a small amount of glue on the slide adapter surface.

2. Quickly push the slide adapter into the tab. Hold for several seconds.
3. ~~Repeat process for all tabs on curbside and roadside. (See figure 2 for complete process.)~~
4. Install valance to trailer top assembly.

FIGURE 1

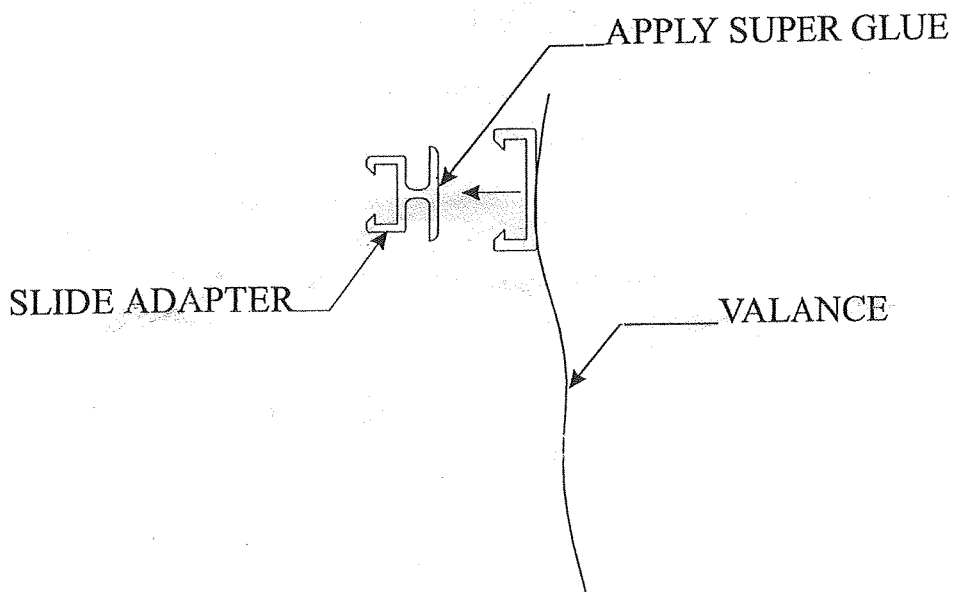


FIGURE 2

