
ONLY AT BEADSHOP.COM

The Bead Shop

WIRE-WRAPPING A BRIOLETTE



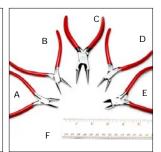

TOOLS NEEDED

- A. Bent-nose chain pliers
- B. Needle-nose chain pliers
- C. Rosary pliers or
- D. Round-nose pliers
- E. Wire cutters
- F. Ruler



7" — Gold-filled wire, 24-gauge, dead soft



1 — Briolette (we used a 20 x 20mm gemstone drop)



Step 1
a) Slip a briolette onto the wire.
b) Leave 1/2" of the tail showing.



Step 2 Pinch both wires at the top of the briolette to form the shape of a triangle.



Step 3Confirm that the briolette is centered inside the triangle.



Step 4
Cut one wire 1/8"
from the top of the wire triangle.



Step 5
Using the needlenose chain pliers
grab both wires
above the triangle.



Step 6Bend the longer wire into a right angle.



Step 7a) Switch to the roundnose pliers.

b) Place the tips of the pliers above and below the longer wire, at the right angle.



Step 8Bring the end of the wire up and over the top plier tip.



Step 9Rotate the bottom plier tip to the top of the loop.



Step 10 Continue bending the wire around the bottom plier tip.



Step 11When the circle is complete, center it above the briolette.



Step 12
Starting at the base of the loop, begin wrapping the longer wire in the space between the loop and top of the wire triangle.



Step 13 Continue to wrap until you have run out of wire.



Step 14
Use the bent-nose chain pliers to gently tuck the end under the wire-wrapped cap.



Step 15This will help prevent the wire from snagging on clothing or hair.