


WATERBOX®
A Q U A R I U M S

WATERBOX®
A Q U A R I U M S

SuperALU®
Aquarium Cabinet
ALU 2420/3620/4820

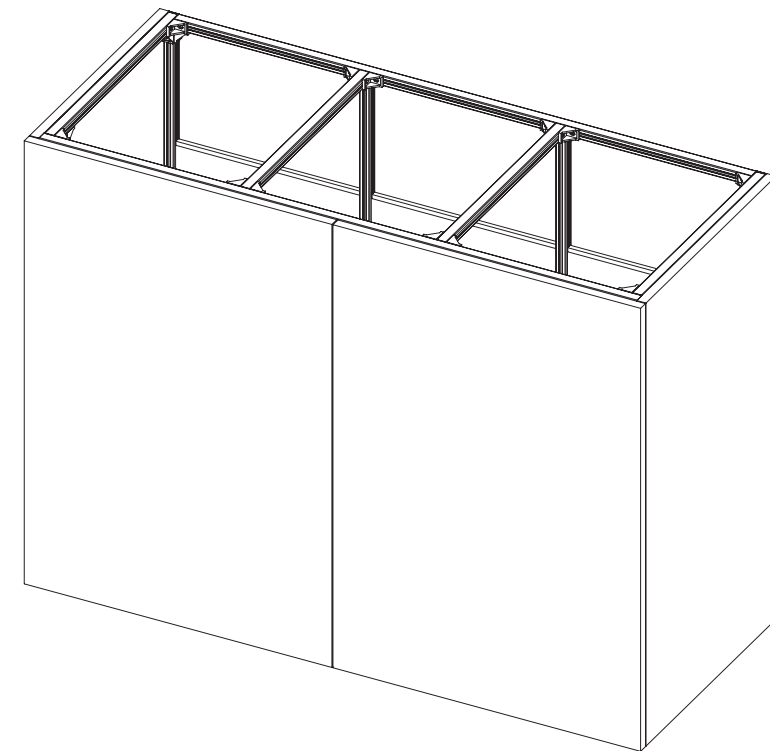

Cabinet Assembly Manual

WB-ALU20-7501



MY WATERBOX

Tank Model _____ Tank Lot # _____

Cabinet Model _____ Cabinet Lot # _____

Purchase Date _____

Sellers _____


Address _____

TEL/Mobile _____


CONTENT

◆ Aquarium Cabinet

● ALU 2420	P1●
● ALU 3620	P7●
● ALU 4820	P15●

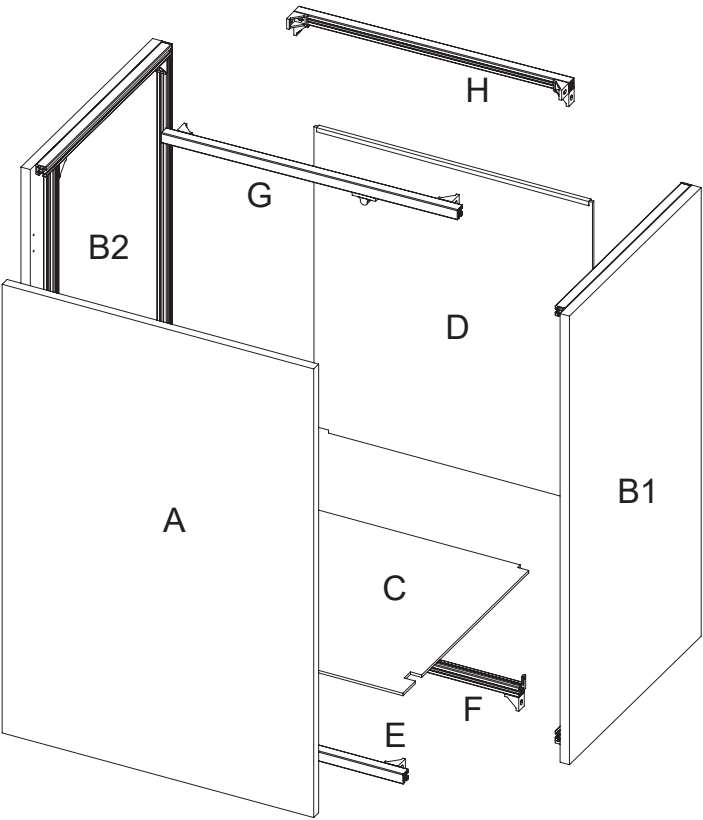

	Code	Name	QTY	Spare
	C1205	Leveling Foot	4	
	C1011	Door Hinge	3	
	C1004	Screw M4x14 for Door Hinge	12	4
	C1501	Screw with Nut	10	4
	C1701	Silicone Pad (Clear)	2	2
	C1801	L Spanner		1
	C1901	Hex Key		1
	C2001	Logo		1

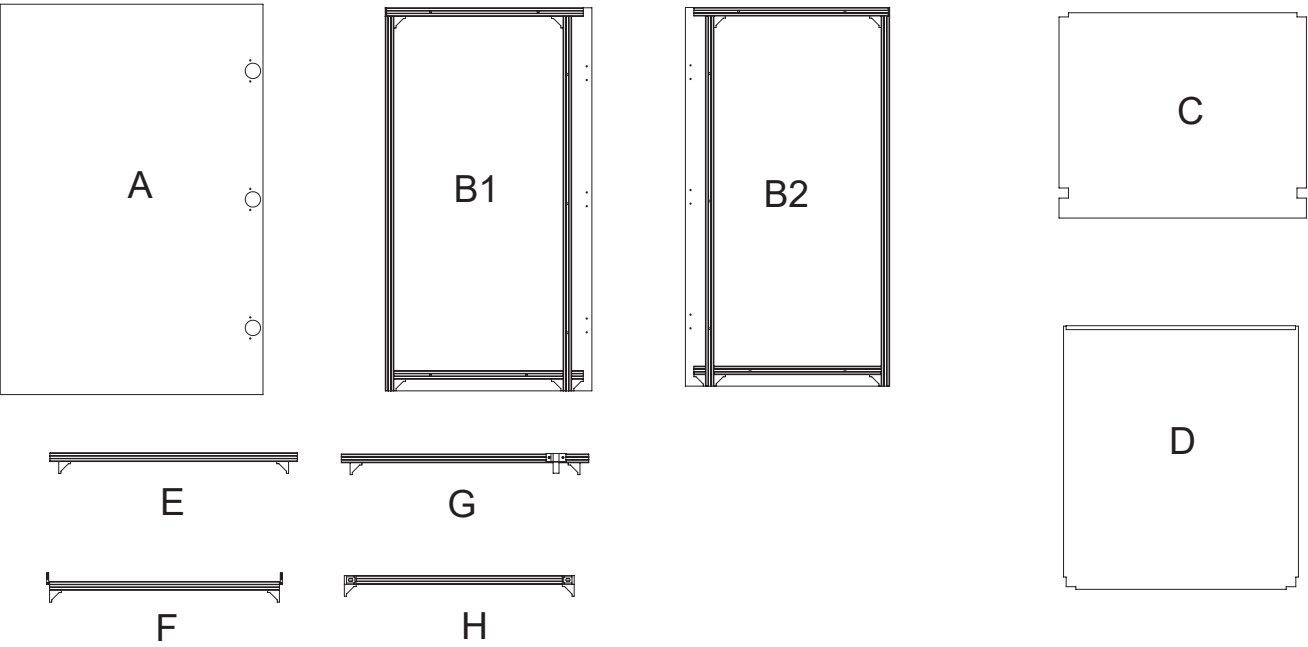


S/N	Name	QTY
A	Cabinet Door	1
B1	Side Panel - Right	1
B2	Side Panel - Left	1
C	Bottom Panel	1
D	Rear Panel	1


S/N	Name	QTY
E	Cabinet Front Lower Beam	1
F	Cabinet Rear Lower Beam	1
G	Cabinet Front Upper Beam	1
H	Cabinet Rear Upper Beam	1

Hardware Installation Instructions


01

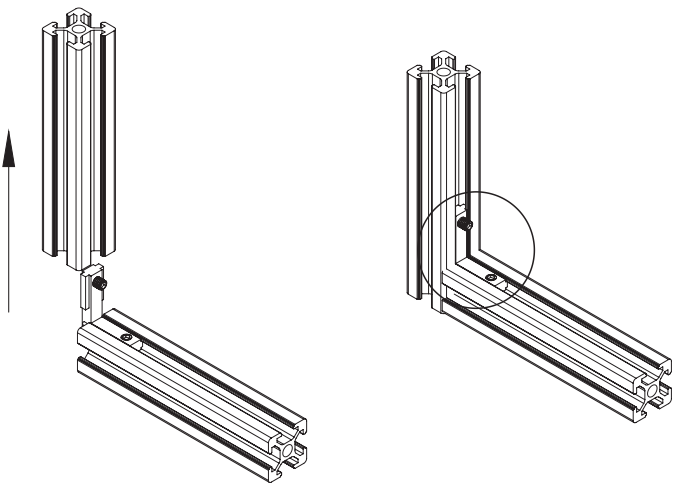


02

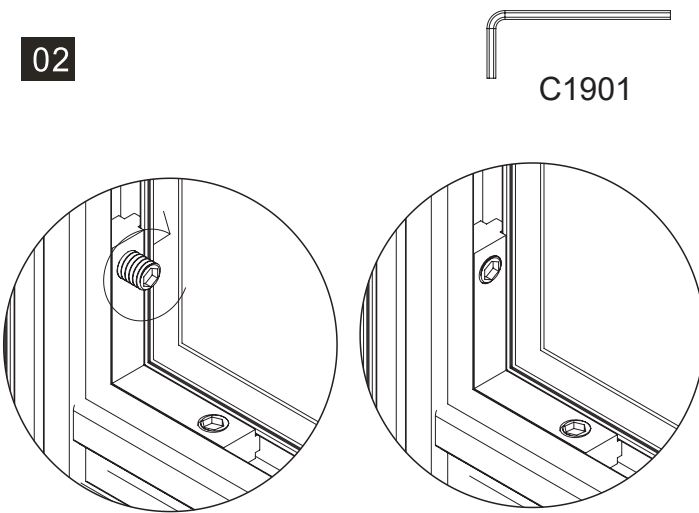

03

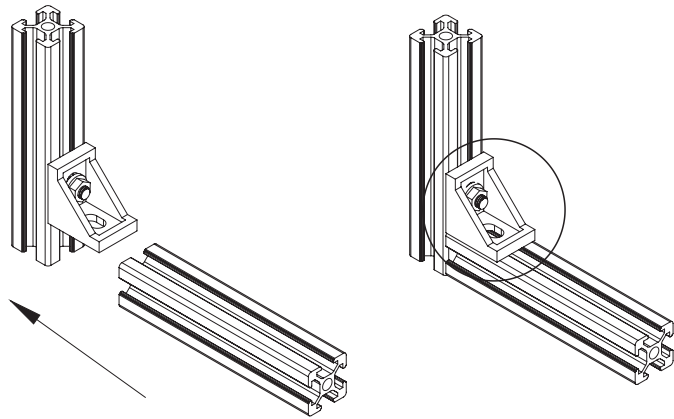


04

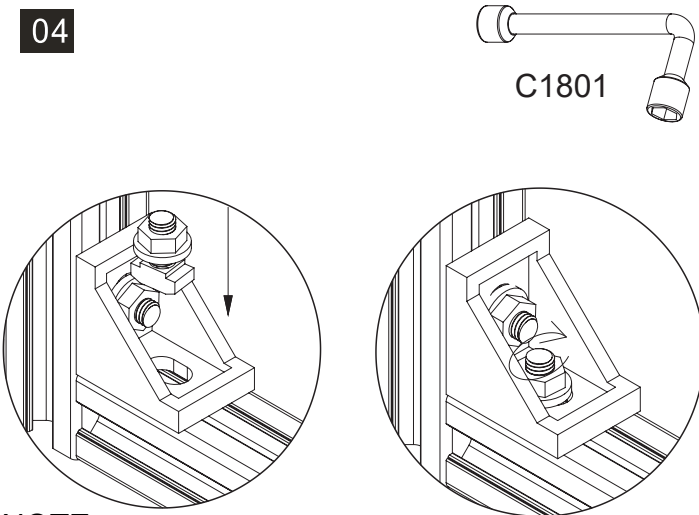


NOTE:
The screw with the nut must be tightened in a perpendicular orientation to the track in the frame.

Cabinet Installation Instructions


01

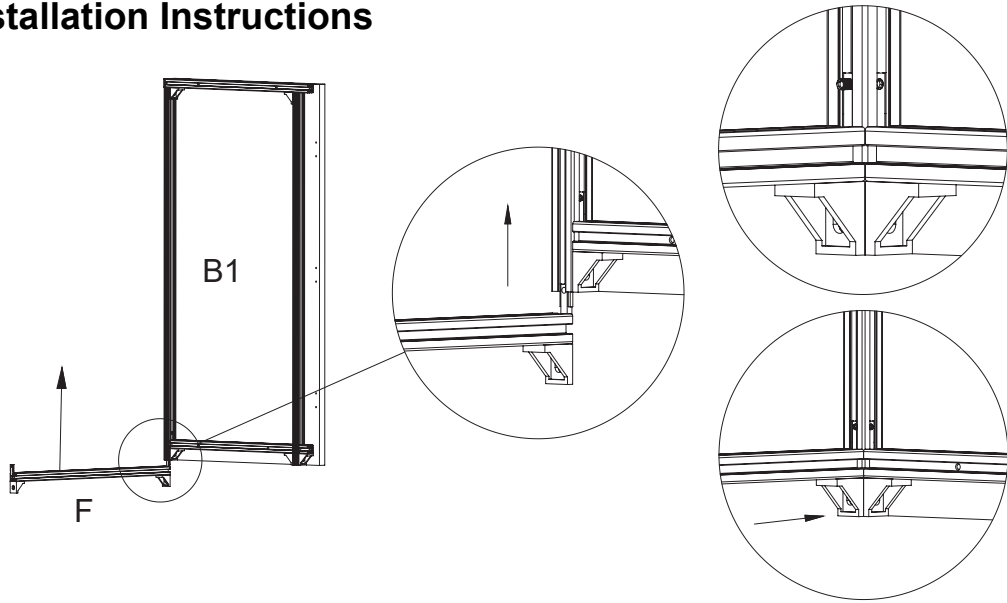


02

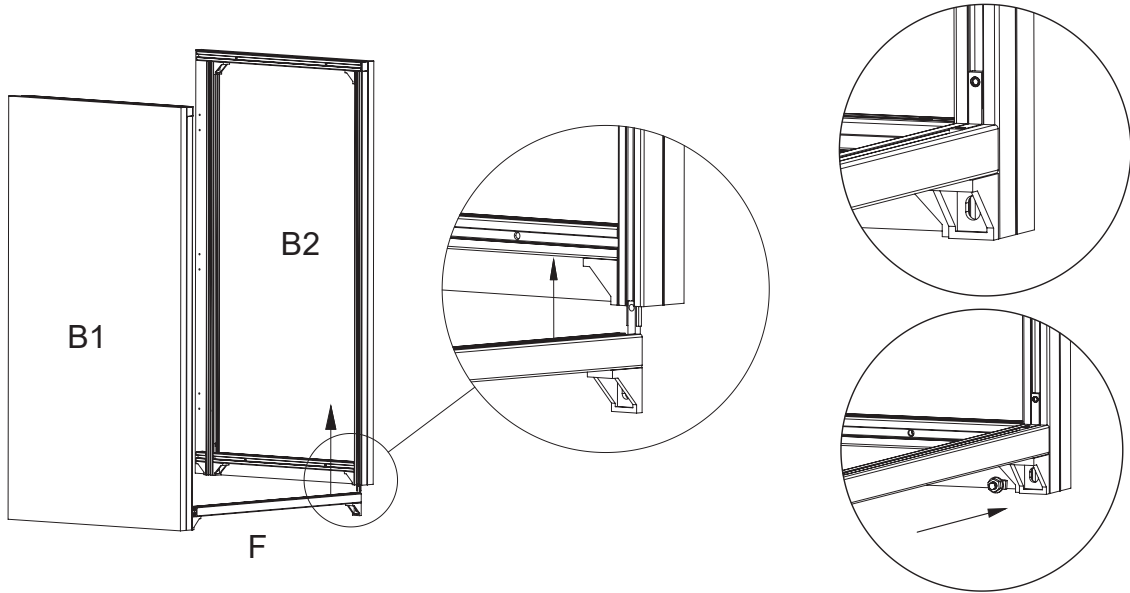


03

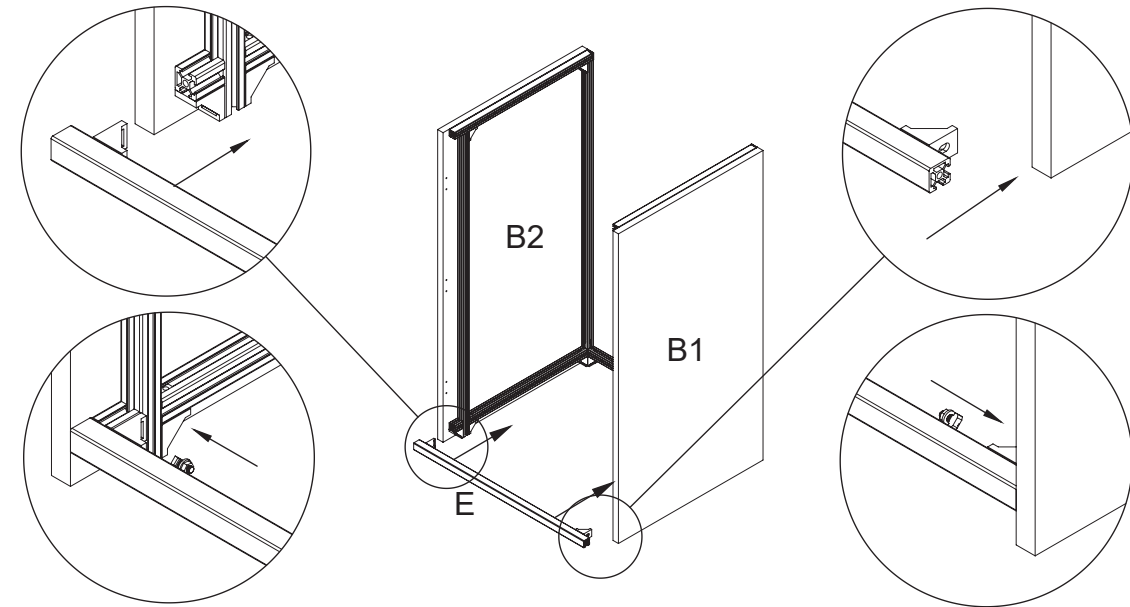


04

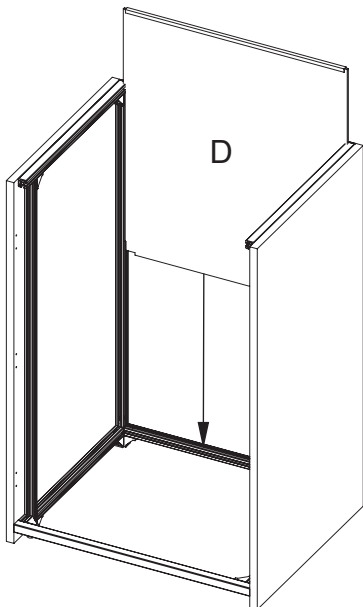


05

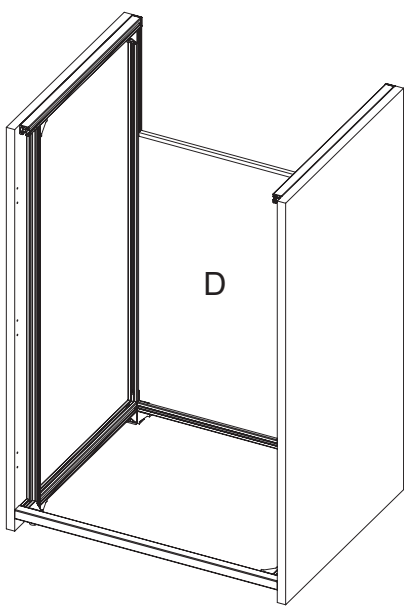


06

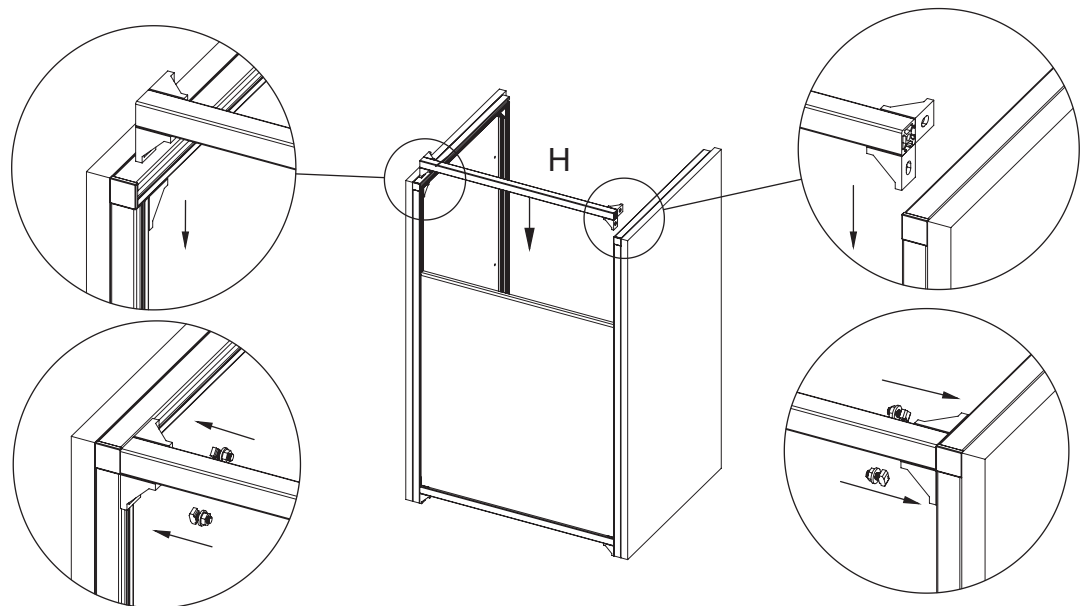


07

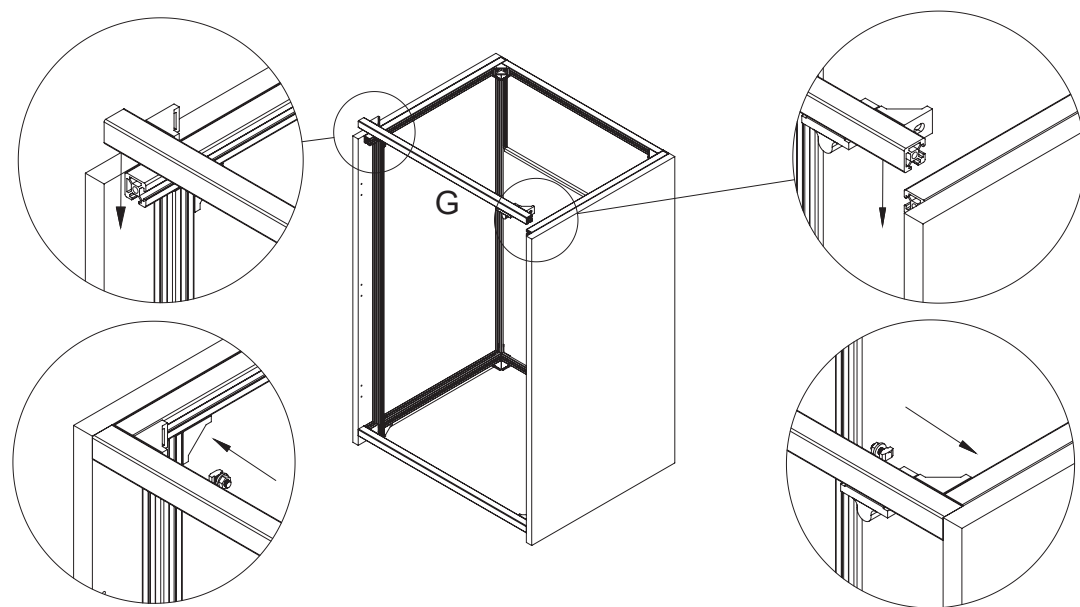


08

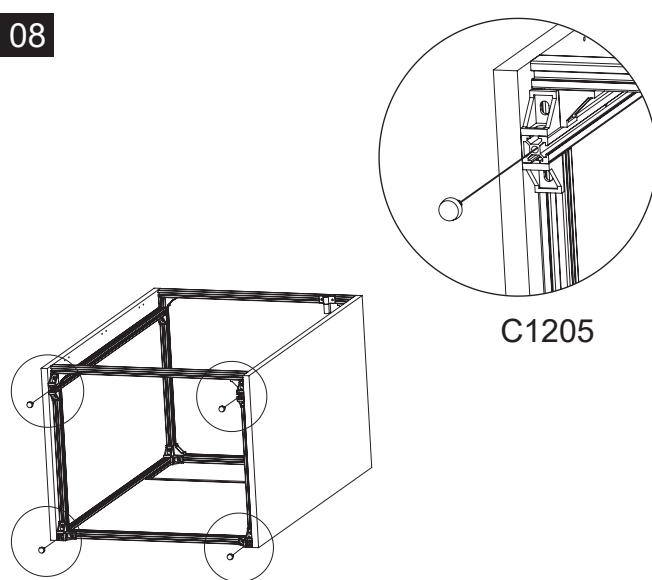


09

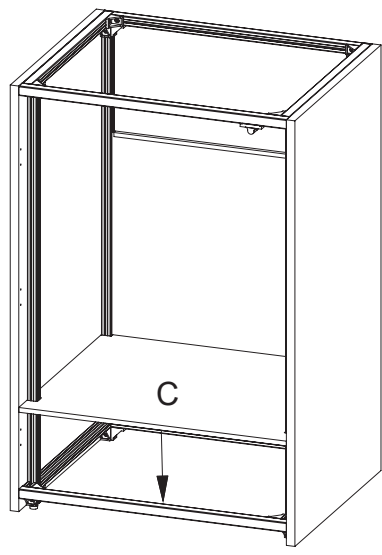


10

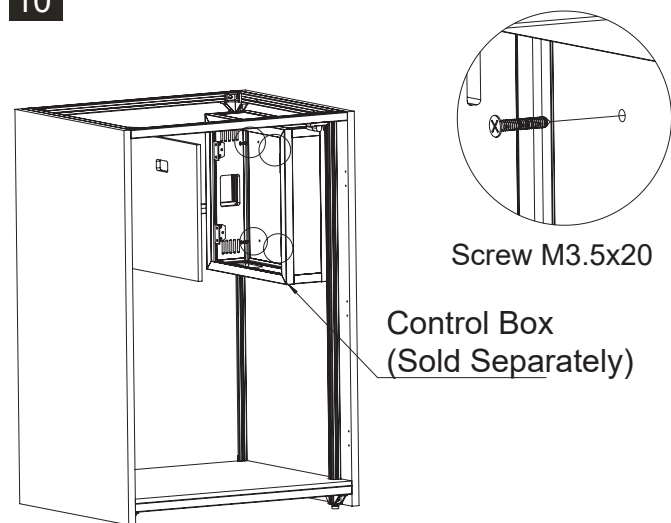


11

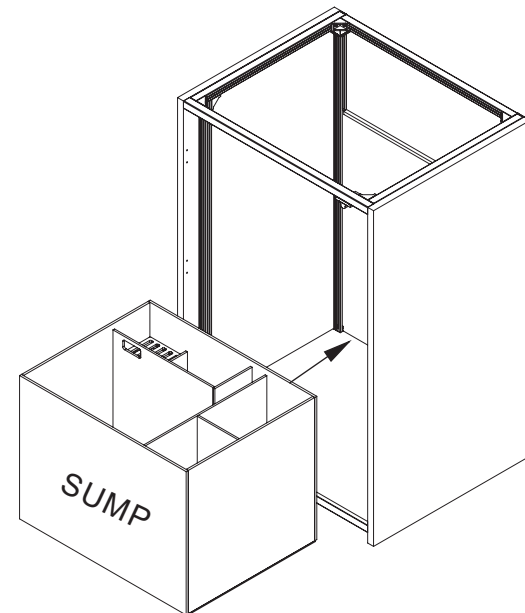

12

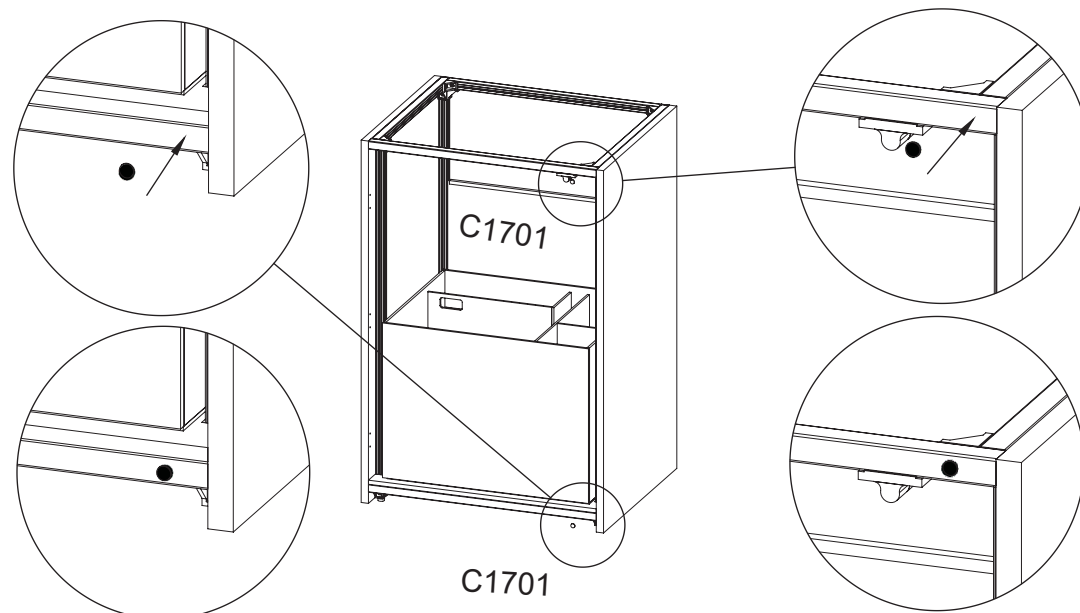


13

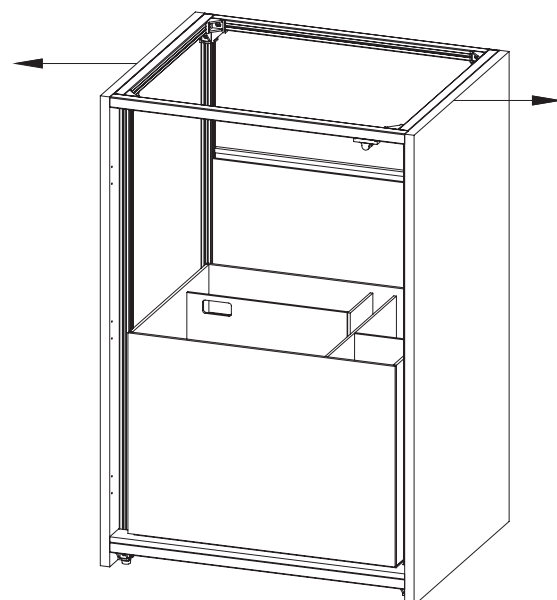


Caution:
If your cabinet has any side-to-side sway, do not proceed further. There is hardware that is not tightened fully, or corner bracket screws are not in the proper orientation.


14

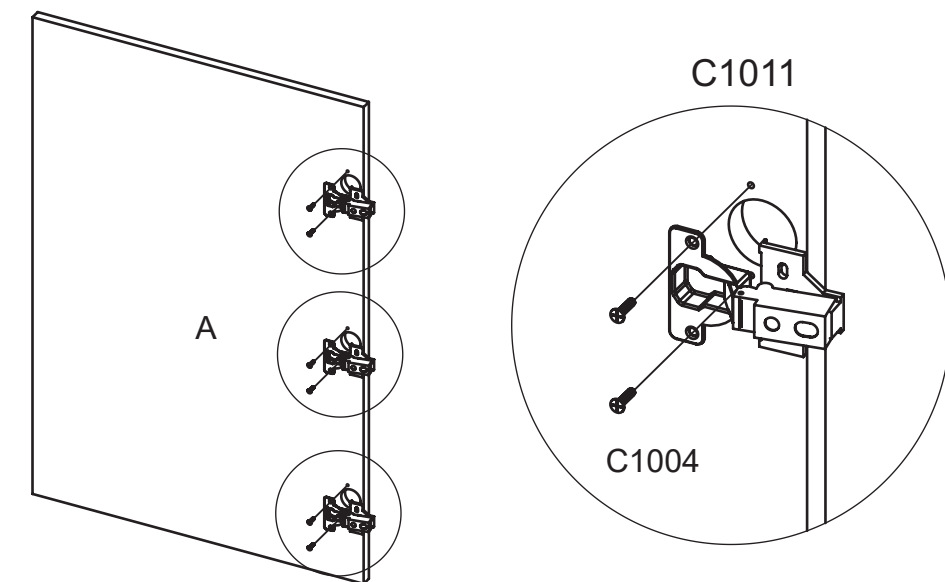


15

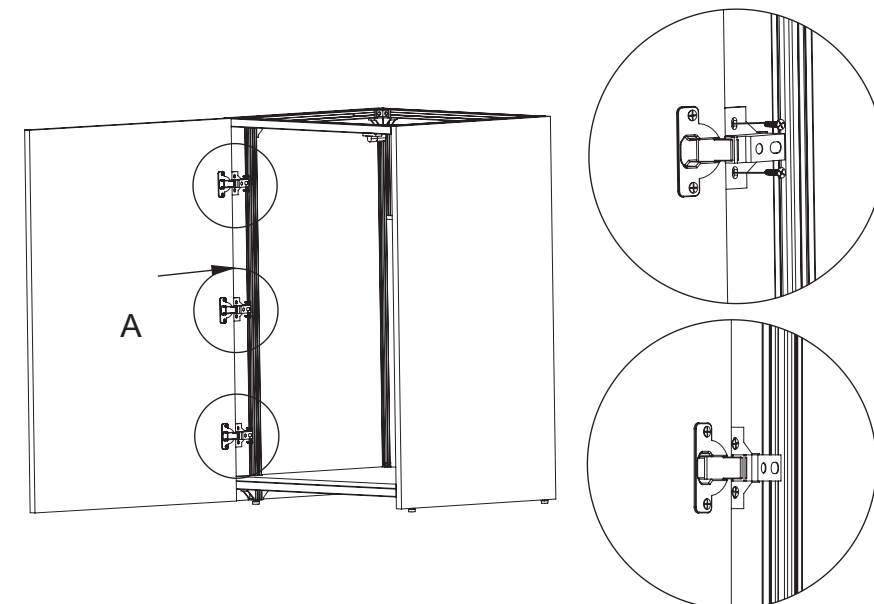


16

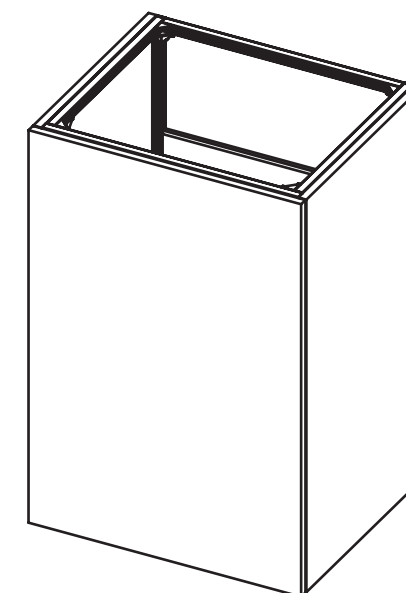

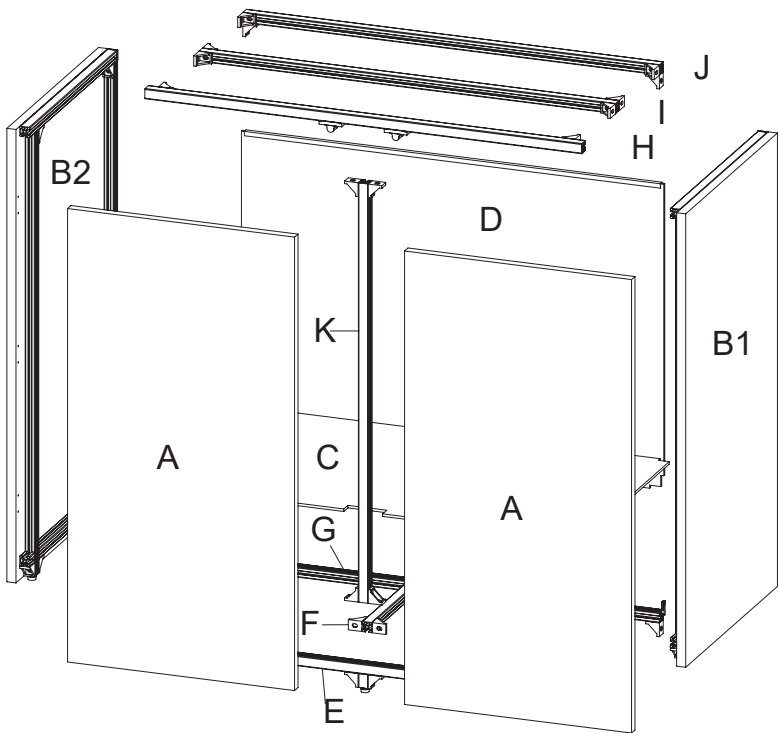

	Code	Name	QTY	Spare
	C1205	Leveling Foot	6	
	C1011	Door Hinge	6	
	C1004	Screw M4x14 for Door Hinge	24	4
	C1501	Screw with Nut	22	4
	C1701	Silicone Pad (Clear)	4	2
	C1801	L Spanner		1
	C1901	Hex Key		1
	C2001	Logo		1

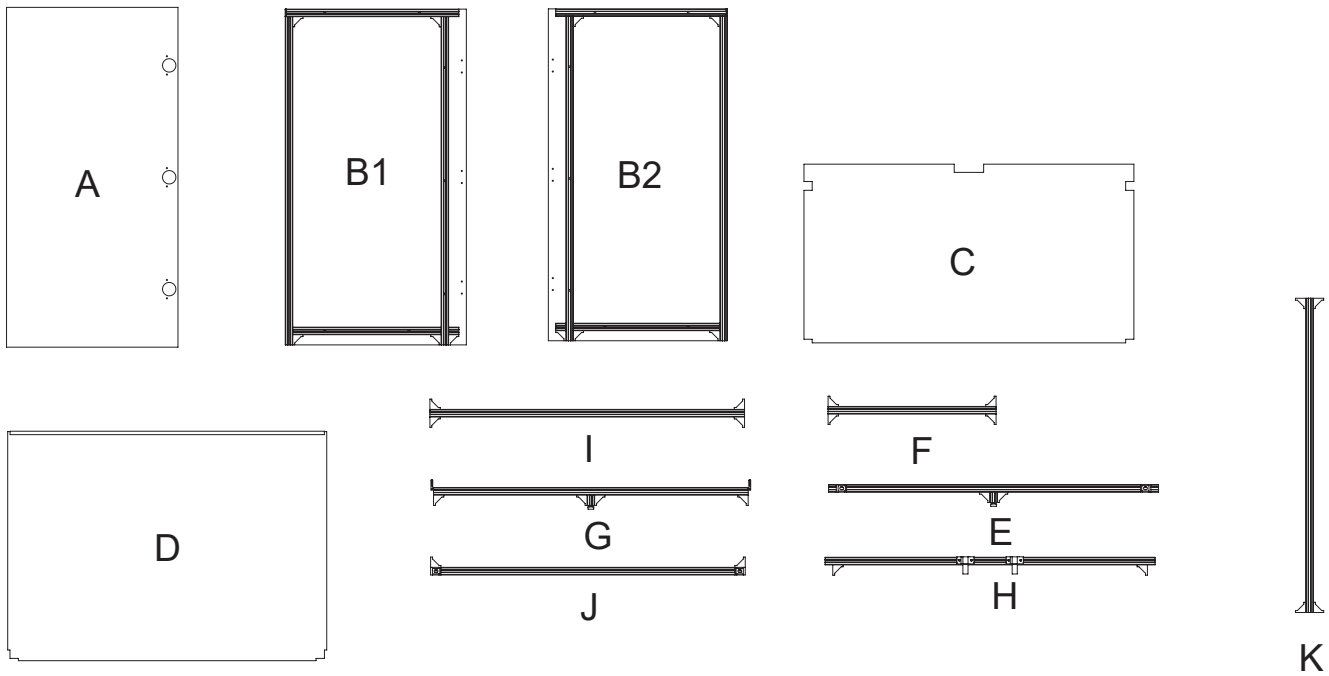


S/N	Name	QTY
A	Cabinet Door	2
B1	Side Panel - Right	1
B2	Side Panel - Left	1
C	Bottom Panel	1
D	Rear Panel	1
E	Cabinet Front Lower Beam	1


S/N	Name	QTY
F	Cabinet Lower Middle Beam	1
G	Cabinet Rear Lower Beam	1
H	Cabinet Front Upper Beam	1
I	Cabinet Upper Middle Beam	1
J	Cabinet Rear Upper Beam	1
K	Cabinet Front Middle Beam	1

Hardware Installation Instructions


01

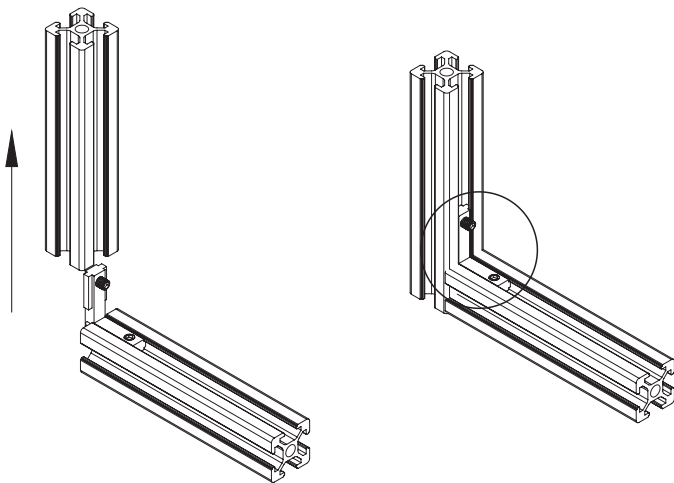


02

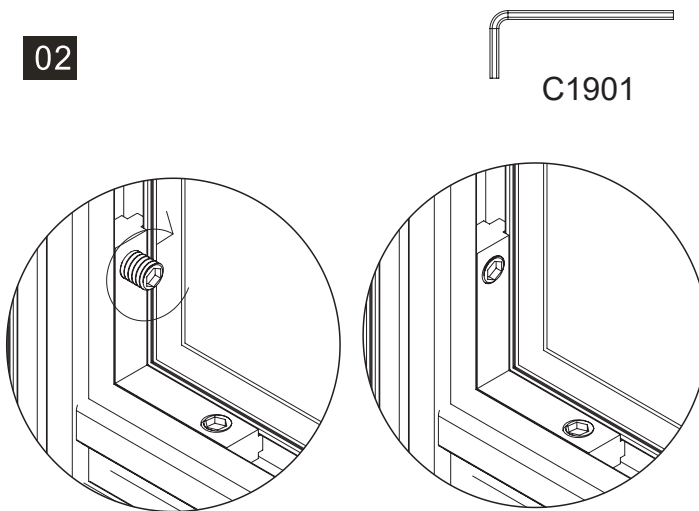

03

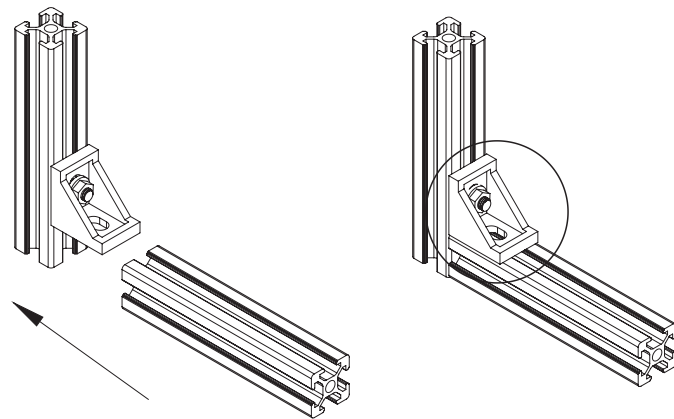


04

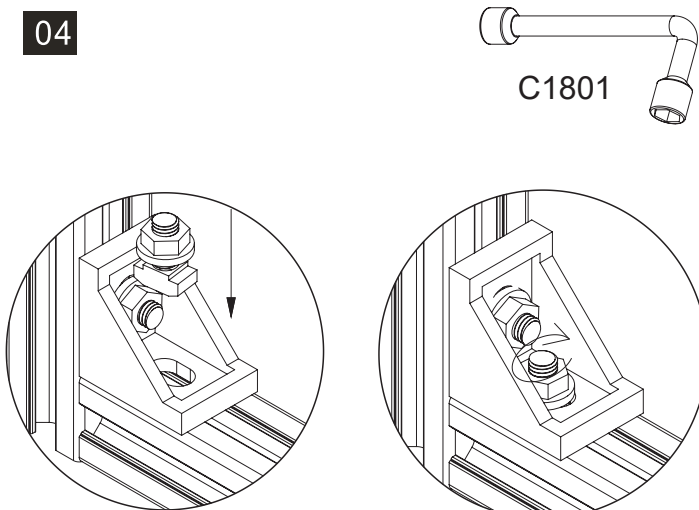


NOTE:
The screw with the nut must be tightened in a perpendicular orientation to the track in the frame.

Cabinet Installation Instructions


01

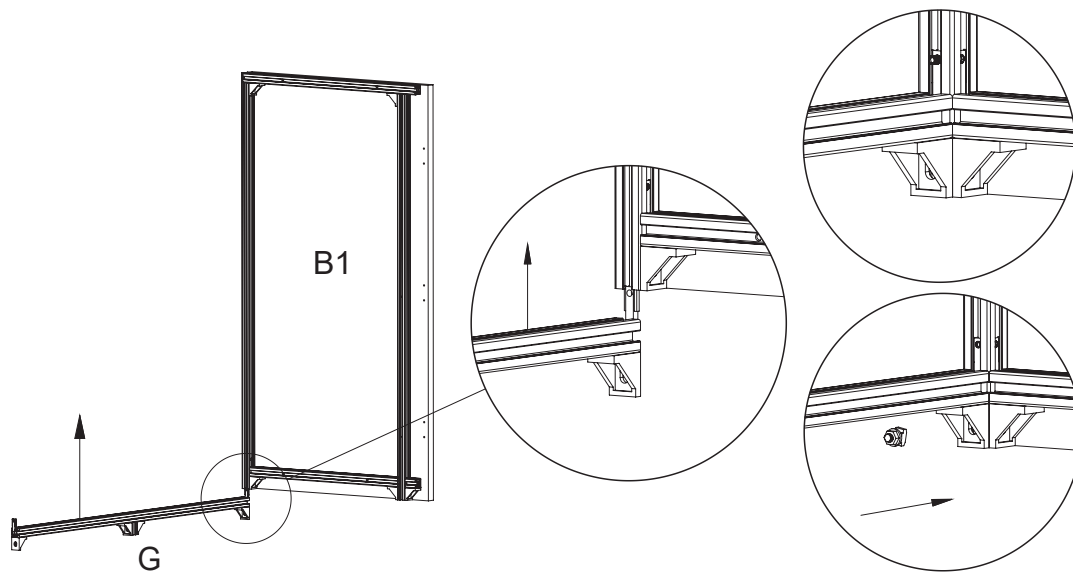


02

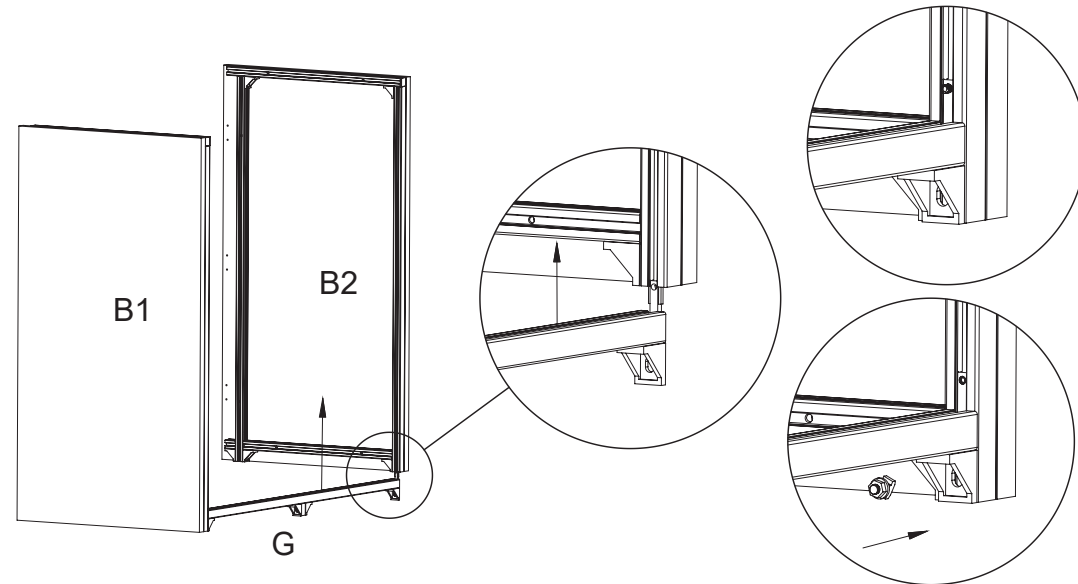


03

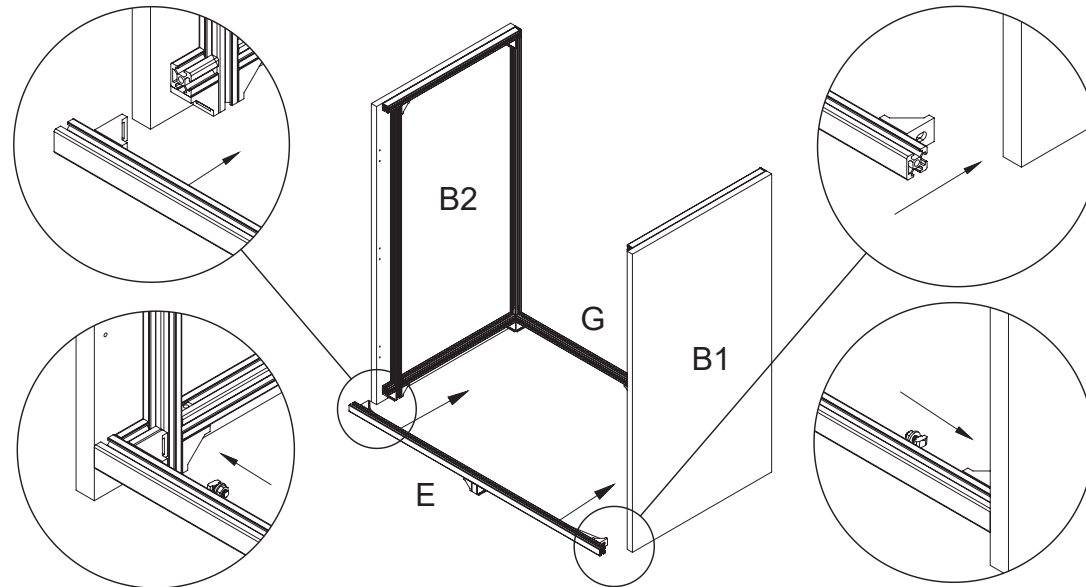


04

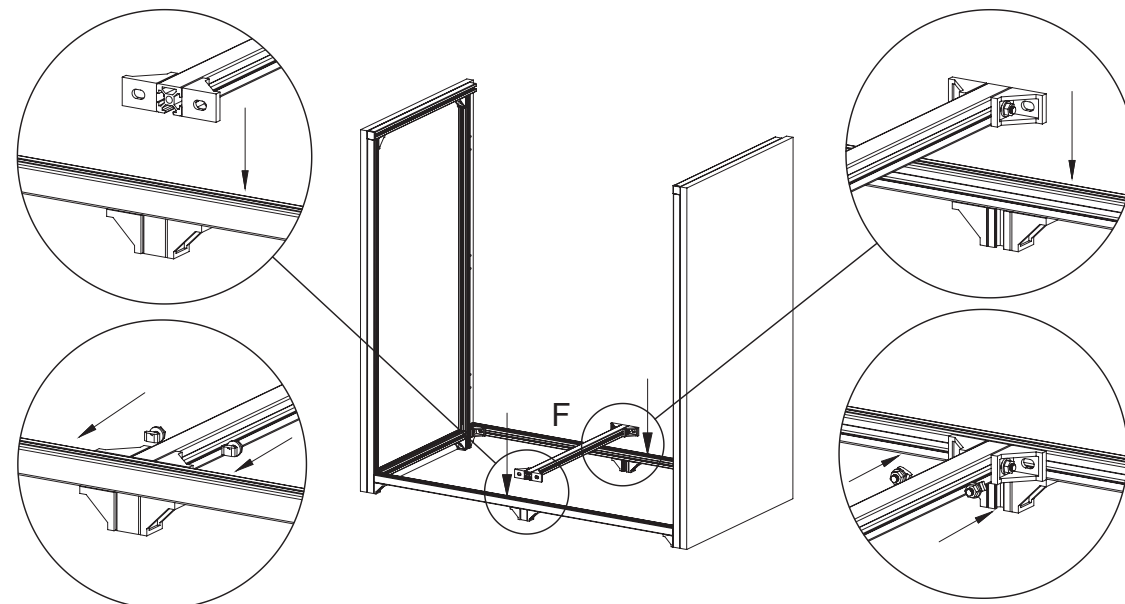


05

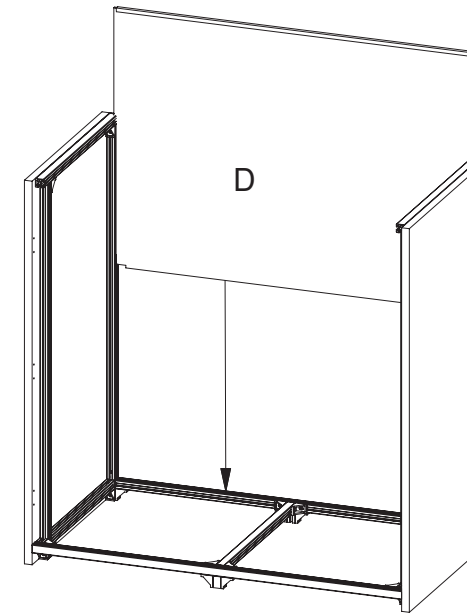


06

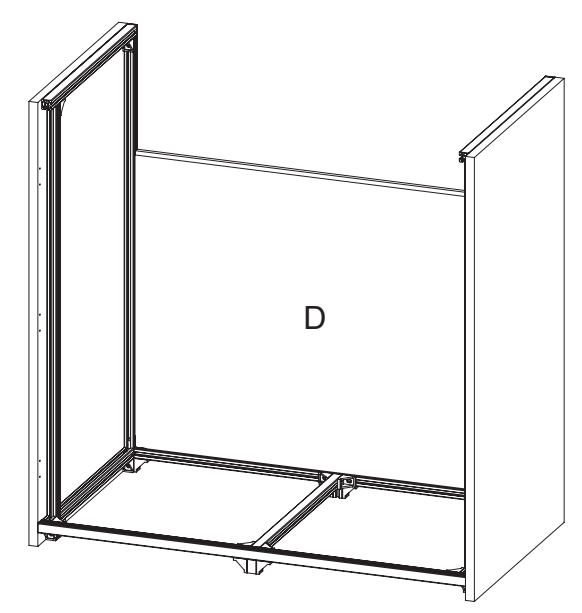


07

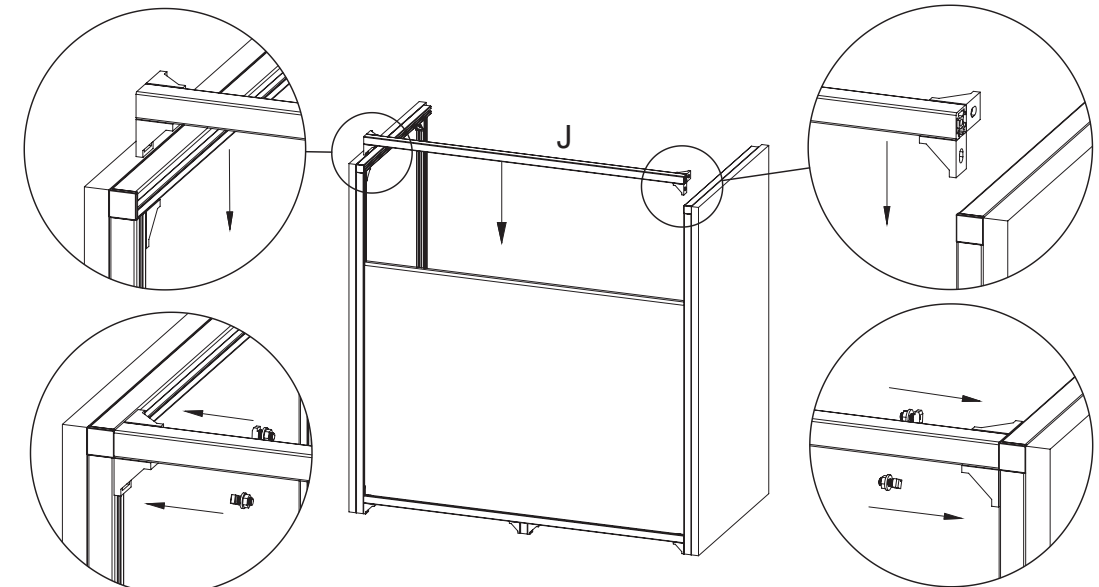


08

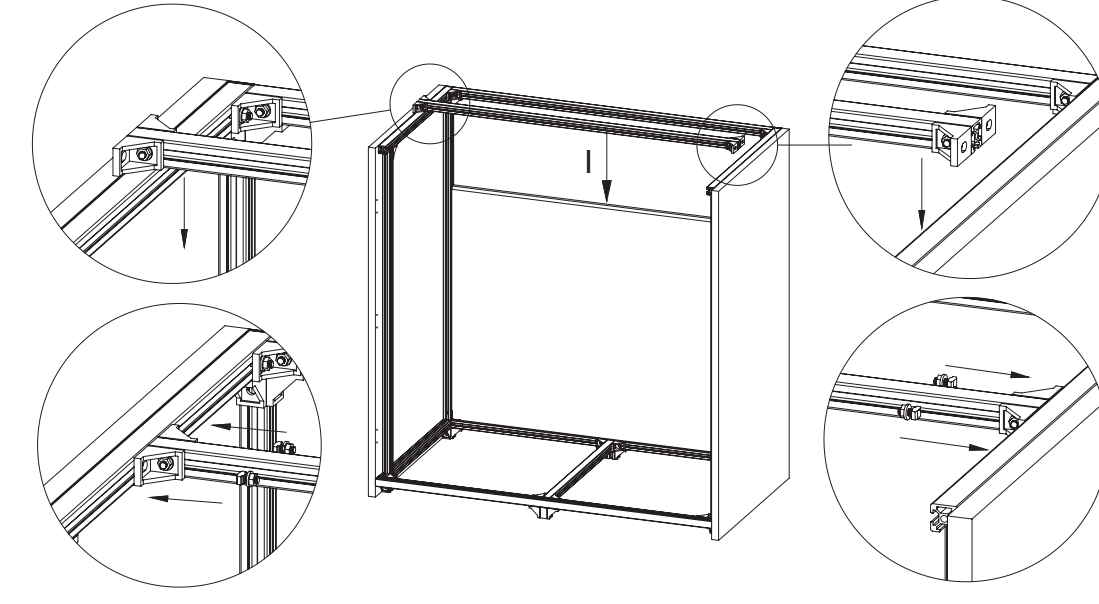


09

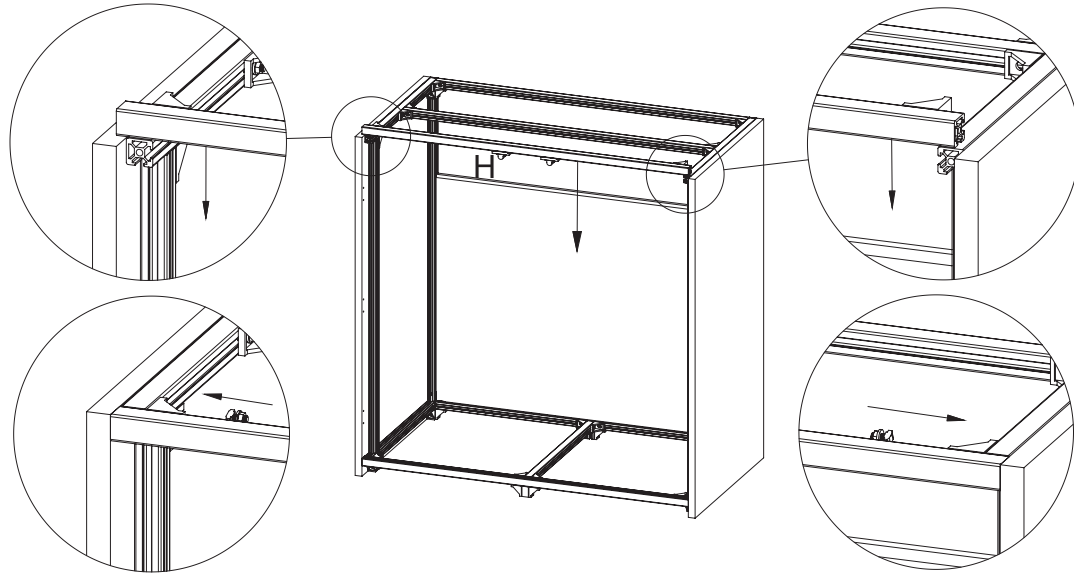


10

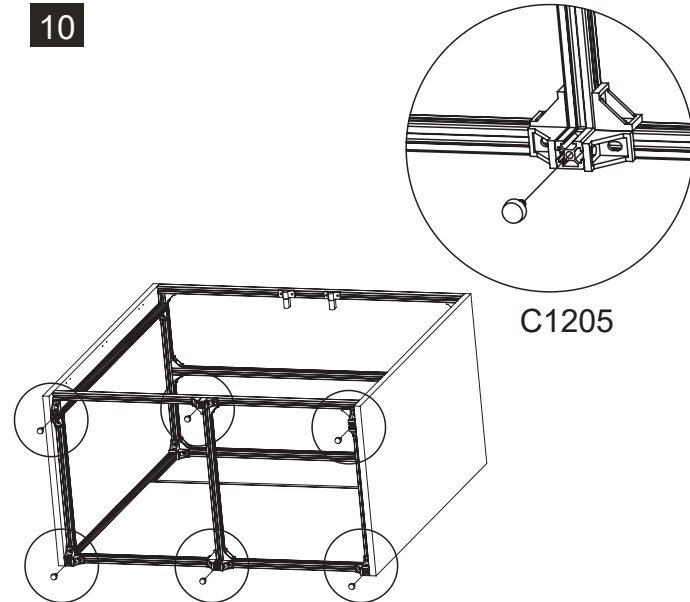


11

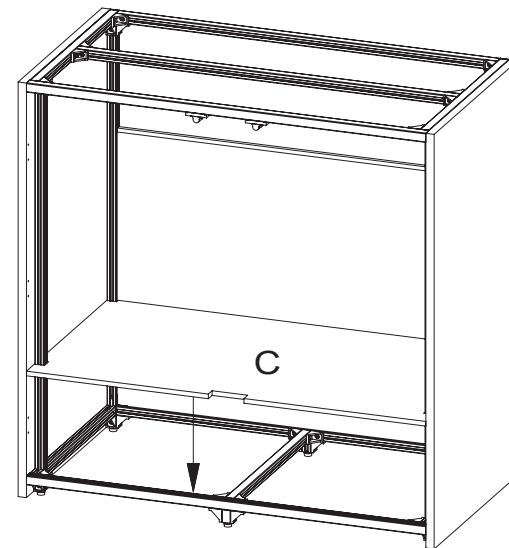


12

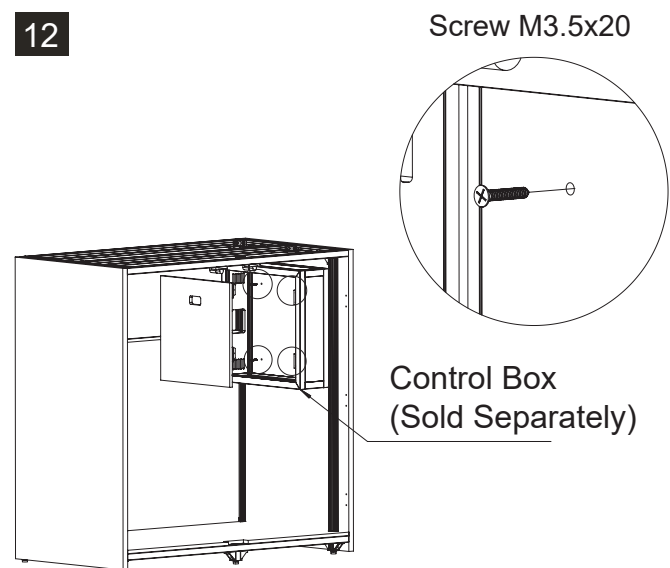


13

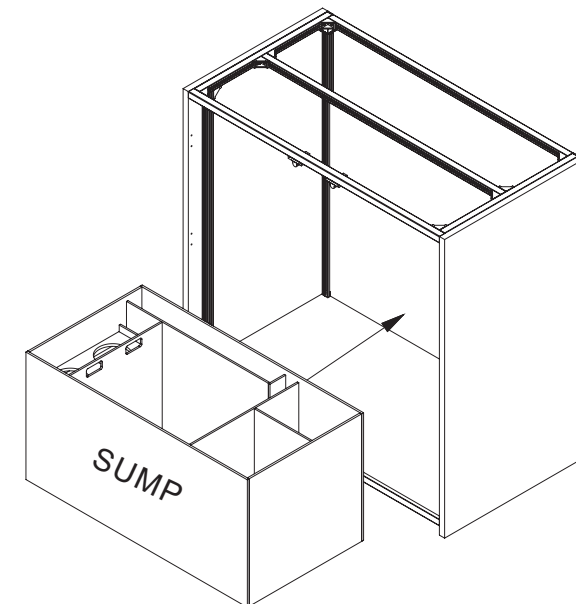


14

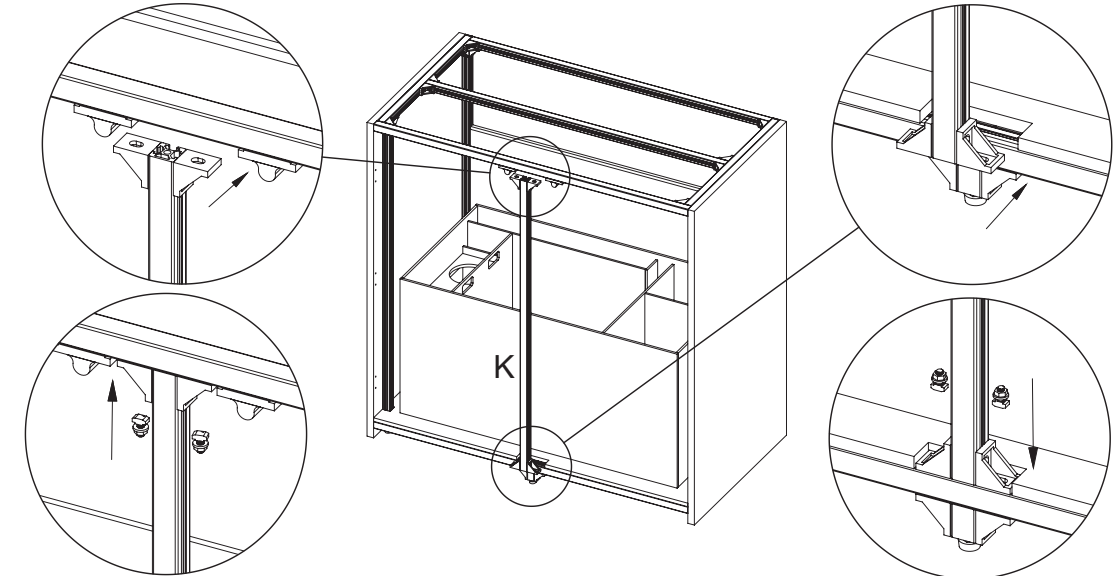

15

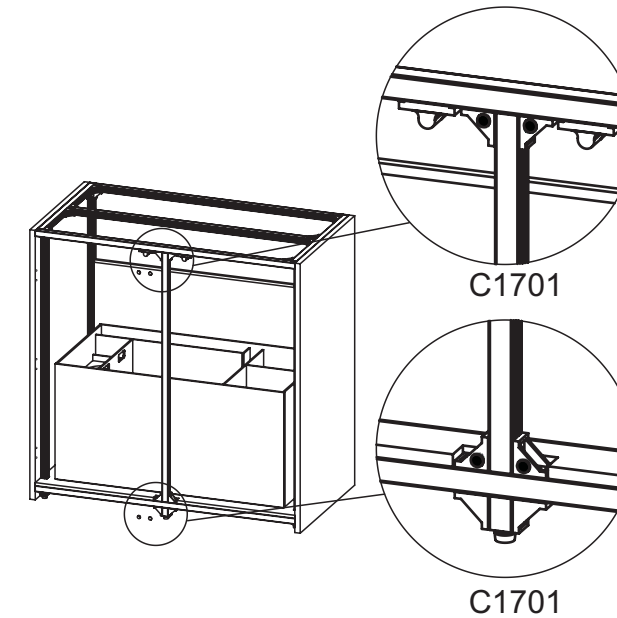


16

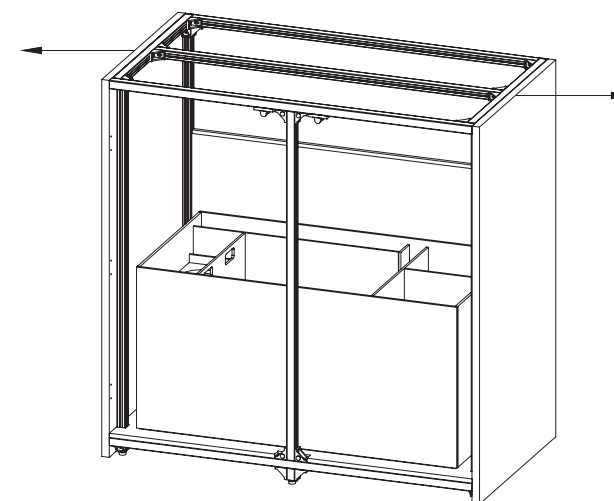


Caution:
If your cabinet has any side-to-side sway, do not proceed further. There is hardware that is not tightened fully, or corner bracket screws are not in the proper orientation.


17

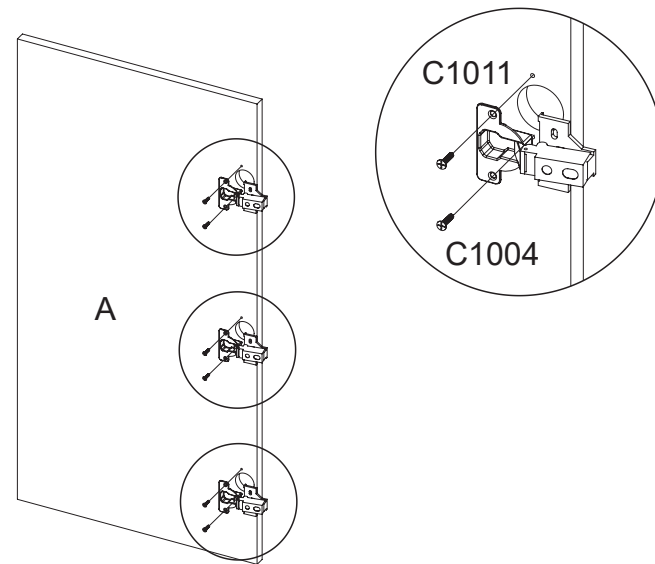


18

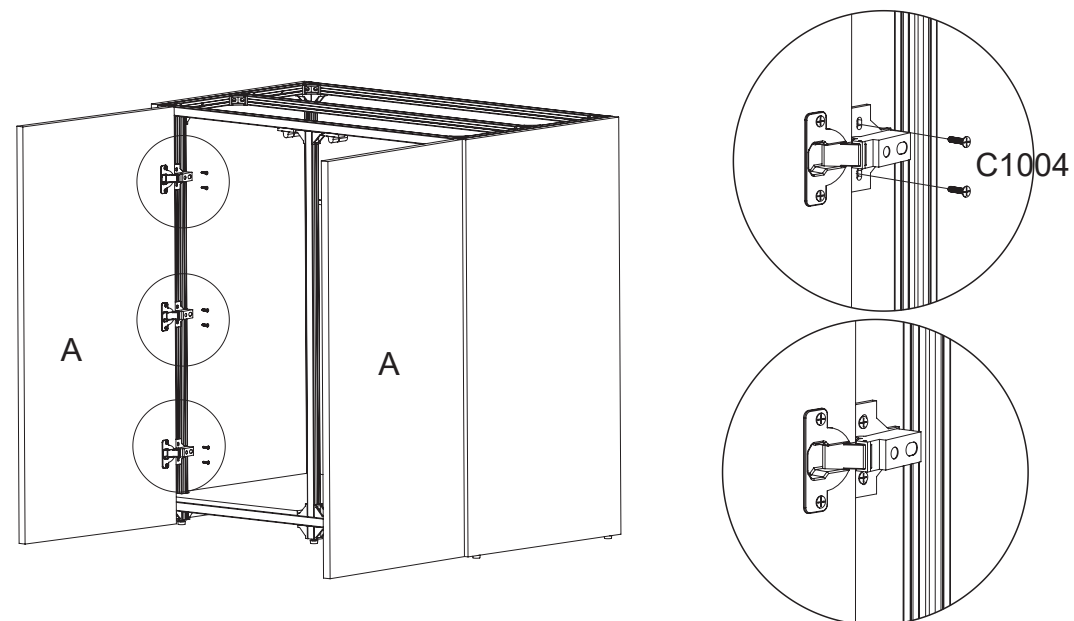


19

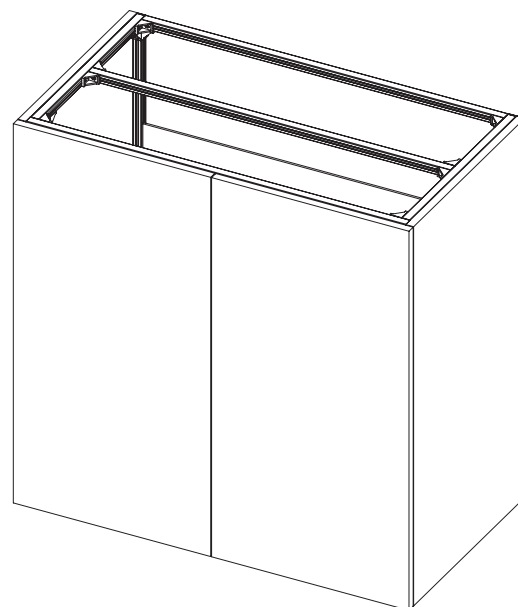

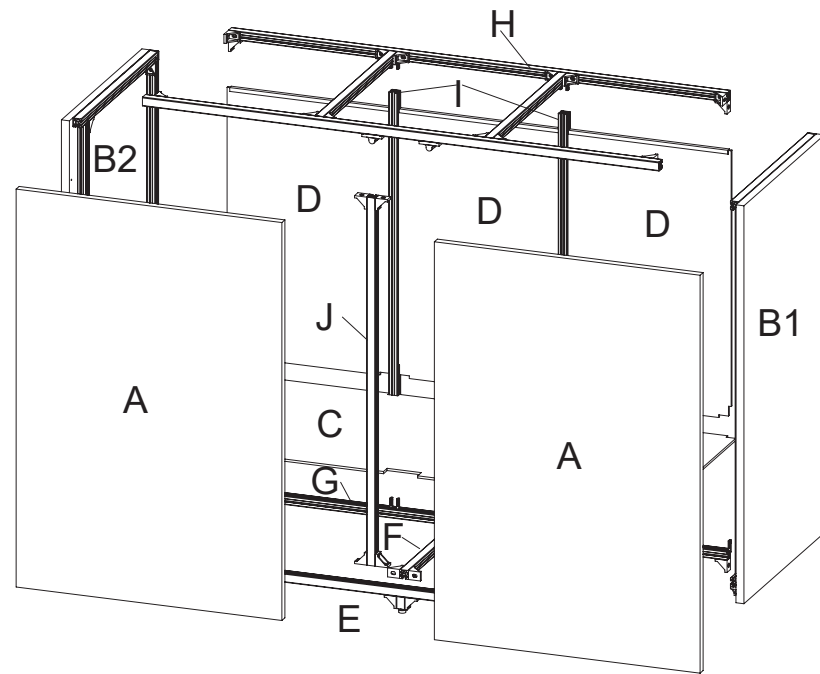

	Code	Name	QTY	Spare
	C1205	Leveling Foot	6	
	C1011	Door Hinge	6	
	C1004	Screw M4x14 for Door Hinge	24	4
	C1501	Screw with Nut	18	4
	C1601	Rebound Kit	2	
	C1002	Screw M3.5x16 for Rebound Kit	4	2
	C1701	Silicone Pad (Clear)	4	2
	C1801	L Spanner		1
	C1901	Hex Key		1
	C2001	Logo		1

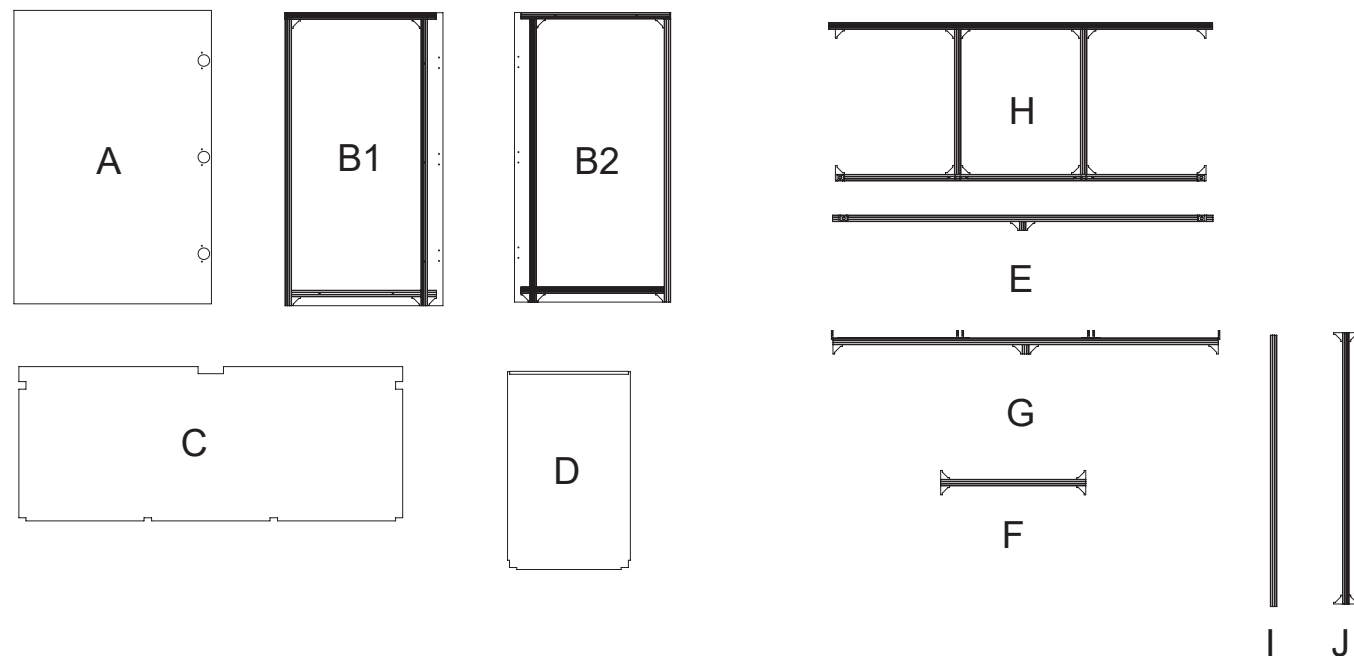


S/N	Name	QTY
A	Cabinet Door	2
B1	Side Panel - Right	1
B2	Side Panel - Left	1
C	Bottom Panel	1
D	Rear Panel	3


S/N	Name	QTY
E	Cabinet Front Lower Beam	1
F	Cabinet Lower Middle Beam	1
G	Cabinet Rear Lower Beam	1
H	Cabinet Upper Beam	1
I	Cabinet Rear Middle Beam	2
J	Cabinet Front Middle Beam	1

Hardware Installation Instructions


01

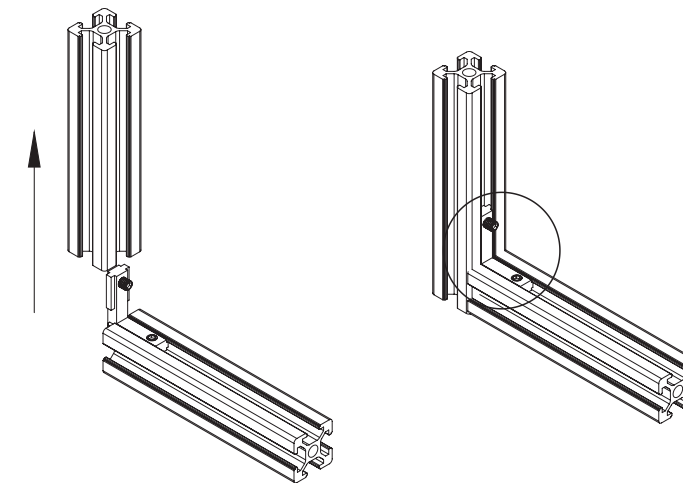


02

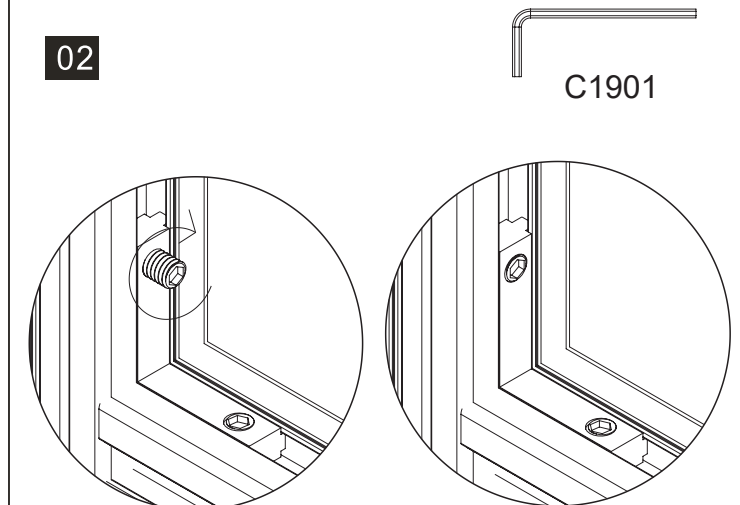

03

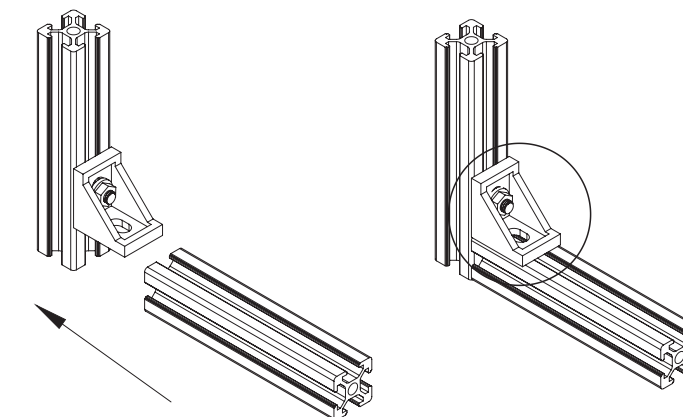


04

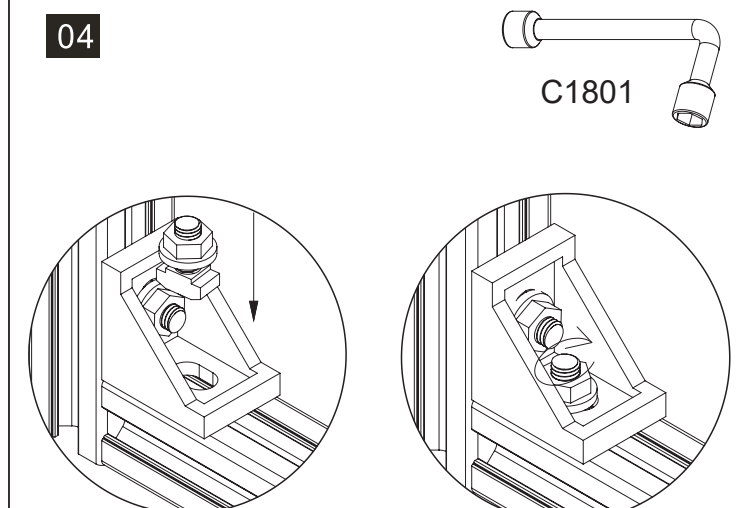


NOTE:
The screw with the nut must be tightened in a perpendicular orientation to the track in the frame.

Cabinet Installation Instructions


01

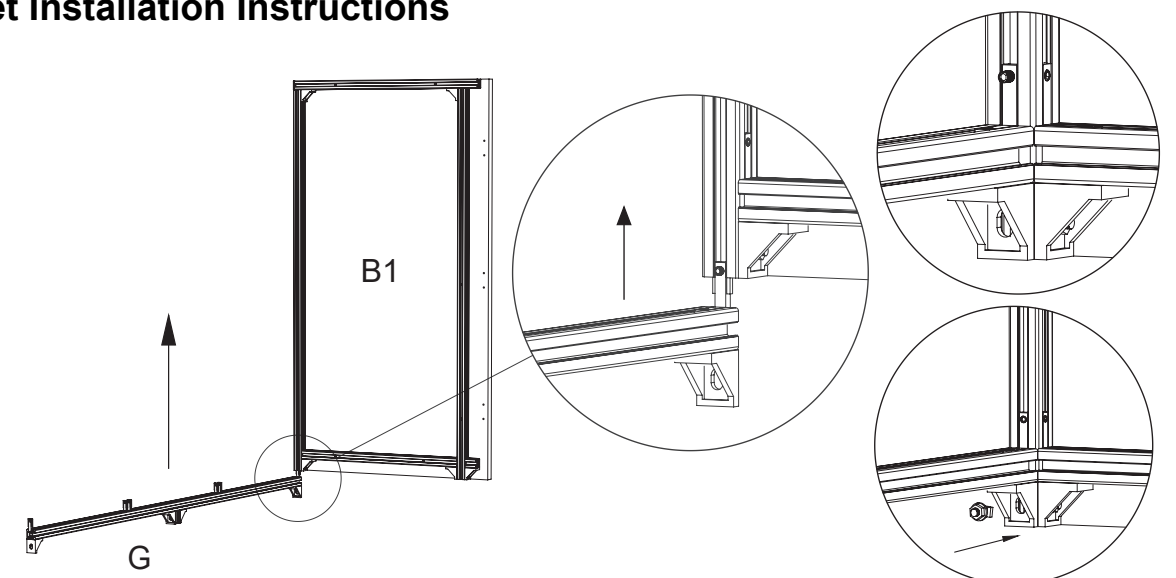


02

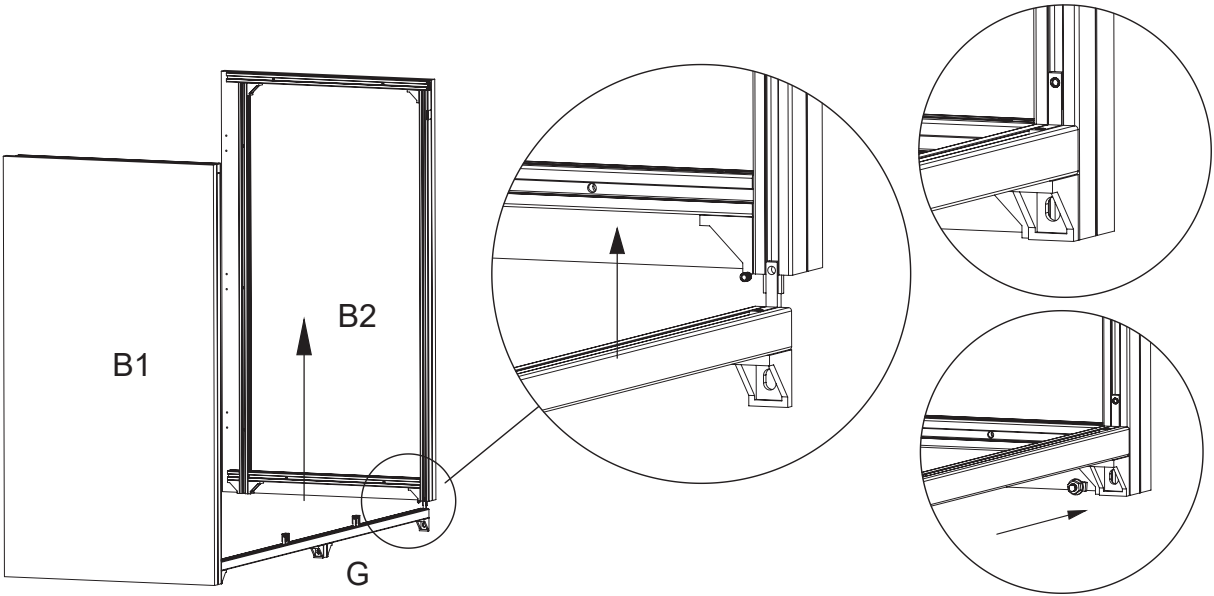


03

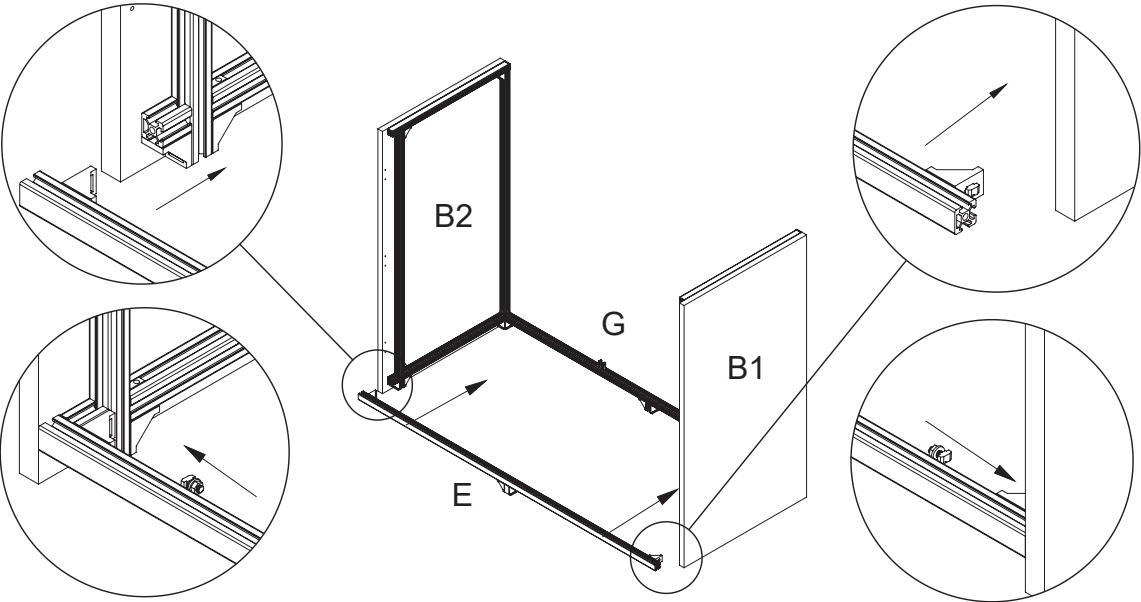


04

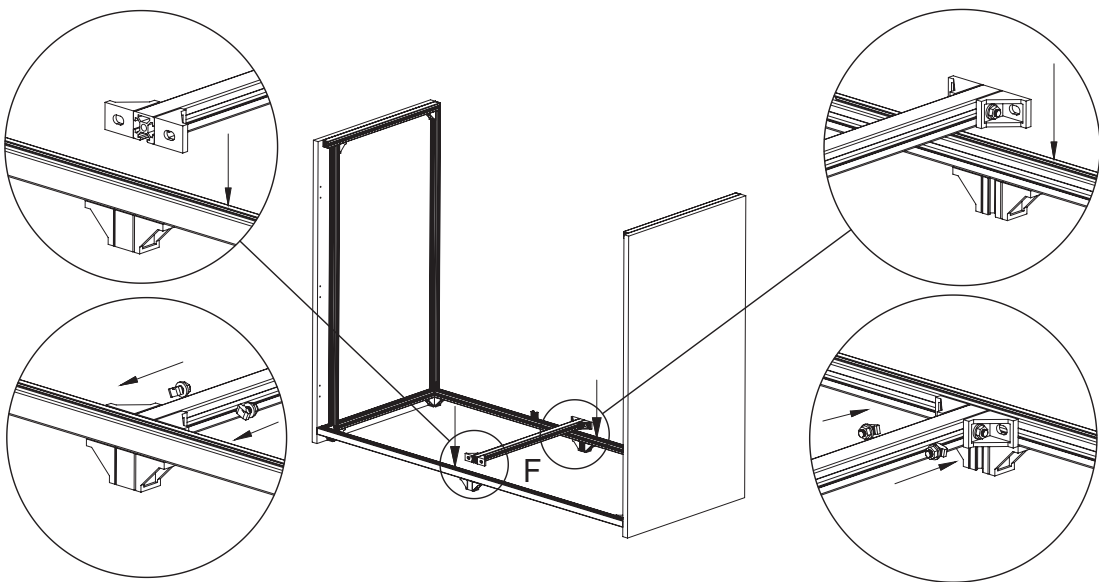


05

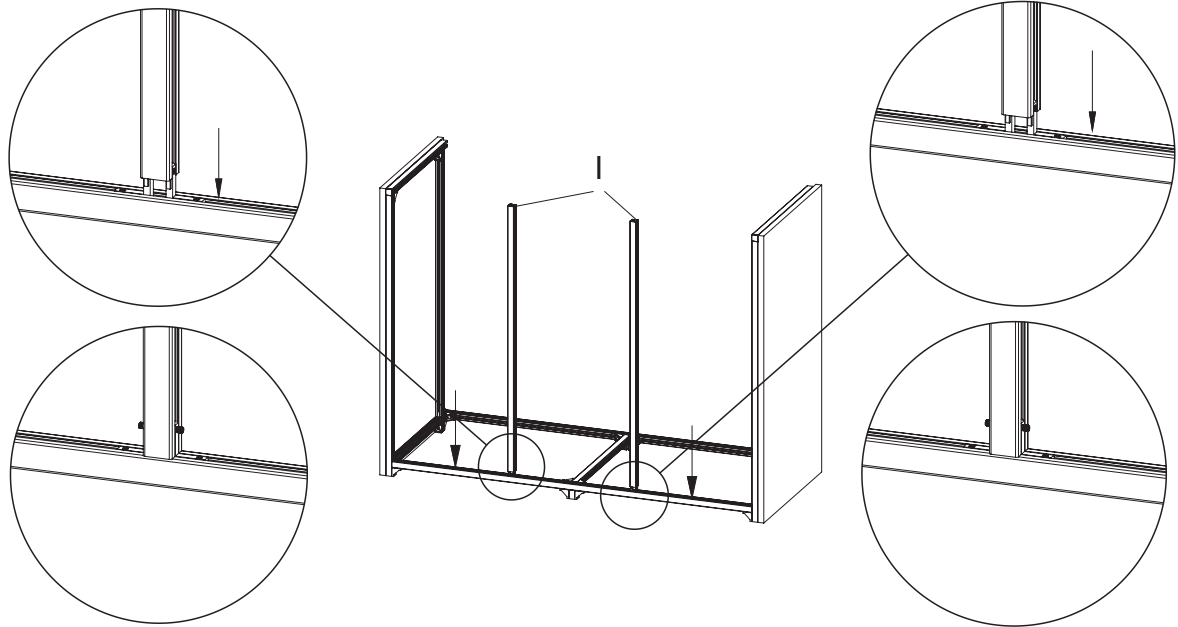


06


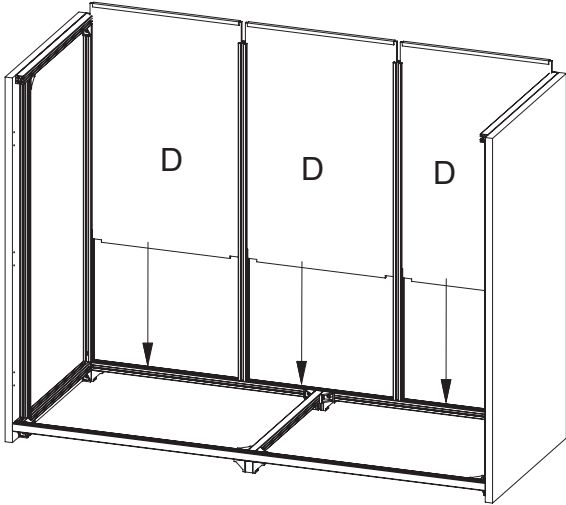


07

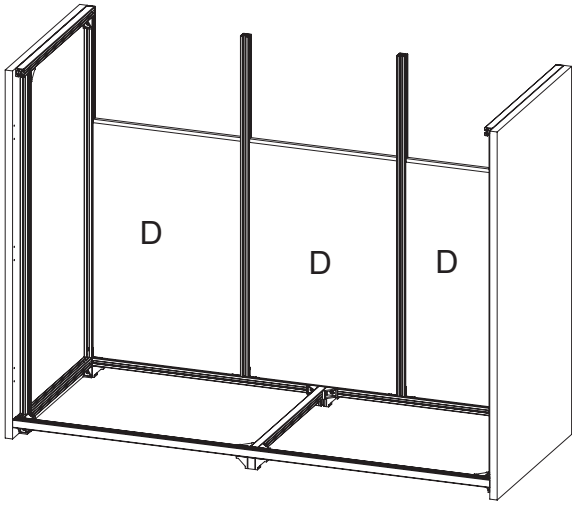


08

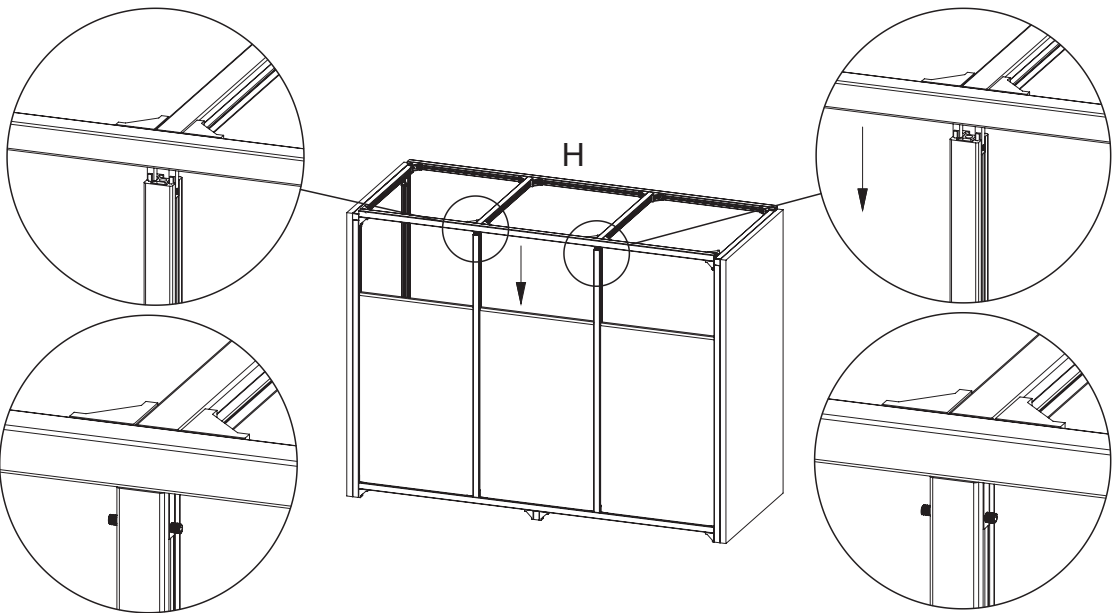

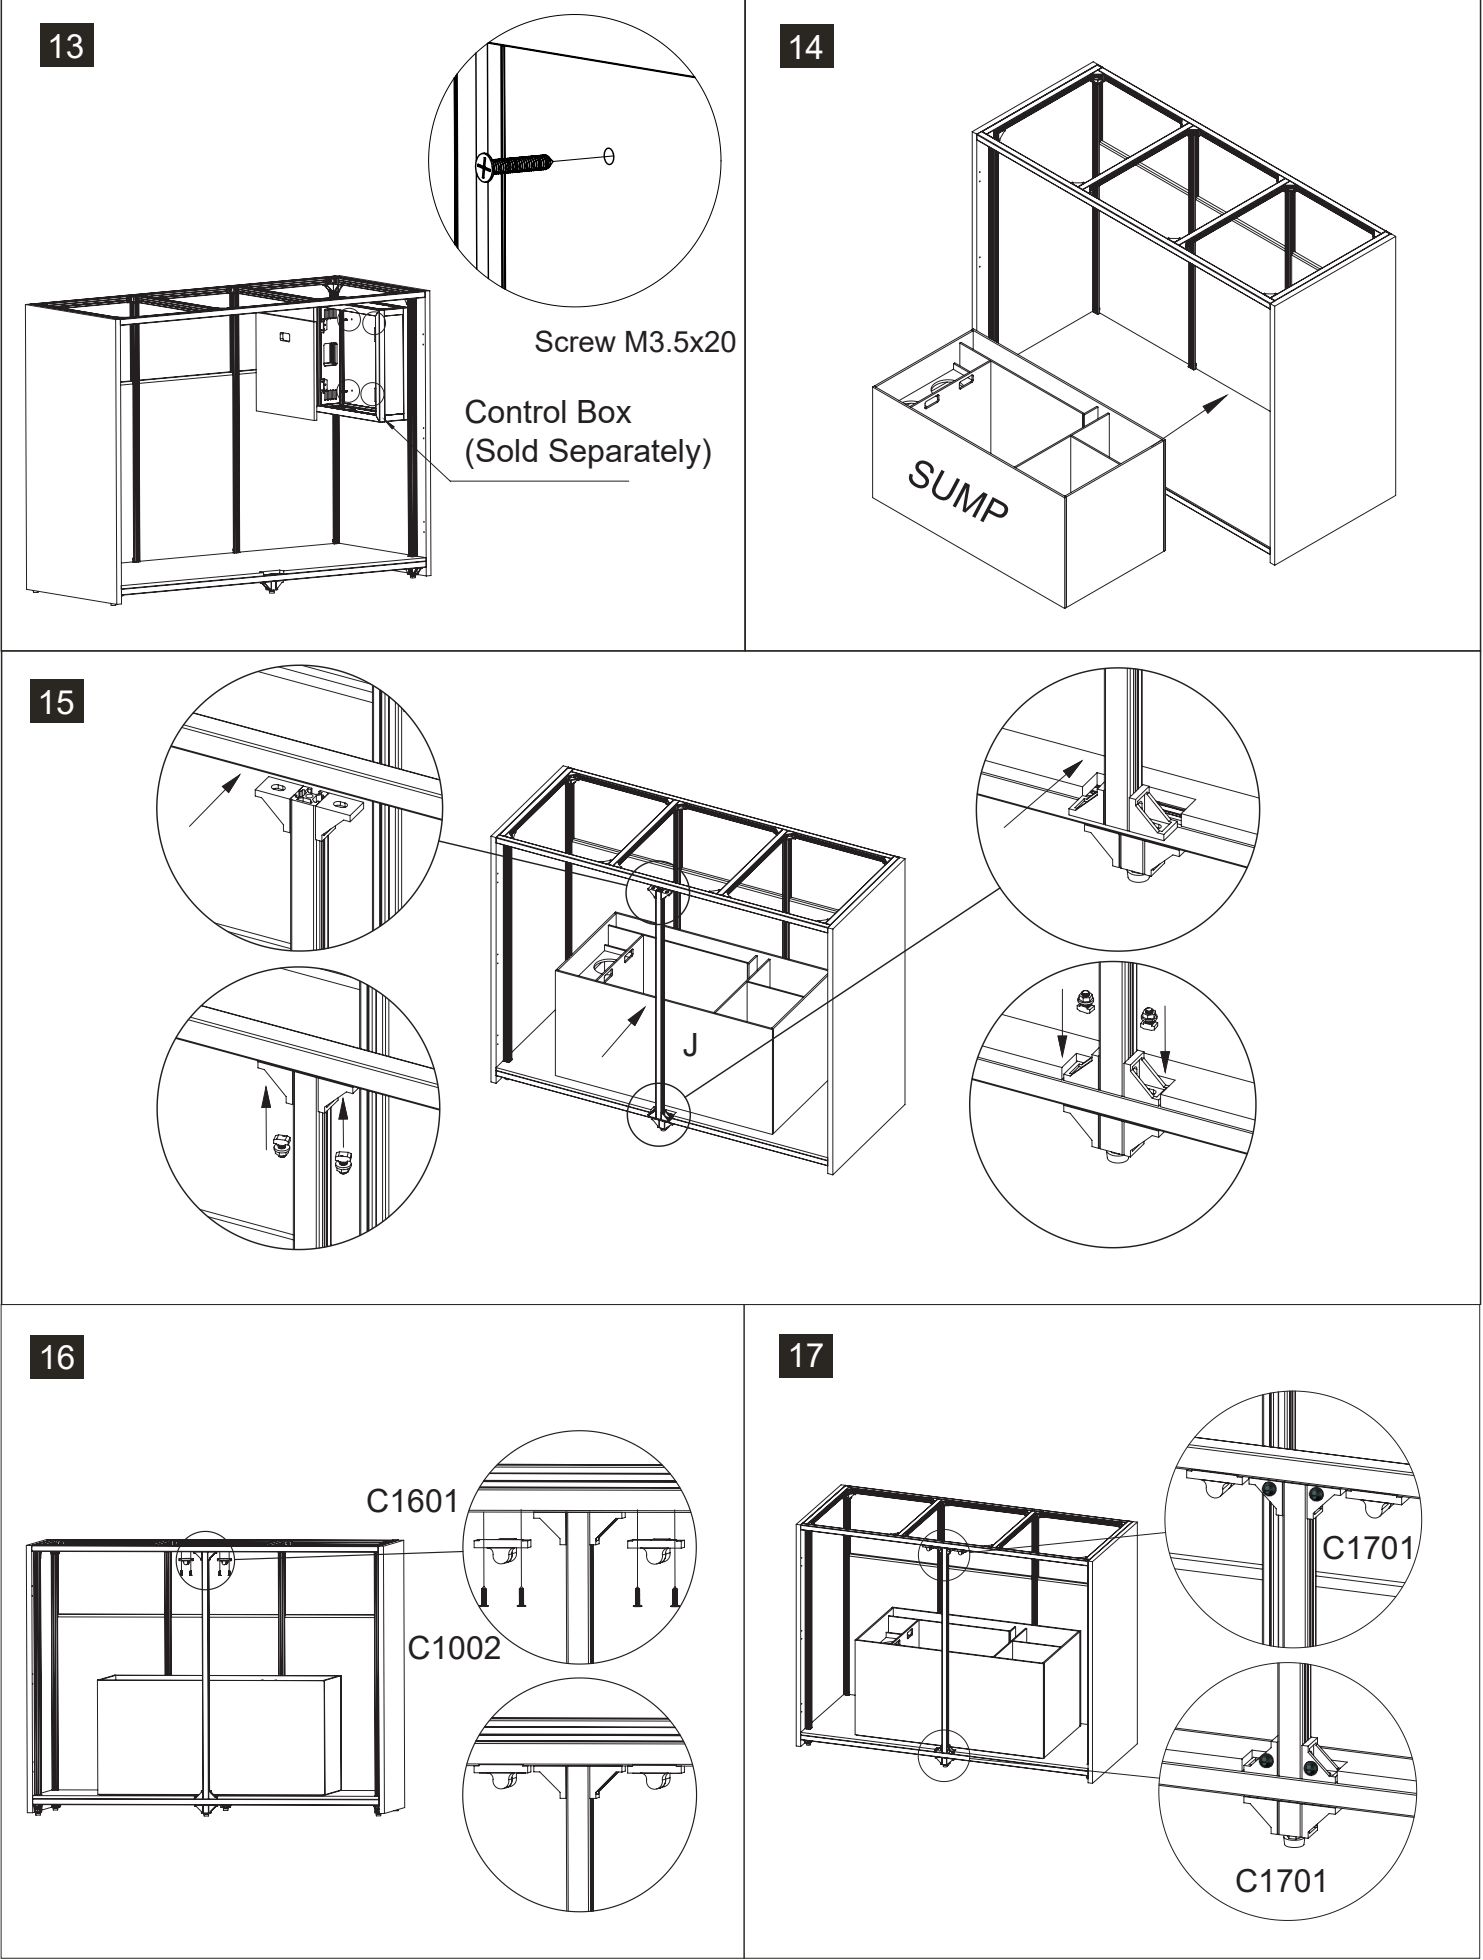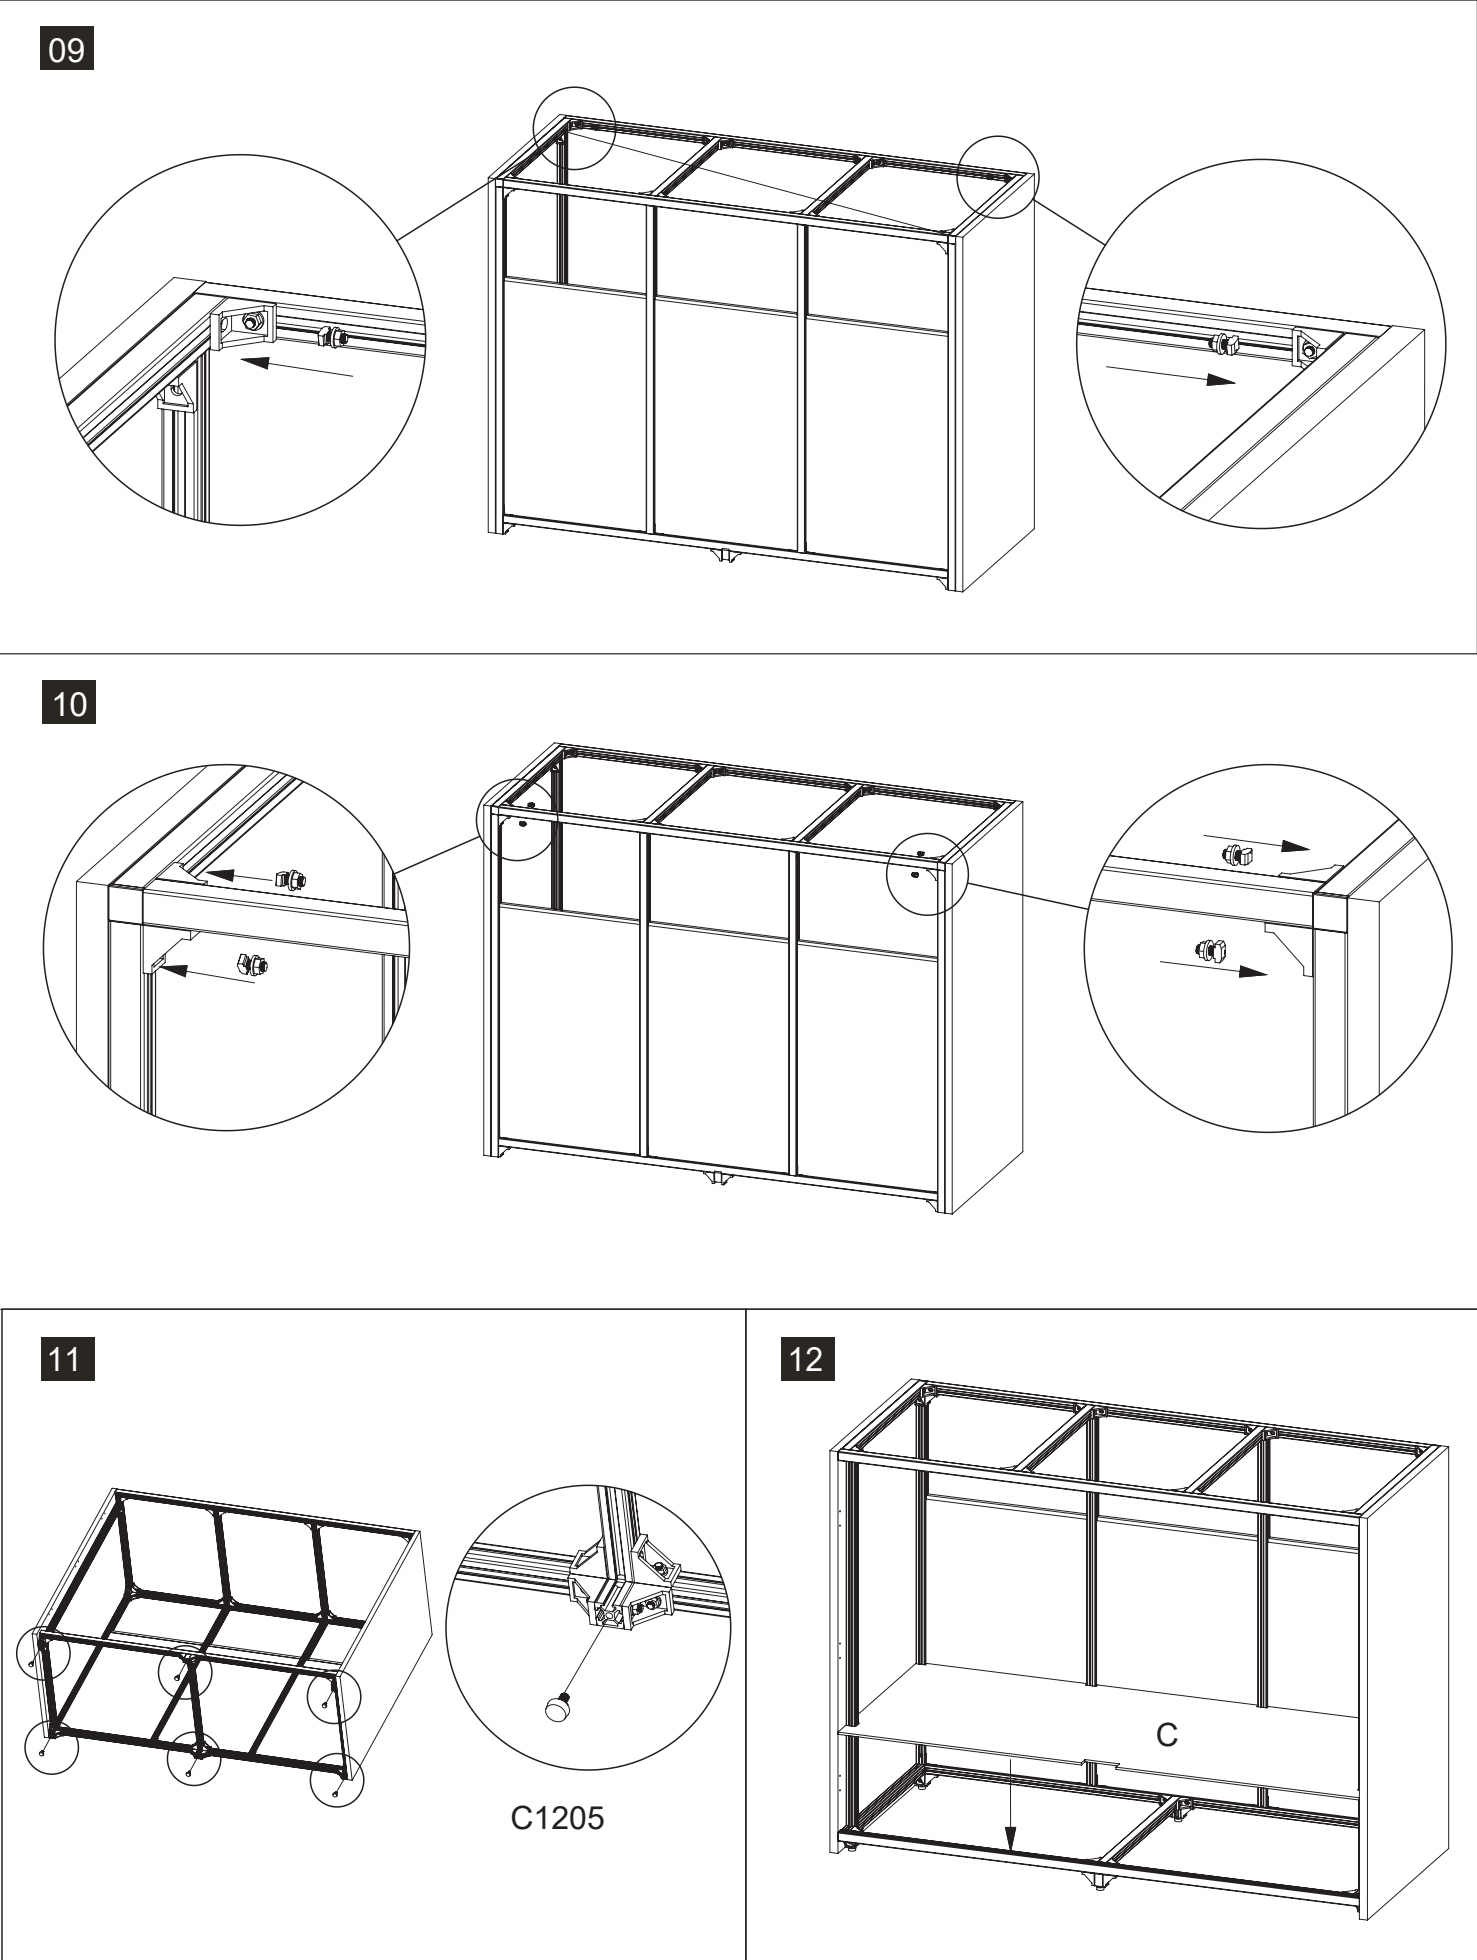


18

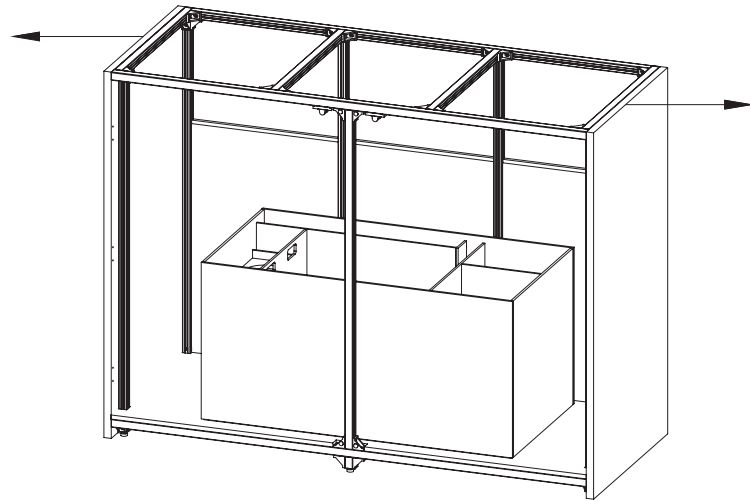


Caution:

If your cabinet has any side-to-side sway, do not proceed further. There is hardware that is not tightened fully, or corner bracket screws are not in the proper orientation.

19

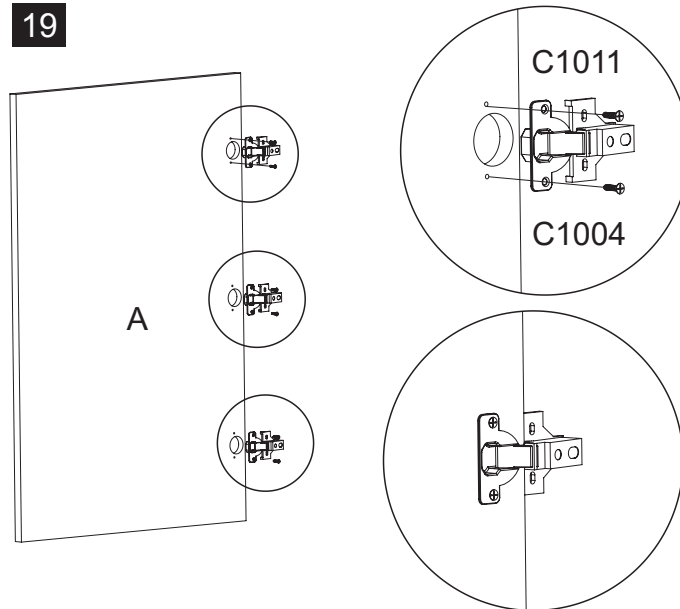

20

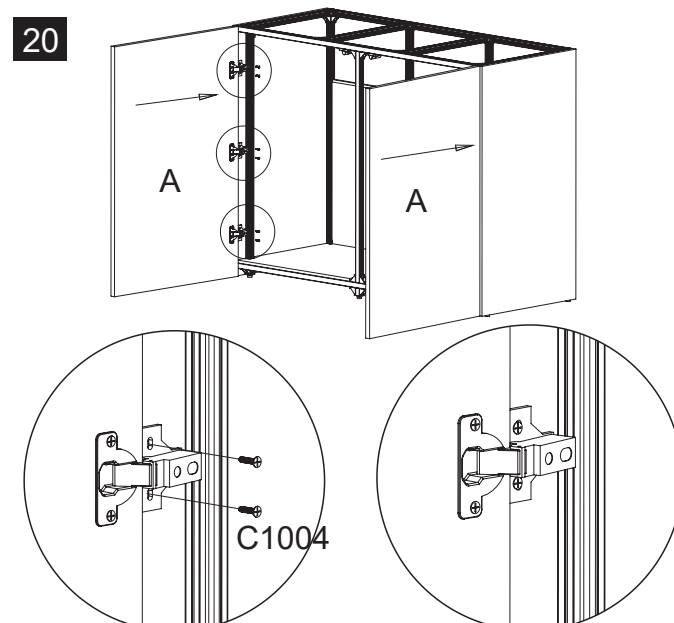

21

