

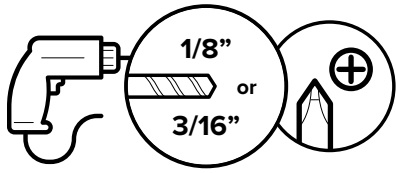



INSTALLATION INSTRUCTIONS

TOOLS NEEDED







CONTENTS




SCREW & ANCHOR INSTALLATION

Step 1: Using a stud finder, find the left-most wall stud and mark the wall. **Step 2:** Adhere the included paper tape measure to the wall with the left edge at your mark, making sure to be level. Mark the wall/ruler every 16". **Step 3:** If installing into studs, use a 1/8" drill bit to drill your holes. If not, use a 3/16" drill bit, drill your holes and insert each anchor. **Step 4:** After unscrewing the bolt from each clip, place the clip-rear over the anchor and install. Repeat for the remaining clips and center your textile for final placement.




Note: It is recommended to hit wall studs, which are typically 16" apart, so advanced planning of your textile size and clip location is important. For textiles under 1/4 lb. per clip, foam tape has been included and may be used. See opposite side for foam tape installation.

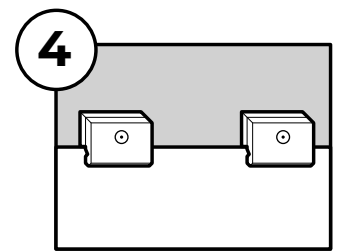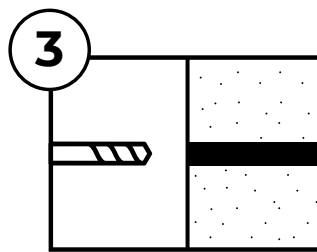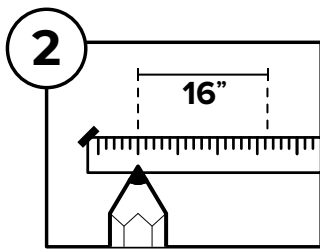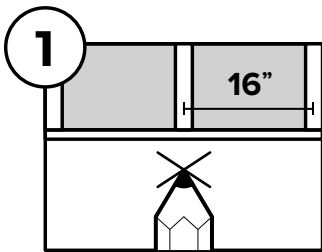

TOOLS NEEDED

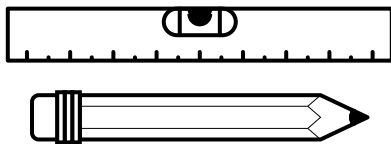

CONTENTS

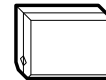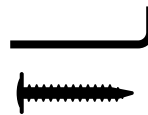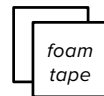

FOAM TAPE INSTALL

Step 1: Clean the install location with mild soap and water and allow to dry completely. Unfold the paper tape measure and mark the locations where you would like the center of each clip. **Step 2:** Unscrew the bolt from each clip, align center hole of the clip-back to the marks on your measuring tape. Add your textile and return the clip-front and bolt before tightening with the included allen key. **Step 3:** Flip your textile and installed clips over and apply two foam squares to each clip, pressing firmly for a few seconds to ensure adhesion. Adhere the tape measure to the wall making sure to be level. (download a free leveling apps for both iOS and Android). **Step 4:** Peel the protective backing from the foam tape and using the paper tape measure as a guide, install your textile. Once in place, press each clip firmly for several seconds to ensure adhesion.

Note: Non-permanent foam tape is included and should not be used for textiles greater than 1/4 lb. per clip. For heavier items, please see opposite side for screw installation.

