


BUNK BED

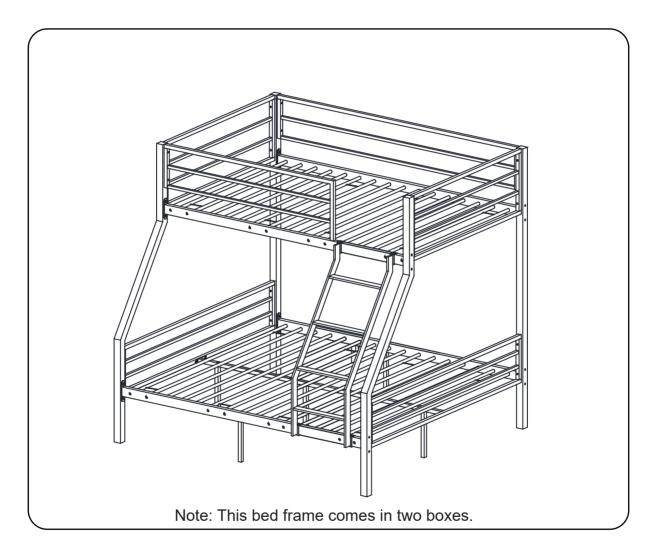

Thank you for your purchase.

If you have difficulty with assembly or find a part is missing or damaged, please don't hesitate to contact us for solution. Here is how we can connect:

Email: Support@bonnlo.com

Facebook: https://www.facebook.com/BonnloDirect/
Please attach your Order ID so we can assist you better.

Introduction

Guide of Manual

Please read the following instruction carefully and use the productproperly.

Please keep this manual and hand it over when you transfer the product.

This summary may not include every detailed information of all variations and considered steps. Please contact us when further information and help needed.

Before Starting

Recommend no. of people needed for assembly:4-5

Read each section carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.

Please assemble the product according to the steps on the diagram strictly. Do not fully tighten the screws until all pieces are situated in place.

For continued use, it's suggested you regularly check the tightness of bolts and connections to ensure safety.

Work in spacious area, preferably on a carpet, near the place the unit will be


Warning

Keep all accessories and packaging of this product away from babies, children and pets as they potentially


The units contains small parts which could be a choking hazard for small children. Children should be under adult supervision at all times or serious injury could occur.

Do not put the product in a humid environment for a long time to prevent mildew. Keep the product away from sharp objects and corrosive chemicals to avoid damage.

Part List 1

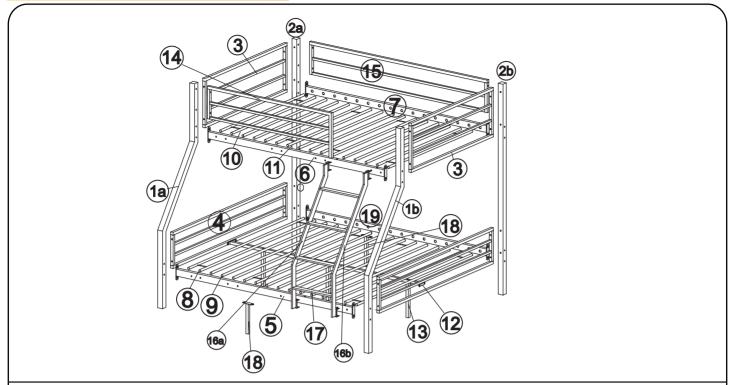

COMPONENTS NO. **DESCRIPTION** QTY DIMENSION 1pc 1a Front left column 40x420x1520mm 1b 1pc Front right column 40x420x1520mm 2a Rear left column 40x40x1520mm 1pc 2b 1pc Rear right column 40x40x1520mm 2pcs 3 Upper bed side fence 20x355x975mm 4 Lower bed side fence 20x260x1355mm 2pcs 5 1pc Lower bed front bar 25x110x1900mm 6 1pc Upper bed front bar 25x110x1900mm 7 1pc Upper bed rear bar 25x110x1900mm 8 Ф16х1416 4pcs Lower bed round tube 9 Ф16х1413 8pcs Lower bed round tube with built-in nut 10 Ф16х1036 4pcs Upper bed round tube 11 Ф16х1033 8pcs Upper bed round tube with built-in nut 12 1pc Middle bar 20x20x1920mm 13 3pcs Supporting legs 20x20x260mm 14 Upper bed front fence 20x325x1451mm 1pc 15 1pc Upper bed rear fence 20x234x1900mm 16a Ladder left bracket 1pc 20x920x438mm 16b Ladder right bracket 1pc 20x920x438mm 17 4pcs Pedal 10x40x323mm Middle support leg 18 25x25x260mm 2pcs Lower bed rear bar 19 25x110x1900mm 1pc

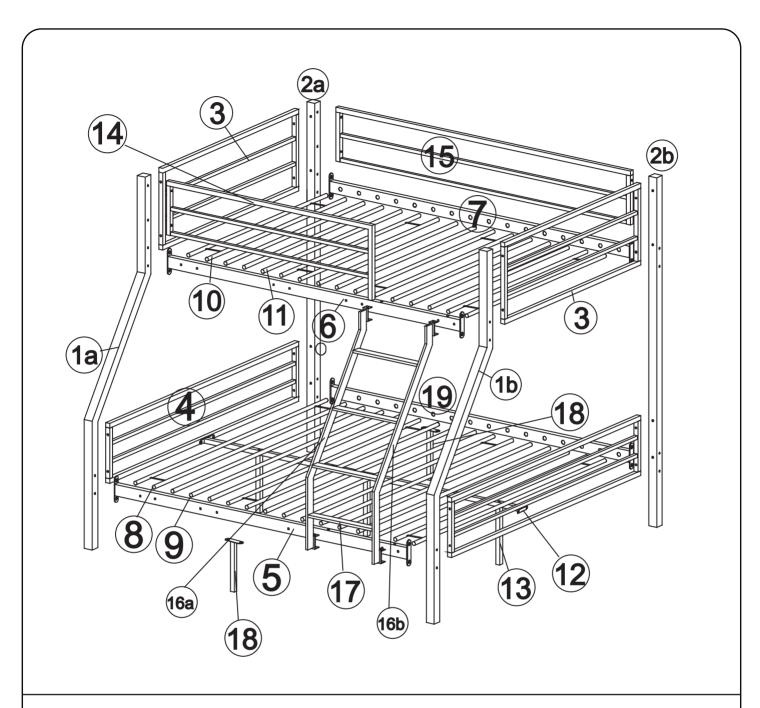


COMPONENTS

NO.	. DESCRIPTION DIME		DIMENSION	QTY
Α	Screws		M6x10	8pcs
В	Screws		M6x20	40pcs
С	Screws		M6X35	41pcs
D	Screws		M6X45	4pcs
Е	Screws		M6X65	1pc
F	Nuts		M6X18	20pcs
G	Flat Washer			42pcs
Н	Rubber Mat			4pcs
\Box	Spanner		M6	2pcs

Assembly Steps

STEP 1

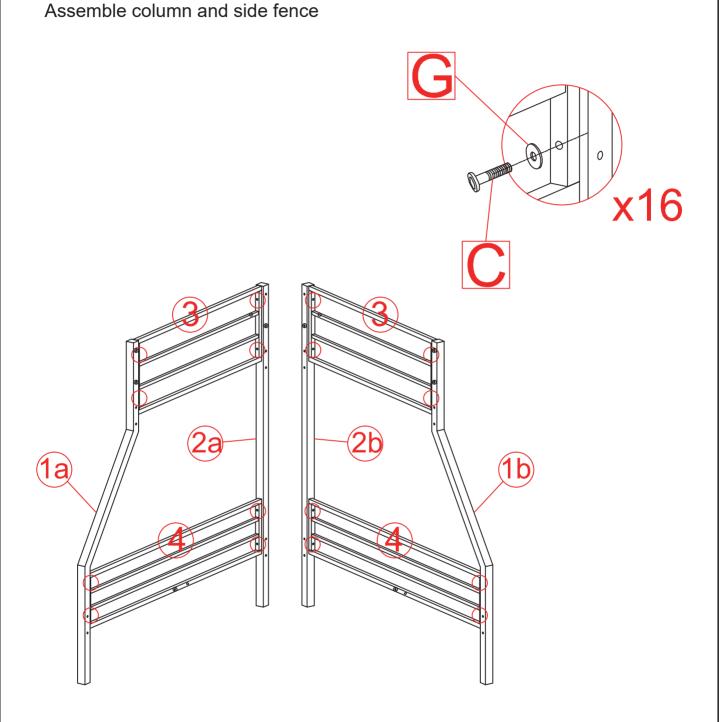


Assembly method: M6x35 screw (C) is screwed from the screw hole on fence inside. Connect fence (3 & 4) to column (1a & 1b & 2a &2b). And pad flat washer (G) between screw and fence.

CODE	HARDWARE	QTY
С	⊕ M6X35	16
G	0	16

STEP 2

Assemble lower bed plat

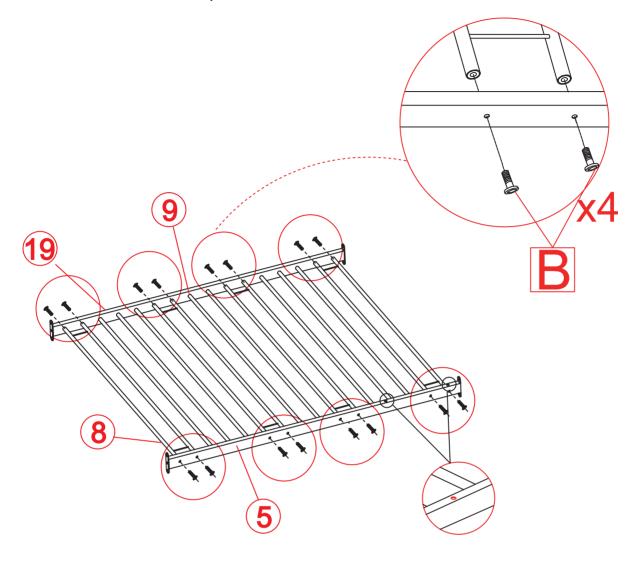


Assembly method:

This step requires at least 4 people to assemble, please install the slat from one end to the other. Put Round Tube with built-in nut (8) and the Round Tube (9) into the bed bar (5 and 19). Note that the Round Tube with the built-in nut (8) is placed in round holes with screw holes, and the other holes are all covered with Round Tubes (9). Fix Bed Bar (5 and 19) and Round Tubes with built-in nut (8) with Screw (B).

CODE	HARDWARE	QTY
В	∅ M6X20	16
)

STEP 3

Assemble upper bed plates

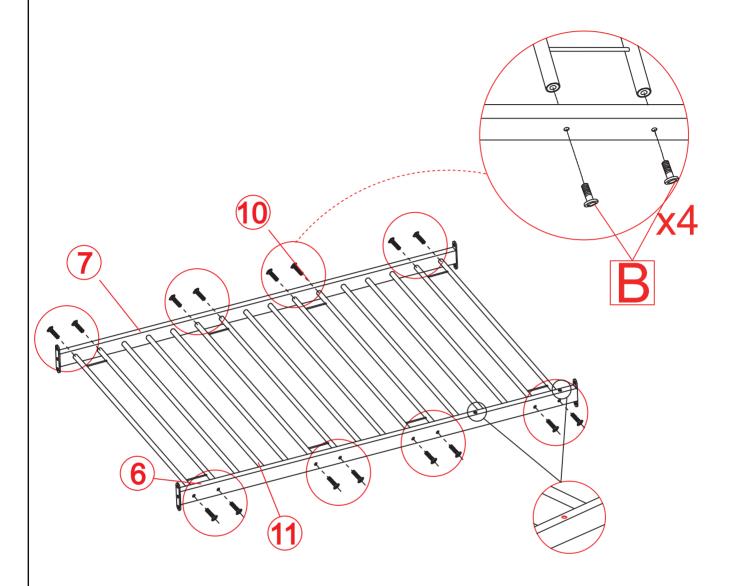


Assembly method:

This step requires at least 4 people to assemble, please install the slat from one end to the other. Insert round tube (11) and round tube with built-in nut (10) to bed bar (7 & 11). Note that the Round Tube with the built-in nut (10) is placed in round holes with screw holes, and the other holes are all covered with Round Tubes (11). Fix Bed Bar (7 and 11) and Round Tubes with built-in nut (10) with Screw (B).

CODE	HARDWARE	QTY
В	∅ ⊐‱ M6X20	16

STEP 4

Assemble the two assembled sides and the bed plate together

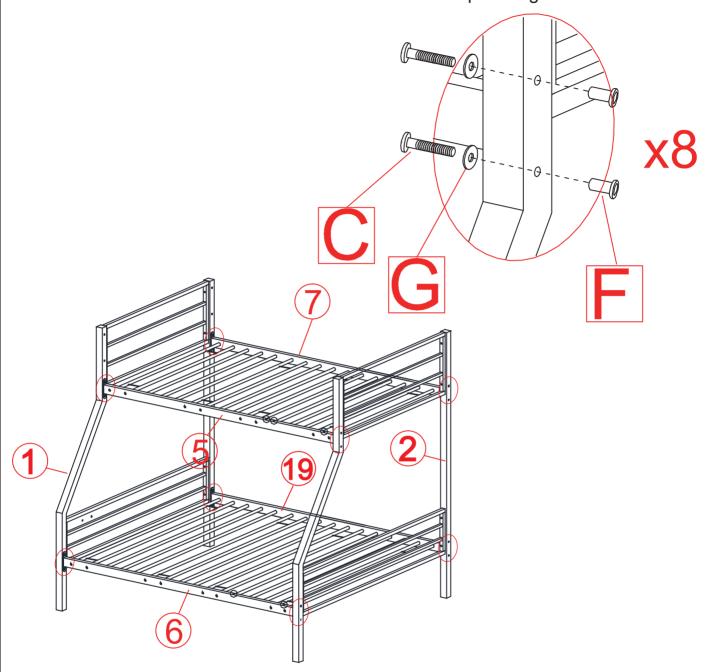


Assembly method:

Assemble M6x35 screw (C), M6x18 jcn nut (F) and flat washer (G) as shown. Assemble M6x35 screw (C) on the outside of column. Assemble one side of lower bed plate, the screw is fixed and do not tighten. And then install the other side. After the lower bed is fixed, fix the upper bed, and the assembly method is the same as that of the lower bed.


CODE	HARDWARE		QTY
С		M6X35	16
F		M6X18	16
G	0		16

STEP 5

Assemble upper bed fence

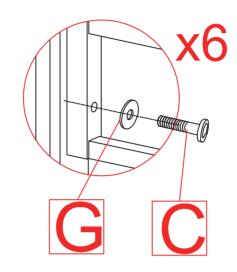



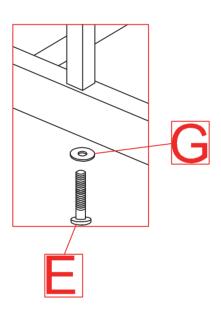


Assembly method:

Firstly, assemble circular marks part on the figure. Fix fence (14 & 15) on the column with M6x35 screw (C) and flat washer (G). Then assemble square marks part on the figure. M6x65 screw (E) and flat washer (G) are screwed upward from screw hole on the bottom of bed bar to fix fence (14).

CODE	HARDWARE	QTY
С	∅ M6X35	6
E	⊕ № № № № № № № № № № № № № № № № № № №	1
G	0	7


STEP 6

Assemble middle bar and supporting legs of lower bed

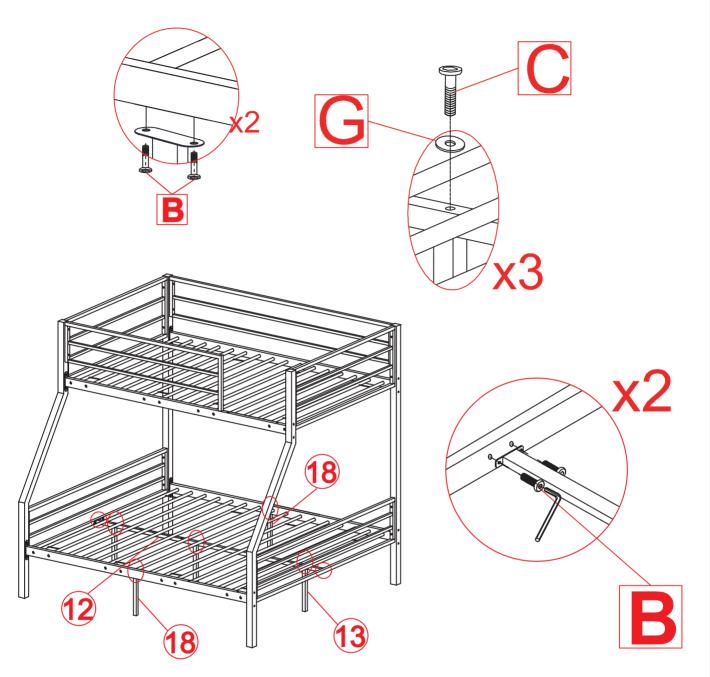

- a.Use Screw (B) to connect Middle Bar (12) to the two sides of the fence.
- b.Use Screw(C) to connect the Support Leg (13) to the Middle Bar (12) with Washer (G) on the middle.
- c.Use Screw(B) to connect the middle support leg to the Lower bed Side Rail(5)

CODE	HARDWARE		QTY
С		M6X35	3
G	0		3
В		M6X20	8

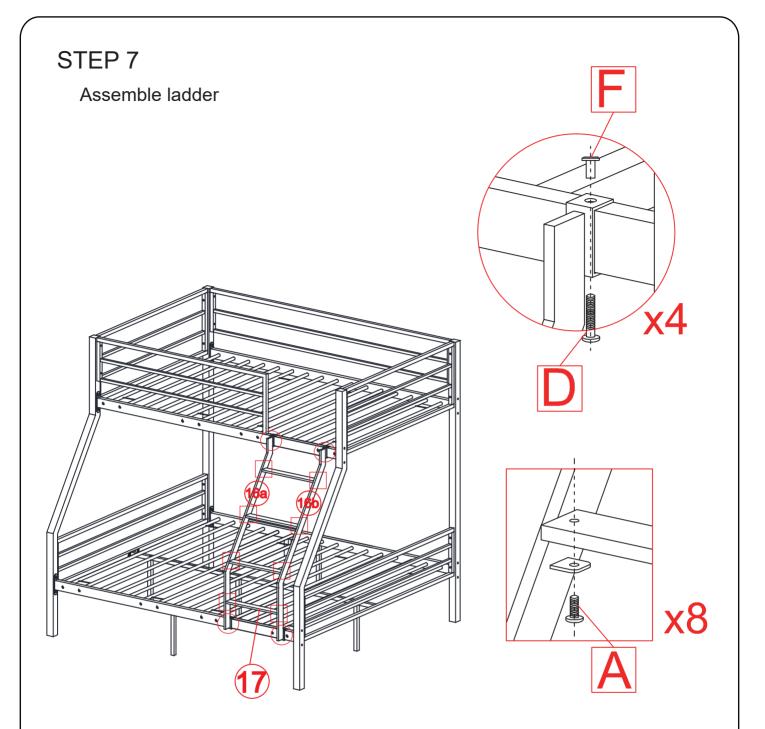


Assembly method:

Firstly, align U-shaped slot of ladder bracket (16a & 16b) with screw hole on the bed bar as shown in the figure, insert it upward from screw hole with M6x18 jcn nut (F). M6x45 screw (D) is screwed in and fixed upward from screw hole on the bottom of bed bar. Don't tighten the screws. Then place the pedal (17) on the iron sheet with screw holes on the bracket (16a & 16b) and screw downward with M6x10 screw (A). After screwing all screws, tighten all screws on the bed frame in turn.

CODE	HARDWARE		QTY
Α	()	M6X10	8
D		M6X45	4
F		M6X18	4

STEP 8

Assemble rubber mat on the ladder pedal

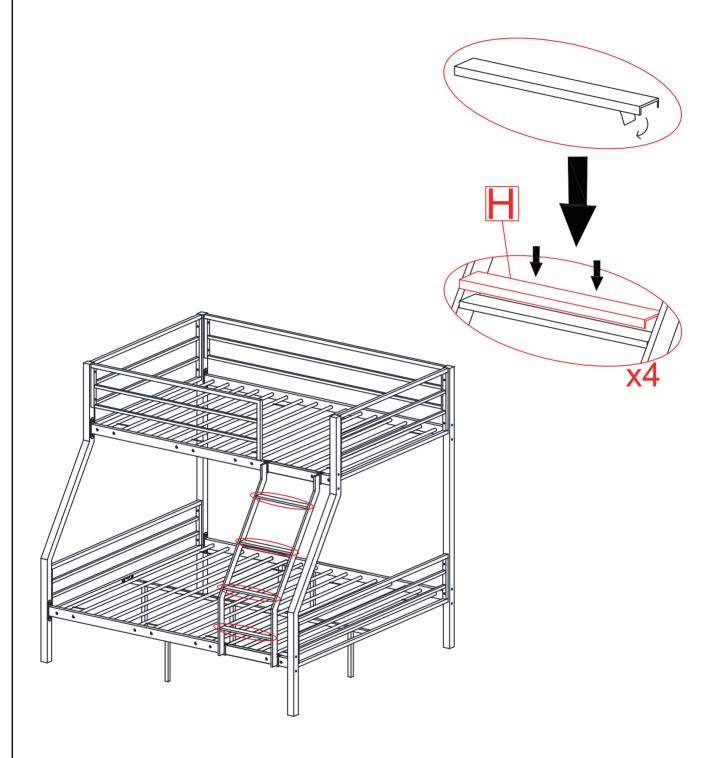

Assembly method:

Remove the oily paper on the back of Rubber Mat (H) and attach it to the ladder pedal directly and press it.

CODE	HARDWARE	QTY	
Н		4	