



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting



Issue 1

TL261A LDV MAXUS 2007 – 2011 / SAIC MOTOR MAXUS V80 2016>



Item	Qty	Description	Item	Qty	Description
A	1	TL261A Crossmember	D	2	M16 x 55 Bolts & Nyloc Nuts
B	2	Angle Brackets	E	16	M12 x 40 Bolts, 2 Nyloc Nuts & 14 S/P Washers
C	1	Coupling Spacer	F	18	12 x 25 Flat Washers

TOWBAR INSTALLATION;


1. If fitted, remove the Towing eye from the O/S chassis member (this is NOT refitted with Towbar assembly).
2. Using Item E with Item F fit Item A to the existing mounting points in each chassis member.
3. Using Item E with Item F fit Items B to Item A.
4. Using Item E with Item F fit Items B to the vertical mounting point in each chassis member.
5. Using Item D fit your desired ball bracket and wiring plate (Not supplied in this kit) to Item A using Item C as a spacer on the lower setting and as a clamp plate on the upper setting.
6. Fully tighten all fixings ensuring the Towbar is rigid, square and secure.

TL261A


14x FIXINGS MAXUS FROM VIN 22190 2007 - 2011
10x FIXINGS V80 2016>

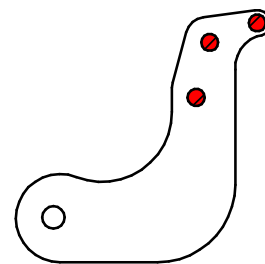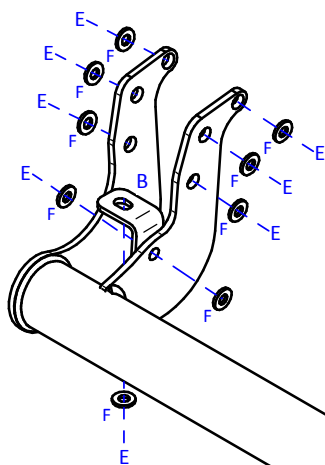

D Value: 13.62
MTC: 2300 Kg

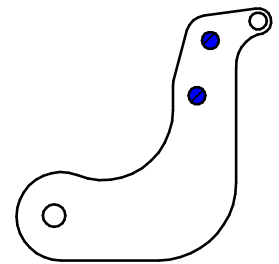

D Value: 8.77
MTC: 1200 Kg

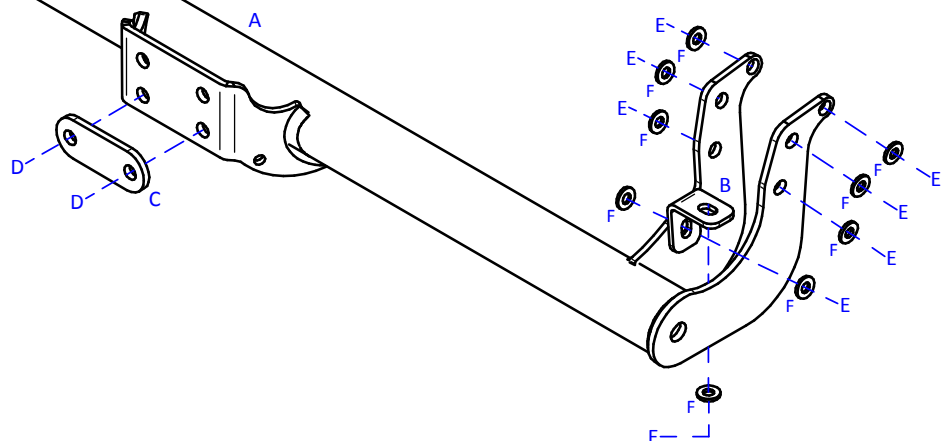

Note:

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.