

Tow-Trust Towbars



Important: Please read General Notes overleaf before fitting


Issue 2

TMZ6AVK MAZDA CX-5 2012> (Inc. AdBlue Models)

Item	Qty	Description	Item	Qty	Description
Α	1	TMZ6A Crossmember	E	1	Flip Up Socket Plate (TTFP/LH)
В	2	Handed Side Arms	F	4	M12 x 35 x 1.25 Bolts & S/P Washers
С	1	6209 Detachable Neck	G	8	M12 x 40 Bolts, 6 Nyloc Nuts & 2 S/P Washers
D	2	M12 Clamp Plates	Н	2	M12 x 25 Bolts & S/P Washers
			J	2	M12 x 22 Bolts & S/P Washers
			K	20	12 x 25 Flat Washers

TOWBAR INSTALLATION:

- 1. Locate the Towbar mounting points on the outside face of each chassis member, these are usually covered with tape.
- 2. Remove the fixings from the lower edge of the bumper.
- 3. Using Item F with Item K loosely fix the N/S side arm (Item B) to the forward mounting point only.
- **4.** Insert Item **D** through the hole in the lower face of the N/S chassis member only and fix Item **B** through the rearmost fixing point using Item **G** with Item **K**.
- 5. Insert Item **A** into the bumper and fix to the N/S side arm (Item **B**) using Item **G** with Item **K**. (Some models require the exhaust silencer to be lowered to gain access into the bumper)
- 6. Using Item F with Item K loosely fix the O/S side arm (Item B) to the forward mounting point only.
- 7. Insert Item **D** through the hole in the lower face of the O/S chassis member and fix Item **B** through the rearmost fixing point using Item **G** with Item **K**. (**Note:** Some models require Item **F** at this point as the vehicle has captive thread)
- 8. Using Item **G** with Item **K** fix Item **A** to the O/S side arm (Item **B**).
- 9. Using Item J with Item K and Item H with Item K fix Item C and Item E to Item A.
- 10. Fully tighten all fixings ensuring the Towbar is rigid, square and secure. Refit all fixings to the bumpers lower edge.

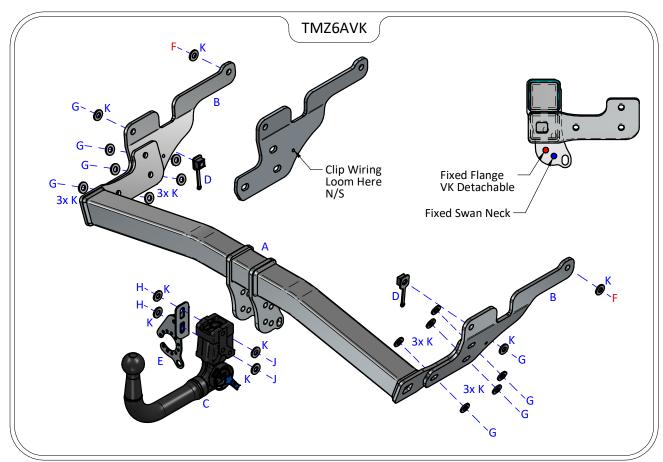

Note:

- 1. Torque Settings see notes overleaf.
- 2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.