



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 5

TIVE3 IVECO DAILY 30S – 35S 35C – 40C – 50C

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	E	2	M16 x 50 Bolts & Nyloc Nuts
B	2	Handed Side Arms	F	8	M12 x 50 Bolts (Grade 10.9) & Nyloc Nuts
C	2	Spacer Plates	G	8	M12 x 40 Bolts (Grade 10.9) & Nyloc Nuts
D	8	12 x 40 Flat Washers	H	24	12 x 25 Flat Washers

TOWBAR INSTALLATION:

1. Locate four Towbar mounting points in each chassis member.
2. Using Item F with Item H and Item D fix each correct side arm (Item B) and spacer plate (Item C) to each correct chassis member.
3. Using Item G with Item H fix Item A between each side arm. (See sketch for settings)
4. Fully tighten all fixings ensuring the Towbar is rigid square and secure.
5. For vehicles up to 3500Kg GVW use Item E to fix a 2 bolt Towball to Item A and fully tighten.
6. For vehicles over 3500Kg GVW a 4 bolt Towball must be used. (Tow-Trust 4 bolt Pin Ball Part No. V502L)

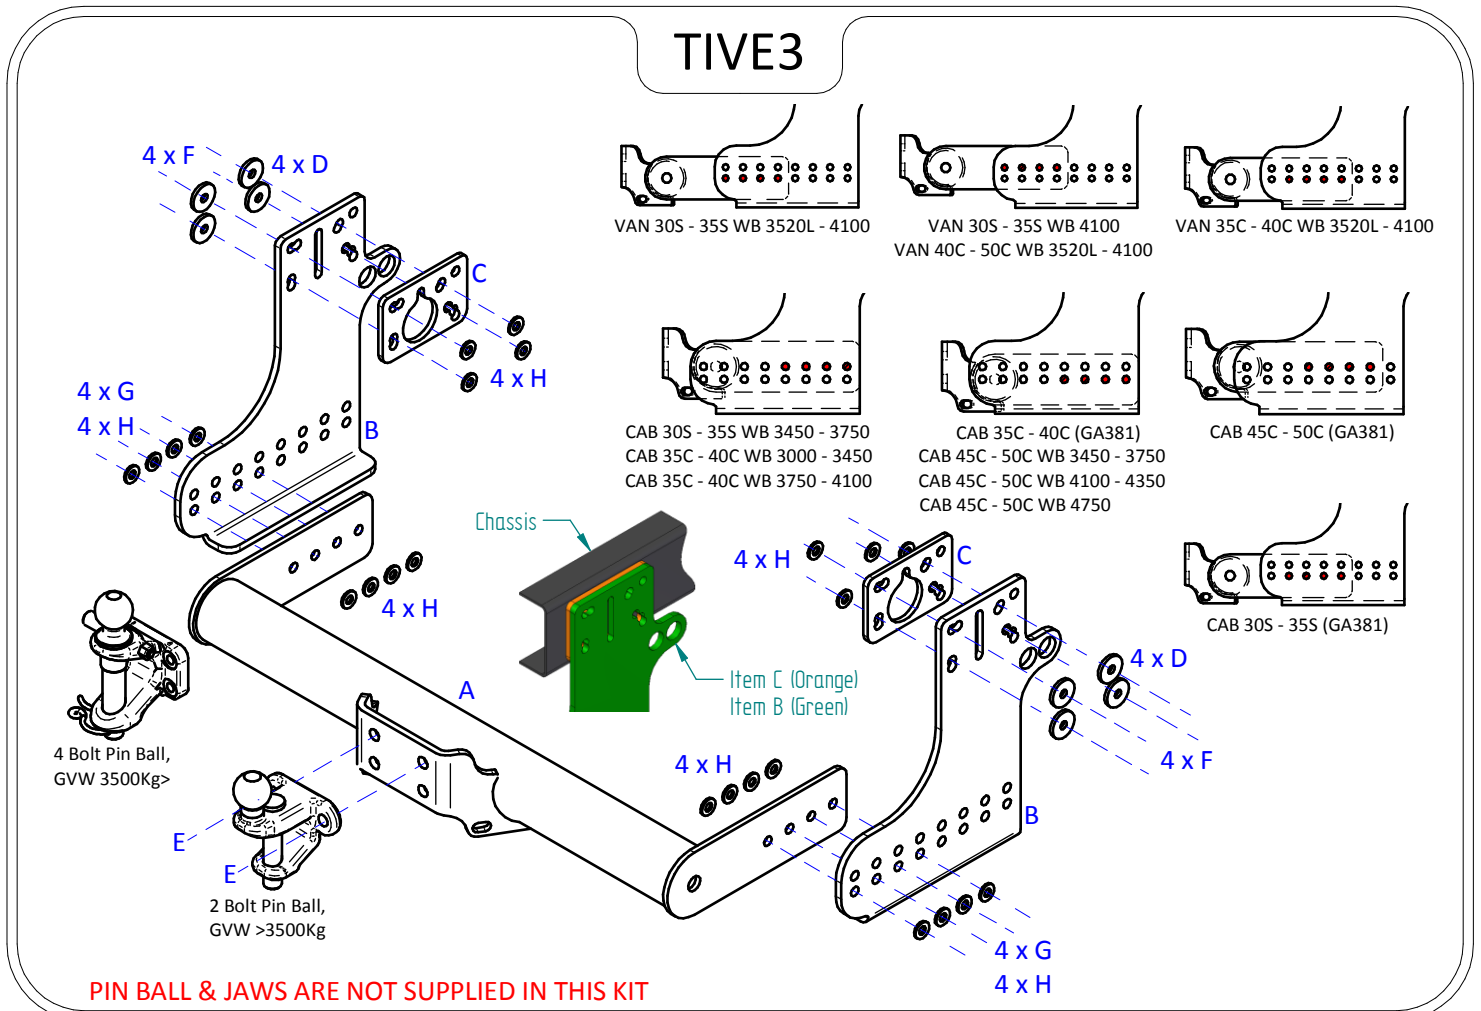

Note:

1. Recommended Torque Setting for M12 Grade 10.9 -130 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.