




# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

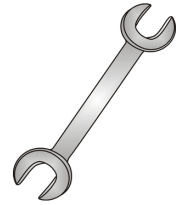


Issue 4

## TIVE4 IVECO DAILY 60C – 70C – 72C – 75C

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	D	10	M12 x 50 Bolts (Grade 10.9) & Nyloc Nuts
B	2	Handed Side Arms	E	8	M12 x 40 Bolts (Grade 10.9) & Nyloc Nuts
C	2	Spacer Plates	F	28	12 x 25 Flat Washers
			G	1	TIVE4-5 Socket Plate

### TOWBAR INSTALLATION:

- Using Item D with Item F fix Item B to each correct chassis member ensuring Item C is fitted between. (NOTE: You may need to remove the plastic wiring loom clip from the N/S chassis member)
- Using Item E with Item F fix Item A between each side arm. (See sketch for settings)
- Fully tighten all fixings ensuring Towbar is rigid, square and secure.

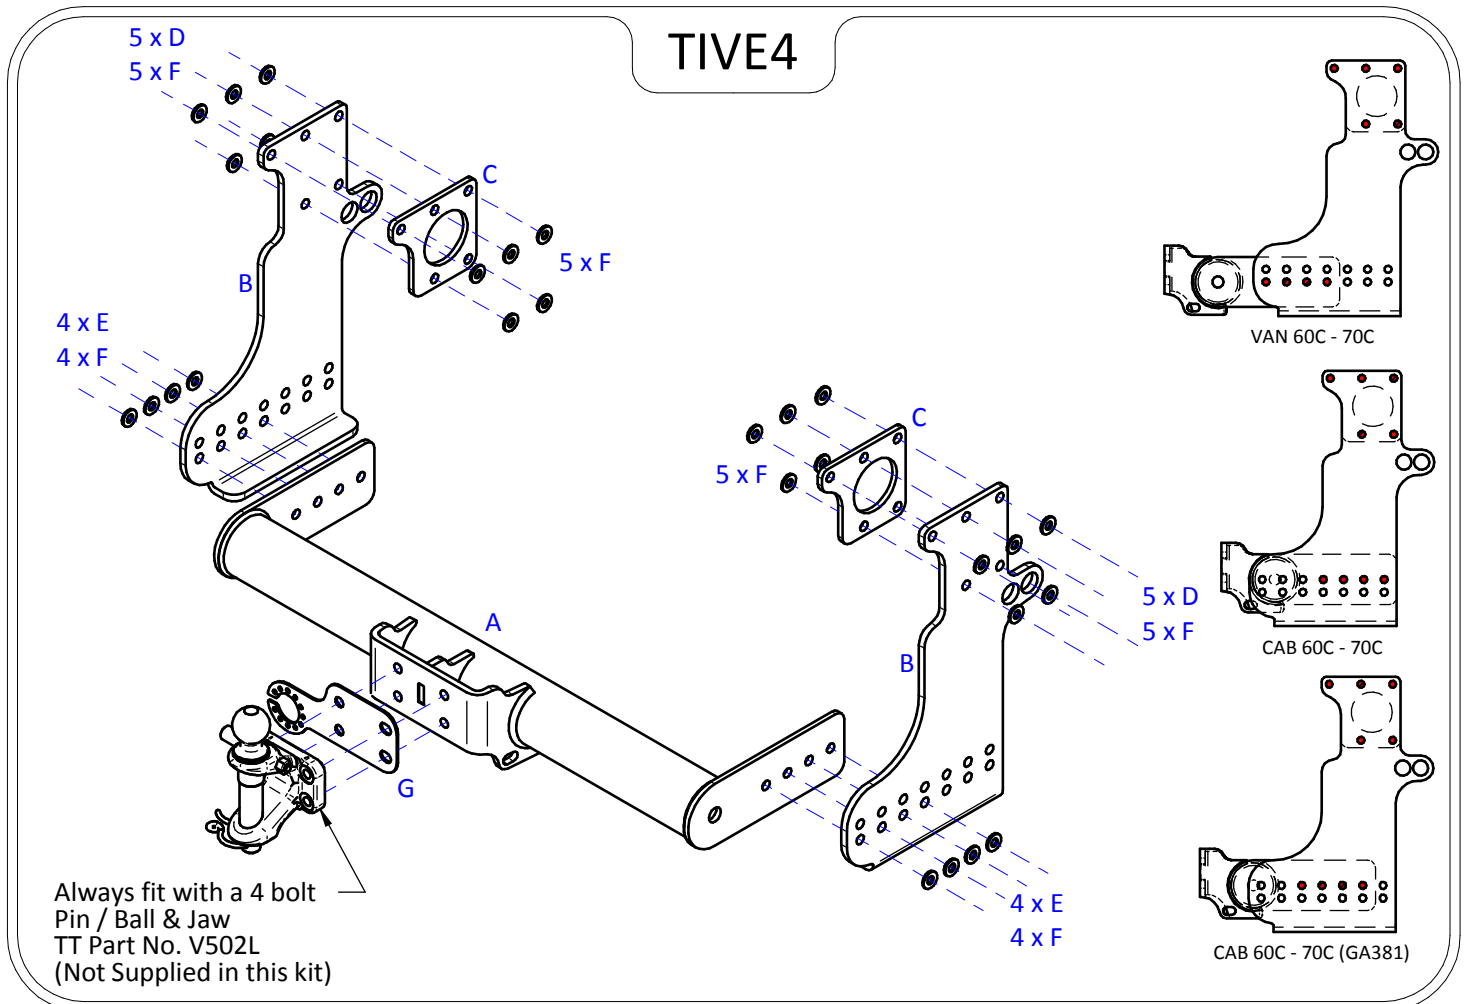

### Note:

- Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
- Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.