




Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

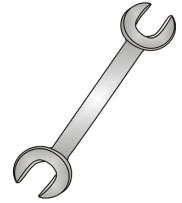


Issue 1

TiZ1H ISUZU D-MAX WITH BUMPER 2012>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	E	2	M16 x 50 Bolt & Nyloc Nuts
B	2	Handed Side Arms	F	6	M12 x 40 x 1.25 Bolts (Grade 10.9) & 6 S/P Washers
C	2	Handed Brackets	G	18	M12 x 40 Bolts (Grade 10.9), 12 Nyloc Nuts & 6 S/P Washers
D	2	Clamp Plates	H	24	12 x 30 Flat Washers
			J	1	Slider Face Plate
			K	2	Slider Pins & Clips

1. Locate the three fixings attaching the bumper arms to the chassis members.
2. One side at a time remove the three fixings from the chassis member and using Items F and Items H bolt Items B to them sandwiching the bumper arm between the chassis member and Item B.
3. Insert Item D into each chassis member and bolt Items C to the lower face using Items G and Items H.
4. Using Items G with Items H bolt Item A between the side arms (Items B).
5. Using Item E bolt your desired ball bracket and wiring plate (not supplied in this kit) to Item A. **(Std. Ball, Setting Central Setting)**
6. Fit Item J to Item A using Item K. SEE SKETCH for orientation of clips. **(Std. Ball, Setting Central Setting)**
7. Fully tighten all nuts and bolts ensuring Towbar is rigid square and secure.

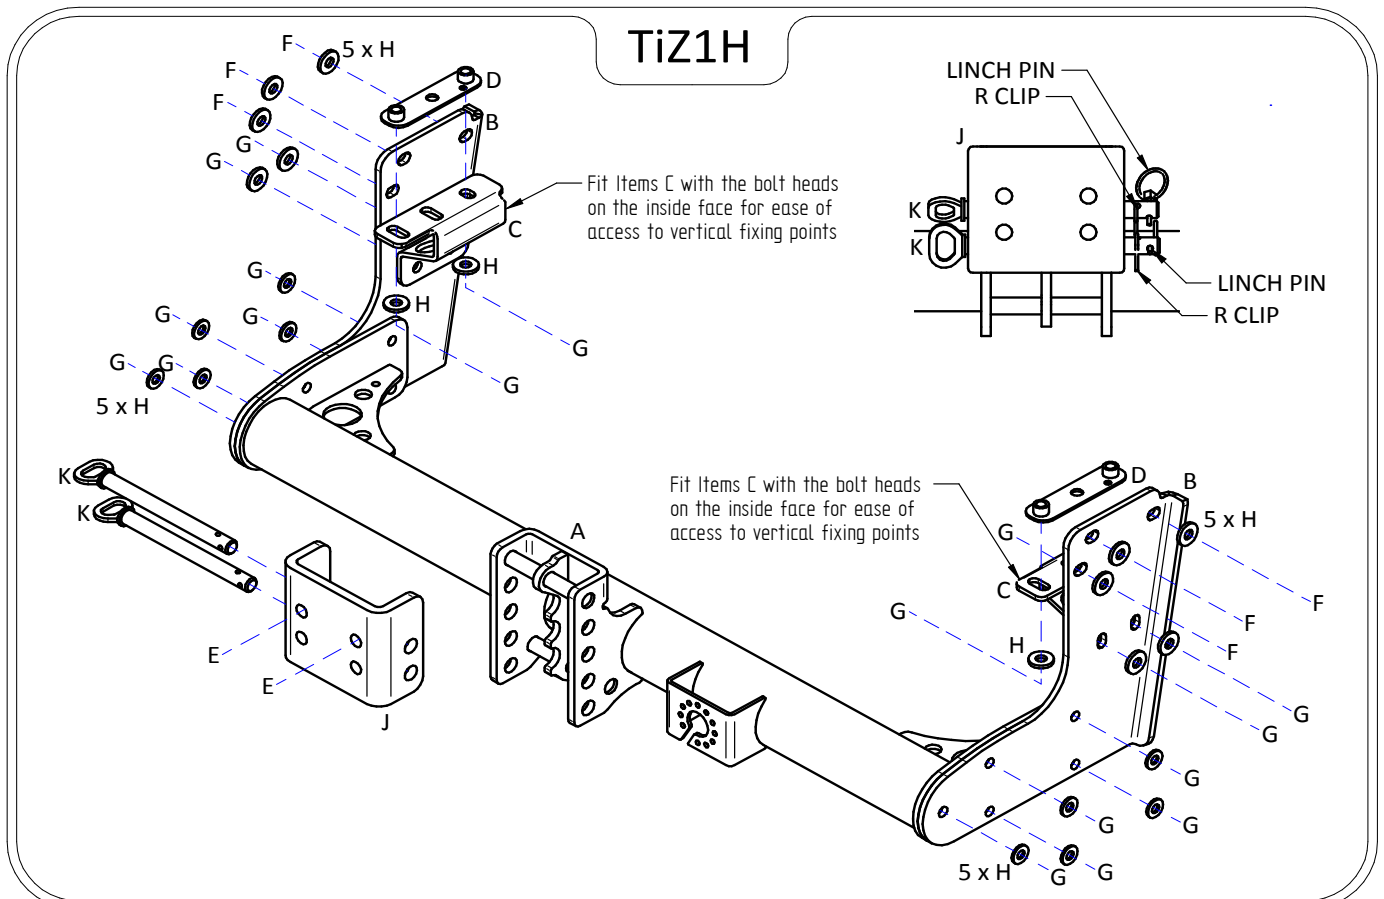

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.