




anony

408 - 9 Davies Ave.
Toronto, ON
M4M 2A6
+1 416 994 9617
sales@anony.ca

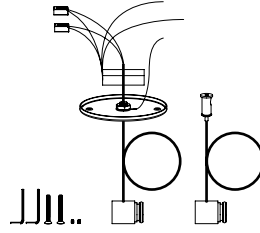

1. Disconnect power

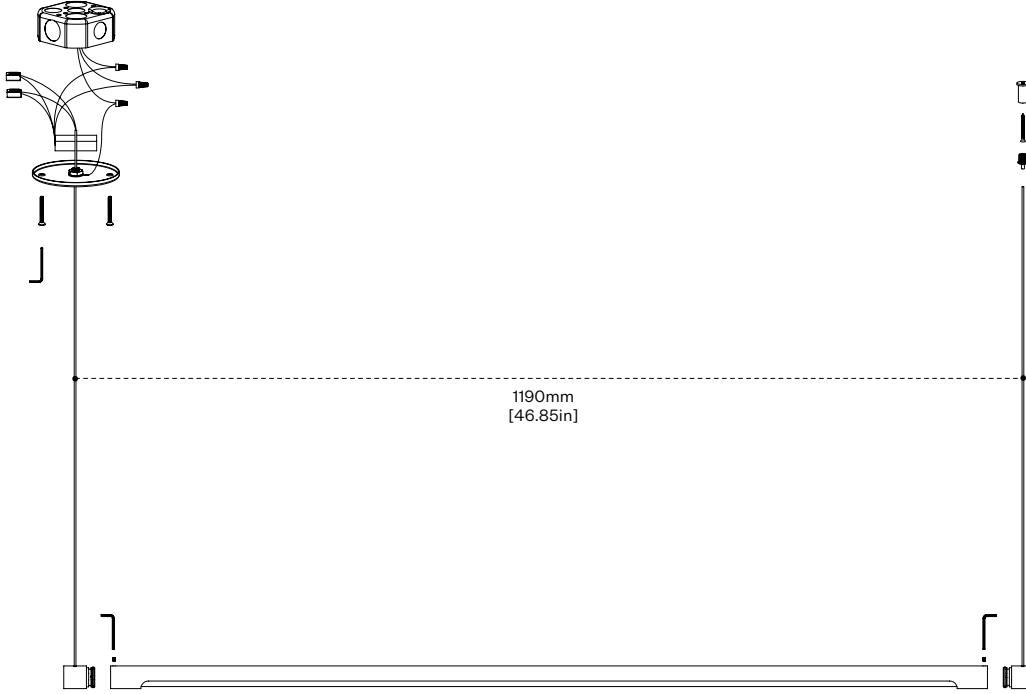

2. Layout point onto ceiling
3. Connect wires to junction box
4. Screw canopy plate to junction box




5. Connect & tighten set screws until secure


1220mm
[48in]

anony


408 - 9 Davies Ave.
Toronto, ON
M4M 2A6
+1 416 994 9617
sales@anony.ca

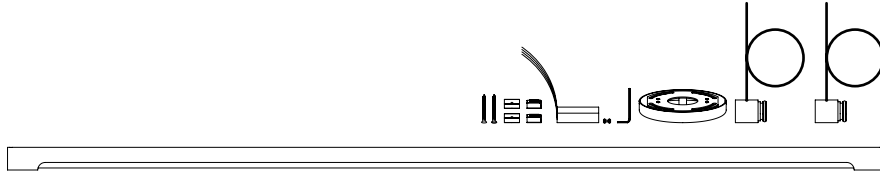

1. Disconnect power

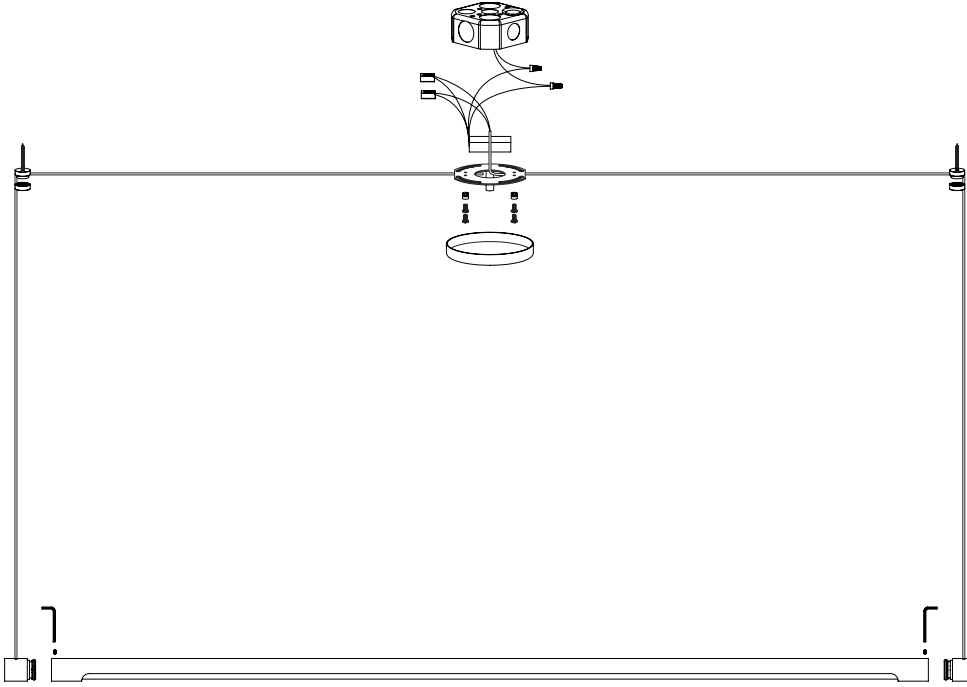

2. Layout points onto ceiling
3. Connect wires to junction box
4. Screw backplate to junction box
5. Tighten strain reliefs onto wire
6. Attach canopy to backplate

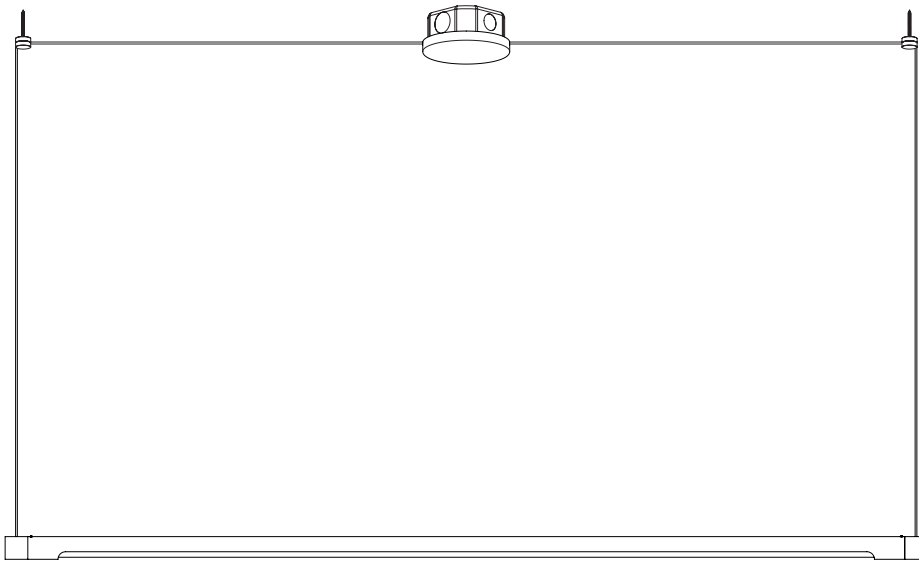

7. Connect & secure with set screws

1220mm
[48in]