




408 - 9 Davies Ave Toronto, ON M4M 2A6 +1 416 994 9617 sales@anony.ca

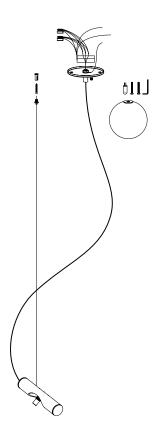

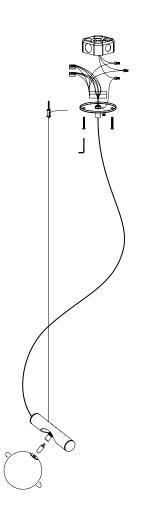

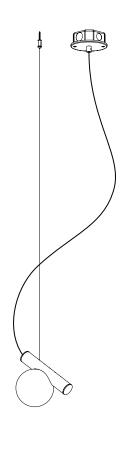

1. Disconnect power

- 2. Connect live, neutral, & ground
- 3. Screw canopy plate to junction box
- 4. Tighten strain relief
- 5. Mark point onto ceiling
- 6. Drill gripper body onto ceiling

- 7. Insert G4 LED bulb & screw glass
- 8. Adjust shade to preferred angle
- 9. Adjust cable