

anony

Toronto, ON M4M 2A6 +1 416 994 9617 sales@anony.ca

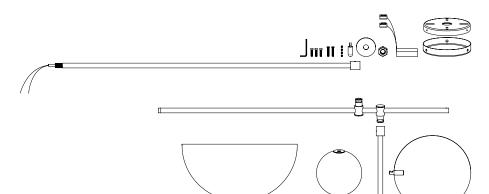

1. Disconnect power

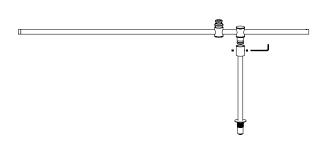


- 2. Lay horizontal pipe on floor
- 3. Connect vertical to horizontal
- 4. Tighten 2pcs Set Screws



- 5. Connect vertical to canopy
- 6. Tighten nut with washer

anony

408 - 9 Davies Ave Toronto, ON M4M 2A6 +1 416 994 9617 sales@anony.ca

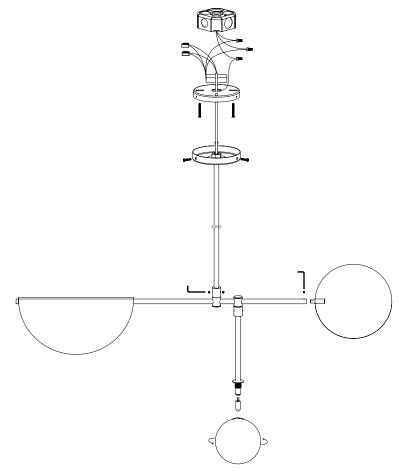

- 7. Connect live & neautral
- 8. Connect low voltage
- 9. Screw backplate to junction box
- 10. Tighten screws to canopy & backplate
- 11. Connect frame to vertical pipe, tighten 2pcs Set Screws
- 12. Insert G4 LED bulb & screw glass
- 13. Insert disk & tighten set screw
- 14. Place plexiglass on pipe
- 15. Tighten set screws until secure