

Maine Cottage®

Day Bed Assembly Instructions



Island Settee



Low Tide Daybed


PARTS LIST

(1) Back Headboard

INSIDE/FRONT OF HEADBOARD



BACK OF HEADBOARD

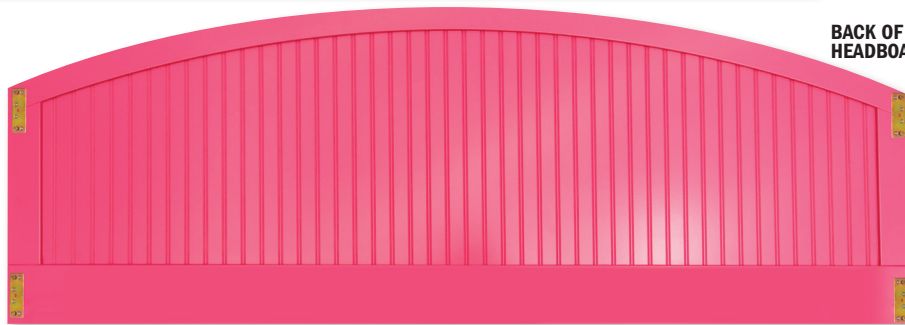


(6) Bed Slats



(1) Front Rail



(2) Side Boards with Three Pre-installed Metal Bed Bracket Hardware Components on Each

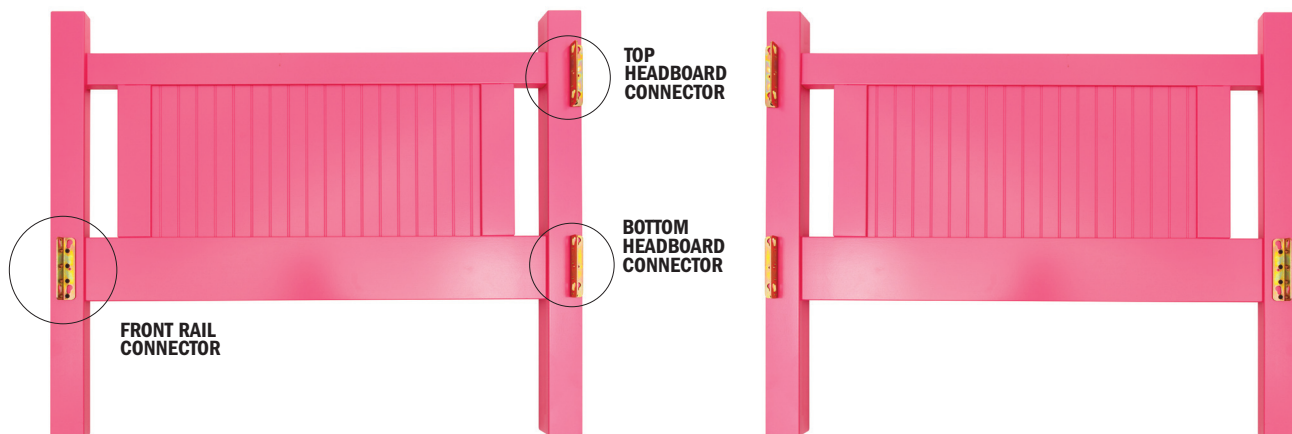


(4) Ball Finials with Dowels



STEP ONE:

CONNECT THE FRONT RAIL TO THE TWO SIDE BOARDS

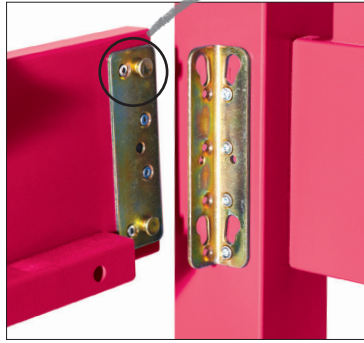


male portion of the metal bed bracket hardware

To attach the Front Rail to the Side Rails, align the metal male components on the Front Rail with the female components on the metal bracket on the Side Rails. Press down until it "clicks" into place.

STEP TWO:

CONNECT THE BACK HEADBOARD TO THE TWO SIDE BOARDS

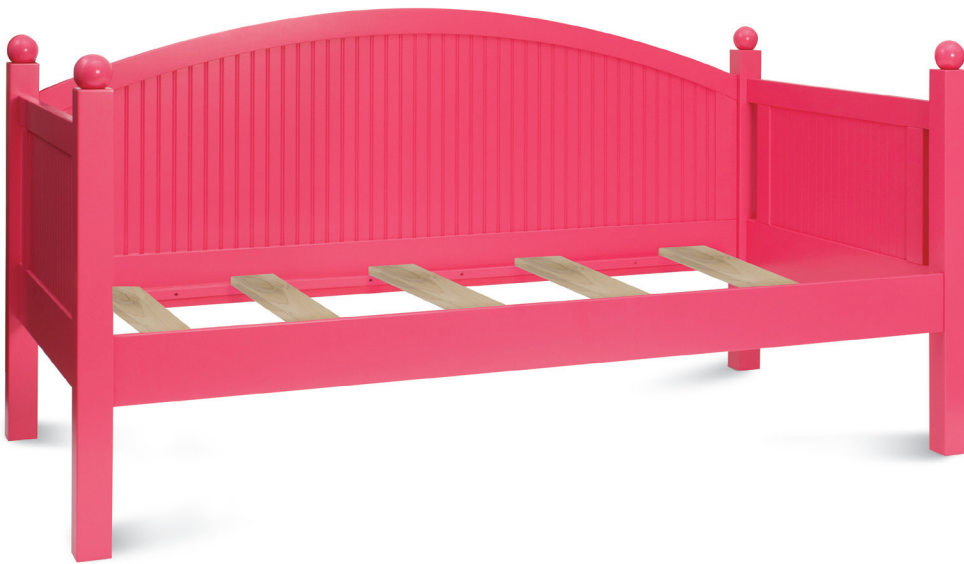

Now that you have three pieces of the frame attached and free standing. Now you can begin to attach the Back Headboard using the same click and lock connection technique. It may take two people holding the headboard and guiding in all four connection points so they click in at the same time.



Lay down all 6 Bed Slats on the Bed Slat Ledges so that they are evenly spaced. You should position one close to each end and one perfectly centered on the bed. Lay your bunkie board (sold separately) on top and the Bed Slats, then add your low profile mattress (sold separately).