

Maine Cottage®


Calvin Bed Assembly Instructions




PARTS LIST



(12) Wooden Dowels

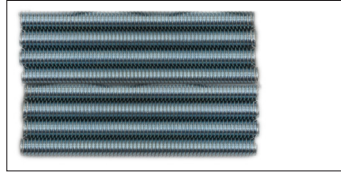

(8) Threaded Bolts

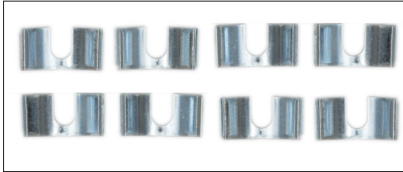

(8) U-Shaped Metal Washers



(8) Hex Nuts



(1) Hex Wrench



(1) Center Support - only included with Queen and King sized beds.
Attached to the Center Support should be a Center Leg with thumb screws (not pictured here).



(5) Bed Slats (connected with strapping)



(2) Side Rails



(1) Foot Rail



(1) Head Rail



(1) Headboard



(2) Foot Posts

(2) Head Posts


STEP ONE:
ASSEMBLE HEADBOARD & FOOTBOARD



Screw each of the eight threaded bolts into each of the eight inset threaded collars located on the inside of both the Foot Posts and Head Posts. Then screw a nut halfway onto each of the bolts.

Insert 2 dowels into the top and bottom holes of each end of the Foot Rail, Head Rail, and Headboard.

To assemble the headboard, lay out the two Head Posts (with holes facing each other) on either side of the Headboard and Head Rail. Insert/connect the dowels you just inserted into the Headboard and Head Rail into one of the Head Posts, then the other. Draw the three components together. Note that the Tightening Pockets should all be on the back side of the bed.

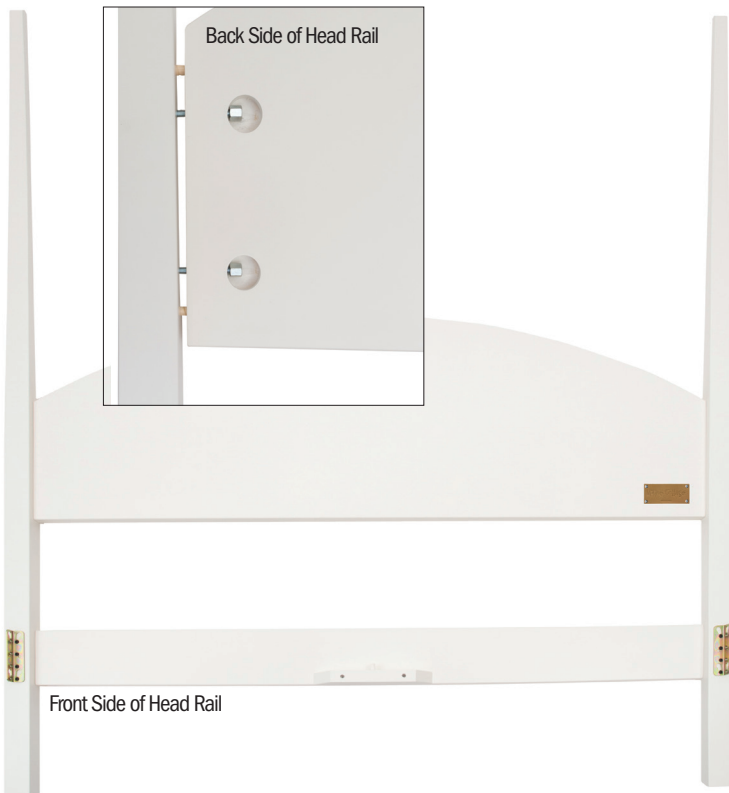

Insert U-Shaped Washers between the Hex Nut and the wood of the Tightening Pocket. Use the provided Hex Wrench to tighten. Repeat in all eight Tightening Pockets.



Inside of Foot Rail

STEP Two:
ATTACH SIDE RAILS




To attach the Side Rails, align the metal male component on Side Rail with the female component on the metal bracket on the Head Post. Press down until it "clicks" into place. Repeat with the other Side Rail and Head Post. It is recommended to attach both Side Rails to the Head Board first then repeat the connections on the Foot Posts.



Maine Cottage®
866-366-3505 M-F, 9-5

STEP THREE:
INSTALL CENTER SUPPORT & BED SLATS

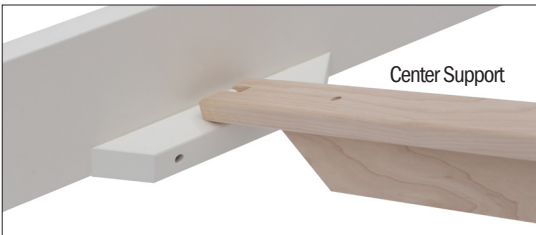

Notice there is a Center Leg attached to the middle of the Center Support. Before positioning the Center Support (Queen and King beds only) remove the two Thumb Screws from the Center Leg. Turn the leg into the upright position, perpendicular to the Center Support, and realign the Thumb Screws. Tighten down and adjust. Place the Center Support into position then lay the Bed Slats on the Bed Rails as pictured. You are now ready to place your foundation and mattress (not included).

