

Magnetic Phone Mount - MGMMBN98

NOTE: Make sure you are parked in a safe spot before installation.
NEVER WHILE DRIVING.




Strong Magnet



360 Degree Rotation

Mount Setup


How to Mount to Your Dash

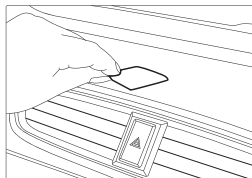


1. Choose a flat surface area (not curved) and wipe clean. The car mount **WILL NOT** stick well onto leather or uneven surfaces.



2. Peel off the adhesive backing on the mount after the cleaned area is completely dry.

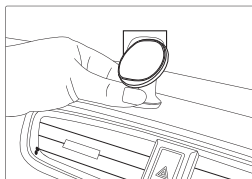

3. Place the phone mount on the area (hold it at least 2 minutes), it is recommended to wait at least 36 hours before using.

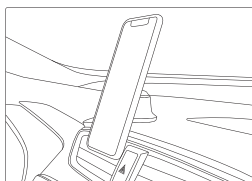


4. After drying for 36 hours, you can adjust it to any desired angle.

In order to stick on firmly, please wait 36 hours then use.


How to Install Metal Plate

- a. For Phones that do not support wireless charging



Peel off adhesive backing and stick the metal plate onto the back of your phone.

- b. For Phones that support wireless charging



Stick the metal plate onto the bottom on the back of your phone to avoid interfering with the charging pad.

Note:

1. If your phone has a protective case, stick the metal plate onto the back of protective case or inside it.
2. Be sure to clean and dry the installation area before use.

Technical Support

US

AAMP Global
Tel: 866-788-4237
support@iSimple.com
www.iSimple.com

EU

AAMP Global UK
Tel: +01-800-477-2267
support@iSimple.com
www.iSimple.com