

Acoustic backing

Installation guide

This guide will help you install the acoustic backing of our seamless acoustic wallpaper. Make sure to use the advised tools, take your time and the result will be perfect.


Required tools:

- Sharp (Stanley) knife
- Metal cutting ruler
- Cutting board (softboard)
- Measuring tape (5m+)
- Speedsquare/triangle square
- Pen

Step 1 - Determine wall height


We advise placing our wallpaper in vertical lanes to achieve the best looking result. Determine the height of the wall by measuring from ceiling to floor or to baseboard. Do this for each lane you wish to install, since height might vary.

Example wall:

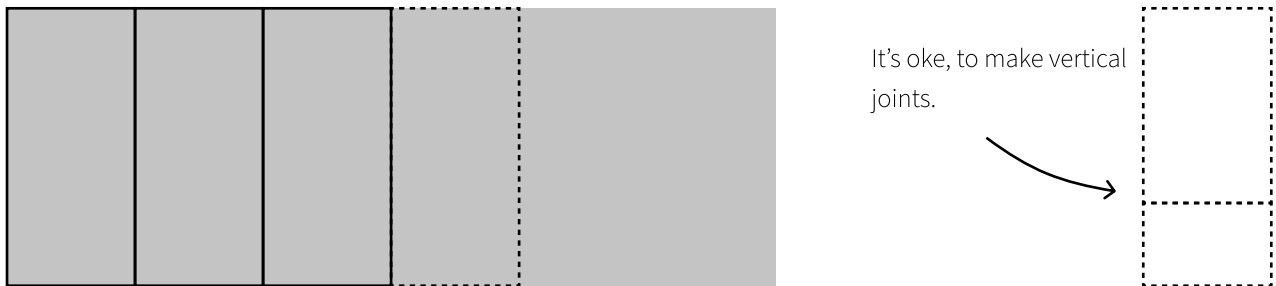


Step 2 - Unpack the box and roll out the wallpaper

Roll out the wallpaper on the floor. Total length should be at least the height of the wall +50 cm.

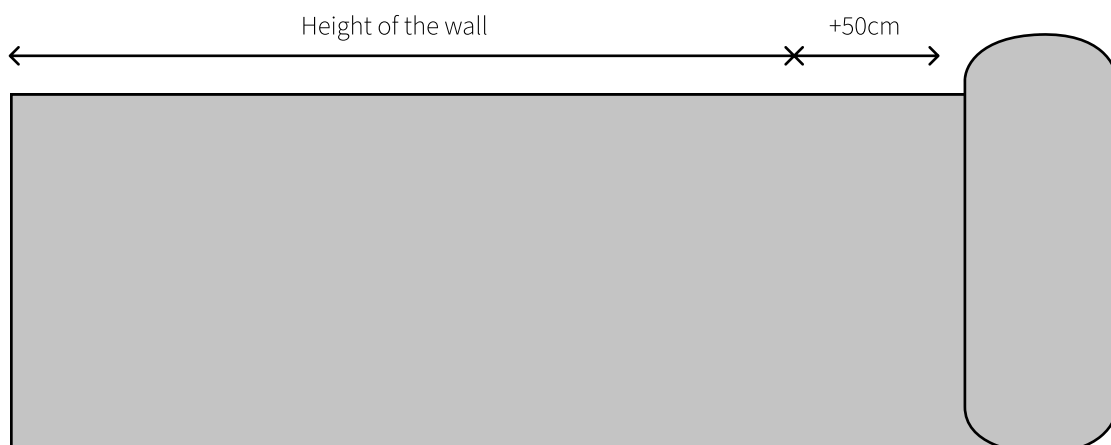


Step 3 - Rough cut to length

The next step is cutting the roll to a 'rough' cut. This means: take the height of the wall, and add 5 cm. Cut to length with a cutting knife (Stanley) and a metal ruler. Before cutting, make sure the cut is perpendicular and the knife blade is sharp.

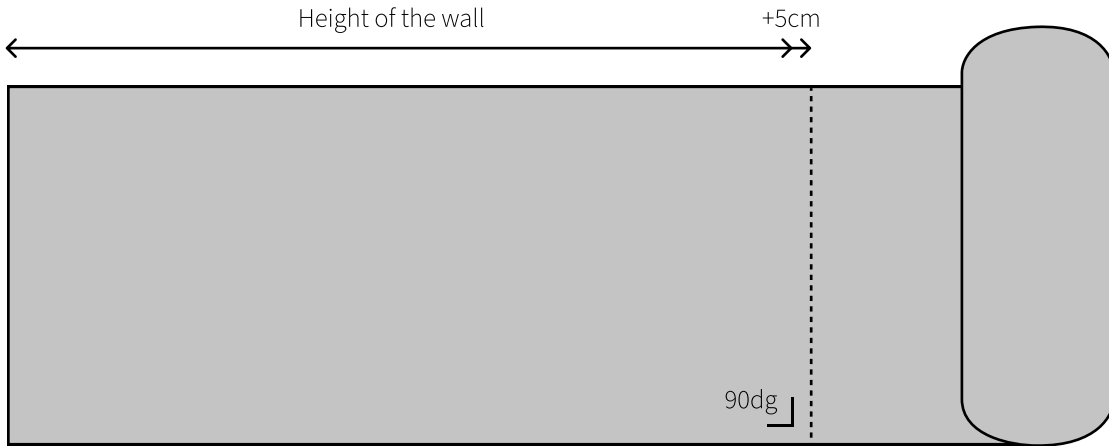

Step 4 - Loosen the backing


Turn the wallpaper around so that the Easewall liner is facing you. Now peel back the liner starting from one side of the cut sheet until the middle of the sheet. Make sure to not remove it completely. This releases the stretch on the wallpaper and allows it to settle.

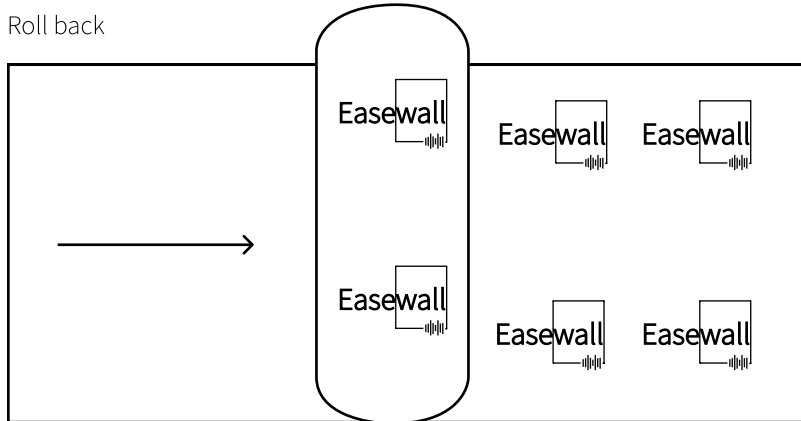

Once you have reached the middle, re-apply the backing the same way you pulled it back. Now repeat this process from the other side towards the middle.


The end result should be that the entire backing was removed and then re-applied. Now that the stretch has settled the cut length might have become +/-1% shorter.

Re-apply

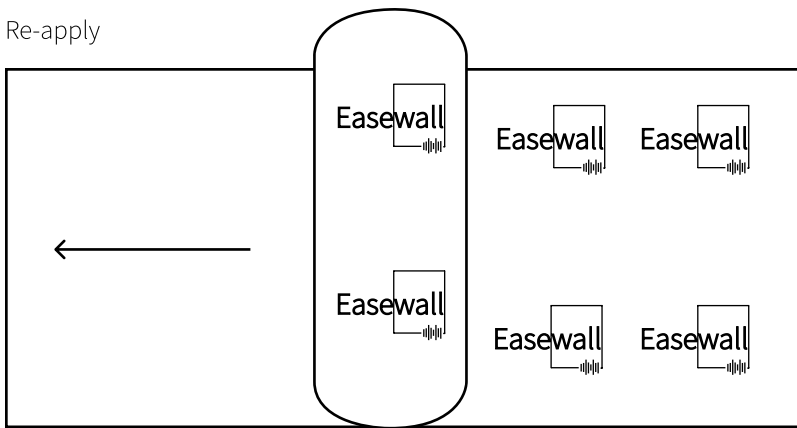

Step 5 - Re-measure and cut to final length

To make our final cut, re-measure the length and mark the cut. Check if the cut was measured correctly by holding it up against the wall. If all is correct, make the cut taking into account any possible deviations on the wall*.

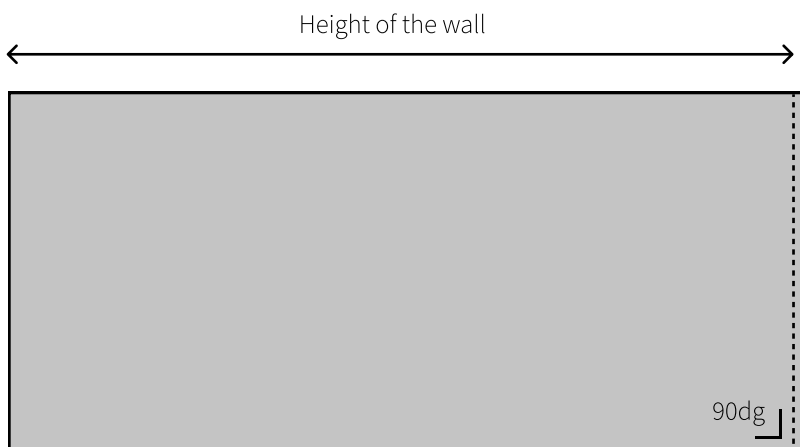


*Many walls are not 100% perpendicular, measure this before cutting and adjust accordingly.

Step 6 - Apply to the wall

Hold the wallpaper to the wall with the print facing the room and remove the first 30 to 50 cm of self adhesive backing from the back. Now stick the upper left or right part with the adhesive exposed to the wall.

We recommend starting in the upper corner and working you wall down. There is room for some re-adjustment before applying pressure to activate the glue.

Start in the corner

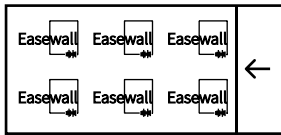



Peel back the first 30-50cm of the self-adhesive backing

With the print facing forward, peel the self-adhesive backing down from underneath the wallpaper. Apply pressure to the wallpaper if the positioning is right. Repeat until you reach the floor.



Repeat steps 3, 4, 5 and place the next lane against the already installed one. Do this by placing the lanes against each other and applying light force towards the edge from the middle of the lane.



Start in the corner

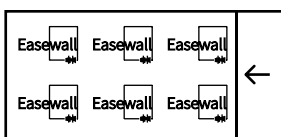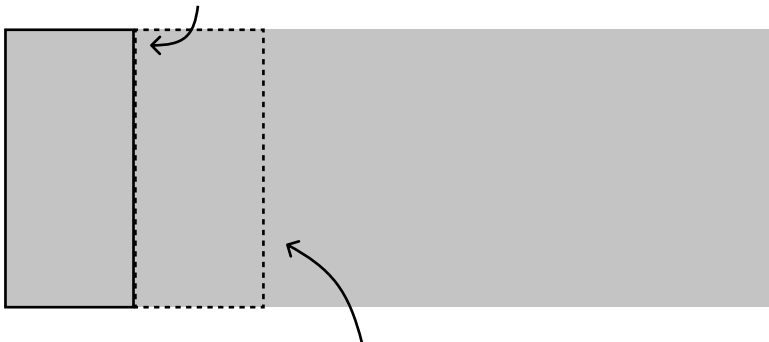

Extra instruction: Wall outlets


Please only proceed if a certified electrician has verified that the power is off!

Remove the top cap/housing and internals before installing the wallpaper.

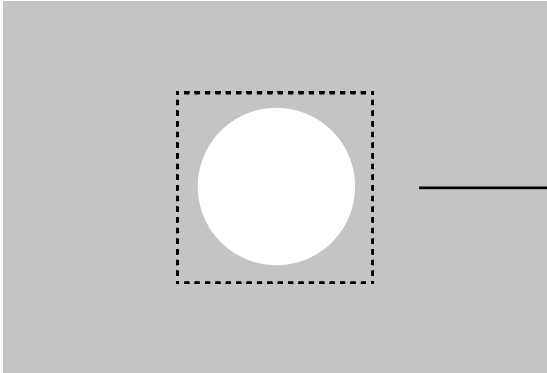


Remove top cap and internals.
Make sure power is **OFF**

Apply wallpaper according to forementioned instructions. Determine where the outlet is located by touch.

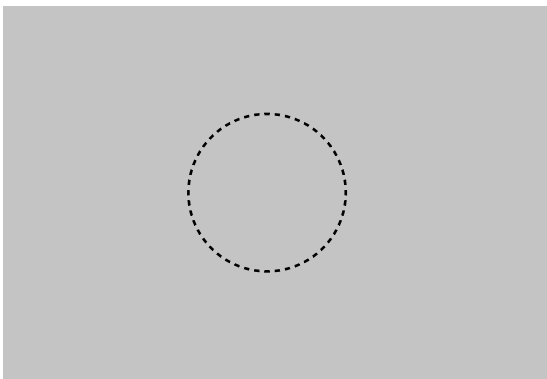

Cut the material surrounding/overlying the outlet with a Stanley knife

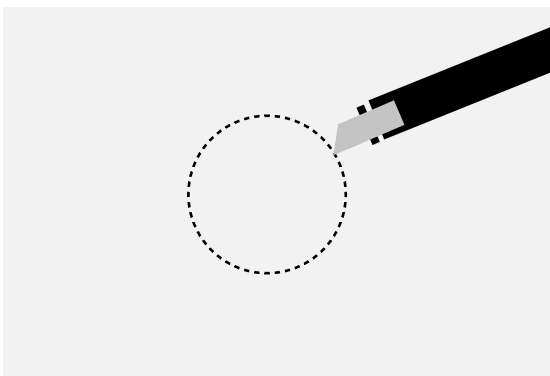

Seamless toplayer

Installation guide

This guide will help you install our seamless toplayer. Make sure to use the advised tools, take your time and the result will be perfect. Before using this guide, make sure you have properly installed the acoustic baselayer.

Preliminary steps:

1. Before installing the toplayer **ALWAYS** verify color with color sample. Slight differences may occur. In case of big differences or doubt, do not proceed. Contact us first.
2. Already installed base layer (see acoustic wallpaper installation guide)
3. Disassembled (and disconnected) electrical outlets
4. [Option] Removed baseboard

Required tools:


- Two people
- Sharp (Stanley) knife
- Metal cutting ruler
- Speedsquare/triangle square
- Teflon iron shoe
- Line laser
- Dressing pins
- Iron (with non-steam function)

Step 1 - Place seamless toplayer with dressing pins

To install the seamless toplayer, we are pinning it to the acoustic baselayer. The most easy way to do this is by leaving the toplayer on the roll and slowly unrolling it while pinning it and aligning it with the ceiling at the same time.

To do this, work from left to right and start by ± 10 cm of extra material. When the toplayer is fixed we will eventually cut this material to exact length. Make sure the toplayer touches the ceiling everywhere.

Example wall:

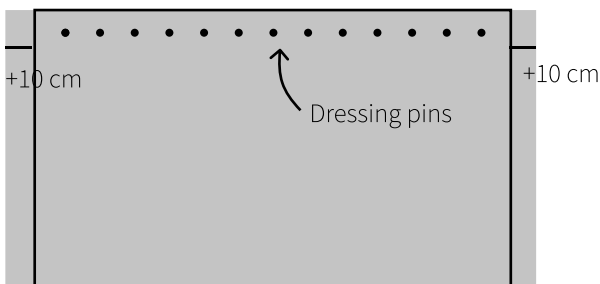

We advice to use a spacing of maximum 20 cm in between dressing pins. Stick them at a downward angle to prevent the toplayer from slipping downward.

Note: if you chose not to remove the baseboard, the toplayer will cover over the baseboard. This is OK as this extra material can be cut to length after fixating the top layer. Our advise is however to remove the baseboard and place the baseboard over the baselayer and the toplayer installation after installation for a better result.


Keep adjusting and adding pins until the positioning is perfect and there are absolutely no wrinkles! Once you start the ironing process, the top layer will be fixed so it needs to be without errors.

Step 2 - Iron the seamless toplayer onto the acoustic baselayer

You can now proceed with ironing to attach the toplayer to the baselayer. Please use a teflon shoe on your iron. Turn the iron to the highest temperature, and turn steam mode off. Iron in a very slow pace in circles, so all parts can achieve sufficient adhesion.

When in doubt, you can always iron again. Just make to never keep the iron on the same place. This might burn the material. Start in the top middle and fan out towards both sides. Always start from the middle and work to one side. Never iron a part on the sides before the middle, as this might create folds.


Example wall:

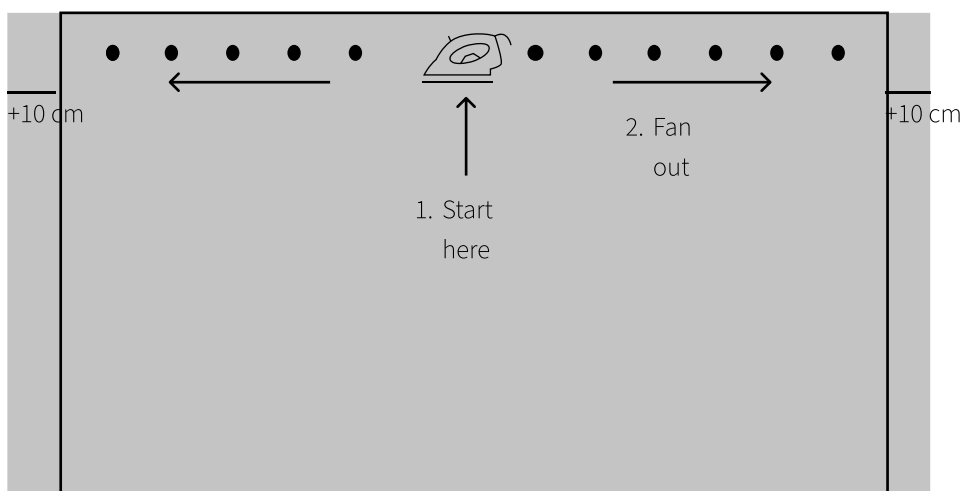

Step 3 - Remove dressing pins

You can slowly work your way down repeating this method. You can move the dressing pins down as you iron down, to use as a marking. Leave the last 15 cm both left and right un-ironed to enable easy cutting. Once you have carefully ironed all parts of the toplayer to the acoustic baselayer, you can remove the dressing pins.


Example wall:

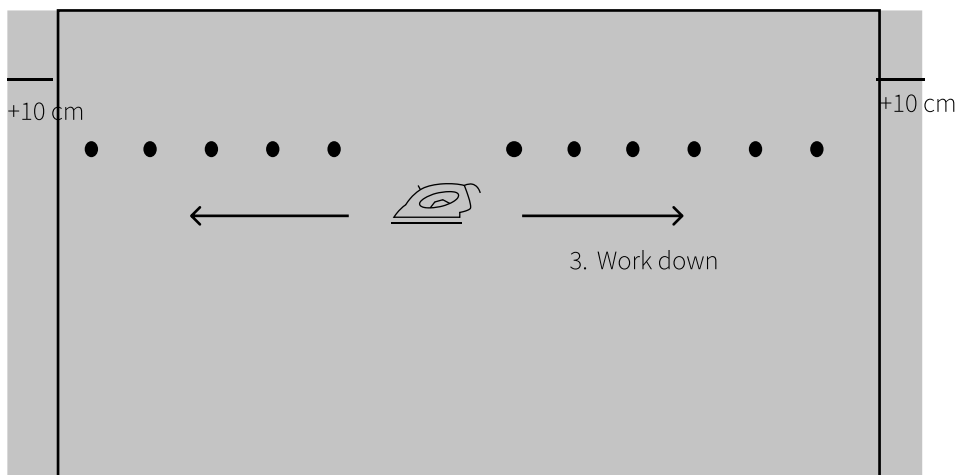


Step 4 - Cut to length

The next step is cutting the installed toplayer to the right size. Make sure you press the material in the right position by using a metal ruler. After you have cut the material to the right size, you can iron the last 15 cm to the baselayer.


Front view wall:

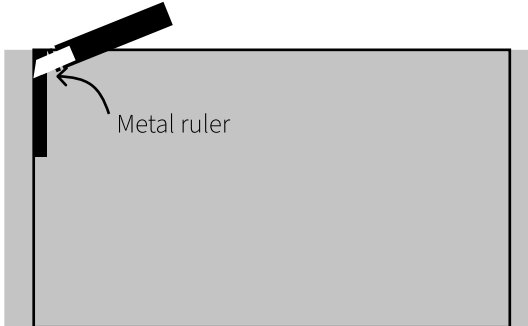

Top view before:

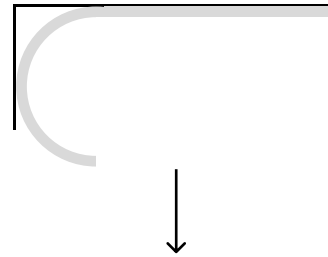


Top view during cutting:

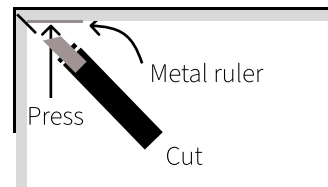

4a: In case you did not remove the baseboard before installation, repeat the same technique you used for the edges. You will press the material to the wall using the metal ruler and cut on the lower side of the ruler.

4b: In case you did remove the baseboard the final assembly will look like below:

4a Baseboard installation side view:

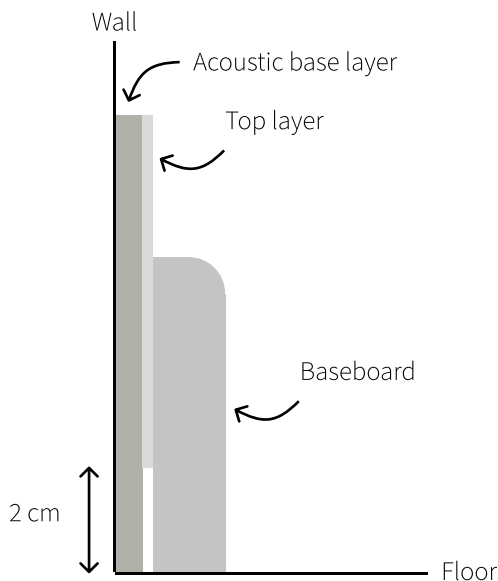

4b Baseboard not removed side view:

