

THREAD CARRIAGE MAGNET INSTALLATION INSTRUCTIONS

Congratulations on your purchase of the CRB Thread Carriage Magnets! These powerful magnets provide builders with precise tension control for their thread carriages, making it easier to achieve professional-quality wraps. They are compatible with most thread carriages, including the CRB Advanced Hand Wrapper, 2 or 4 spool Rolling Thread Carriage, American Tackle and Pac-Bay thread carriages.

LIST OF CONTENTS:

A. Thread Carriage Magnet (4)




NOTE:

*There are plastic washers separating each magnet in the pack, remove each washer before mounting on thread carriage. Be careful not to let the magnets snap together with force as it could damage the magnets.


CRB THREAD CARRIAGES



1. To install your thread carriage magnets, unscrew the **precision knobs** and remove all **washers, thread spool and tension spring** from the threaded rod.

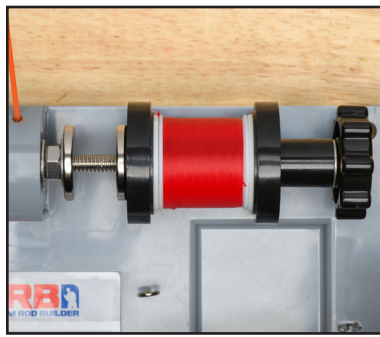

2. Install the **small washer** first then add the **two magnets**. Your magnets are marked **P and N** for their polarities, be sure their polarities are facing each other. Once the magnets are installed you will replace the **washers, spool retainers, thread spool and precision knob** in the same order you removed them.

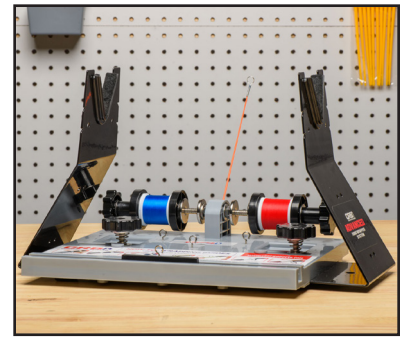


3. Repeat install steps for all sides of your thread carriage. Your wrapper is now properly set up and ready to use!


AMERICAN TACKLE & PAC BAY THREAD CARRIAGES (HORIZONTAL)



1. To install your thread carriage magnets, unscrew the **wing nut, metal washers** and tension spring. Leave one small bushing in place.

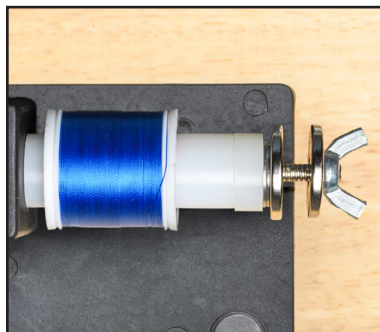

2. After sliding your desired thread spool into place, install the **2 bushings, 2 washers**, then add the **two magnets**. Your magnets are marked **P and N** for their polarities, be sure their polarities are facing each other. Once the magnets are installed you will tighten the **wing nut** to set desired tension.

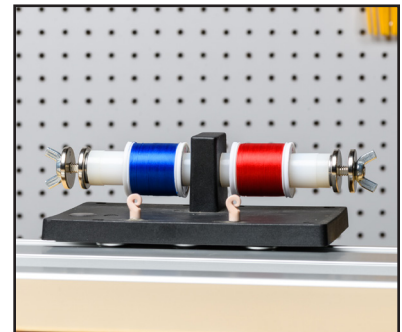

3. Repeat install steps for both sides of your thread carriage. Your thread carriage is now properly set up and ready to use!