



KTC81 使用安装说明


1、Step one, install the magnetic head onto the bracket and tighten the nut to a suitable rotation strength after installation.

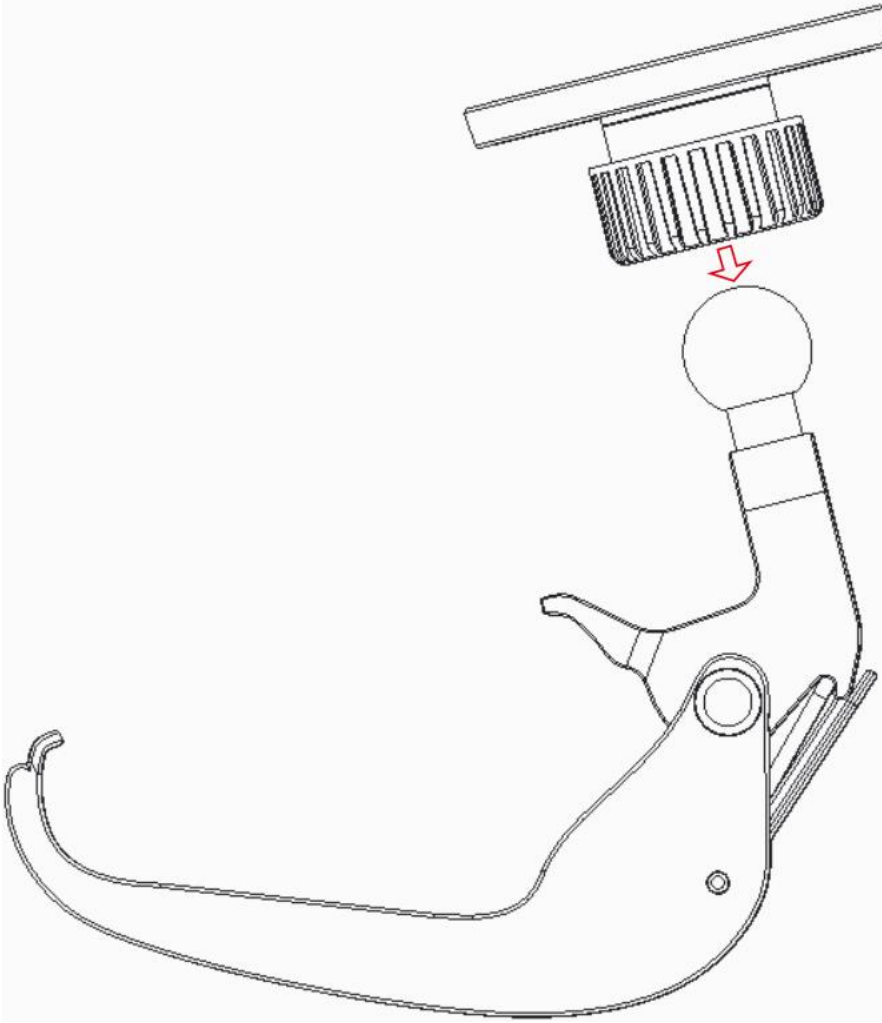


2、Step two, install the handle onto the bracket.

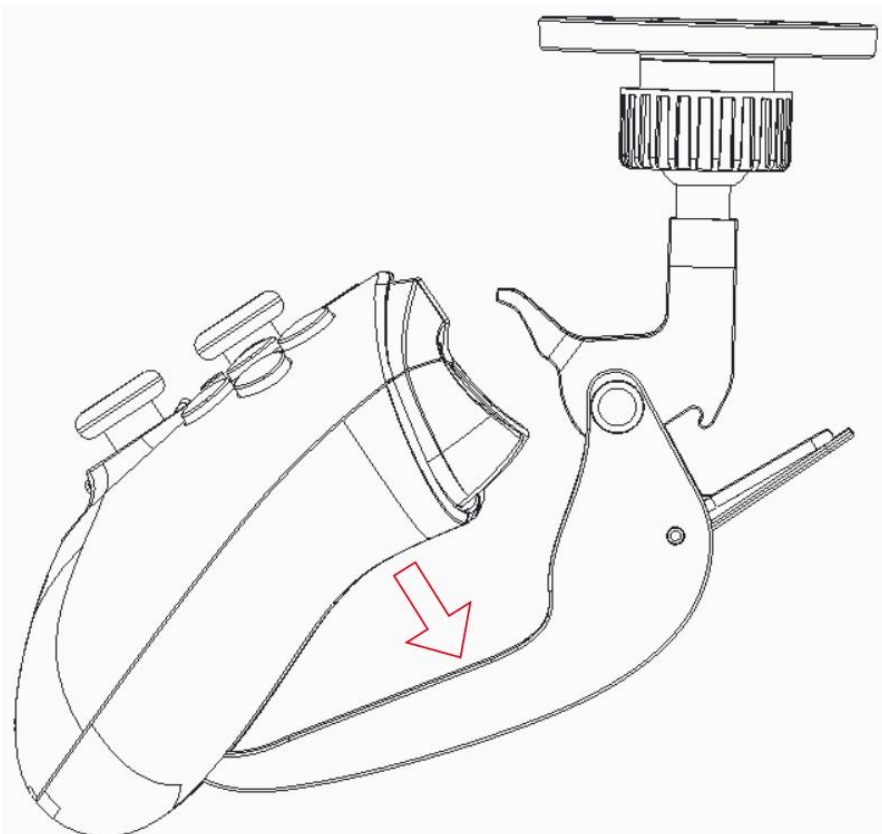

3、 Step three, push the metal ring into the groove.

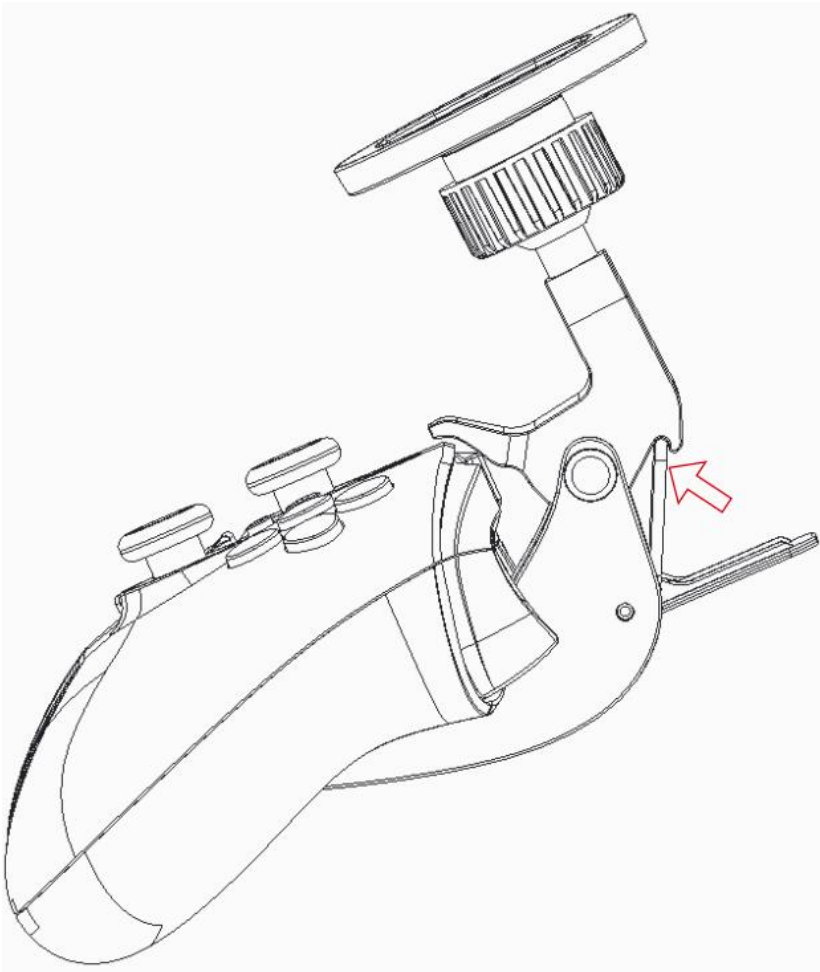


4、 Step four, push the locking clip up to lock the bracket and handle.

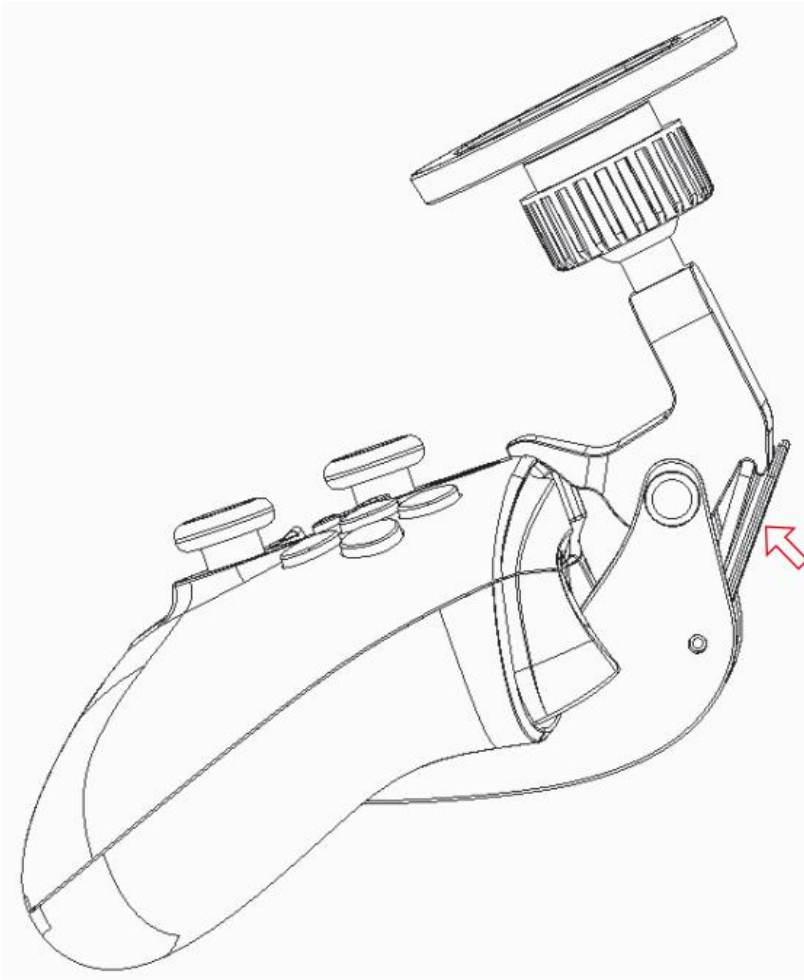

5、 Step five, attach the magnetic sheet from the packaging box to the back of the phone, then let the phone adsorb onto the bracket.

Note: Phones with wireless charging do not need to attach the magnetic sheet.

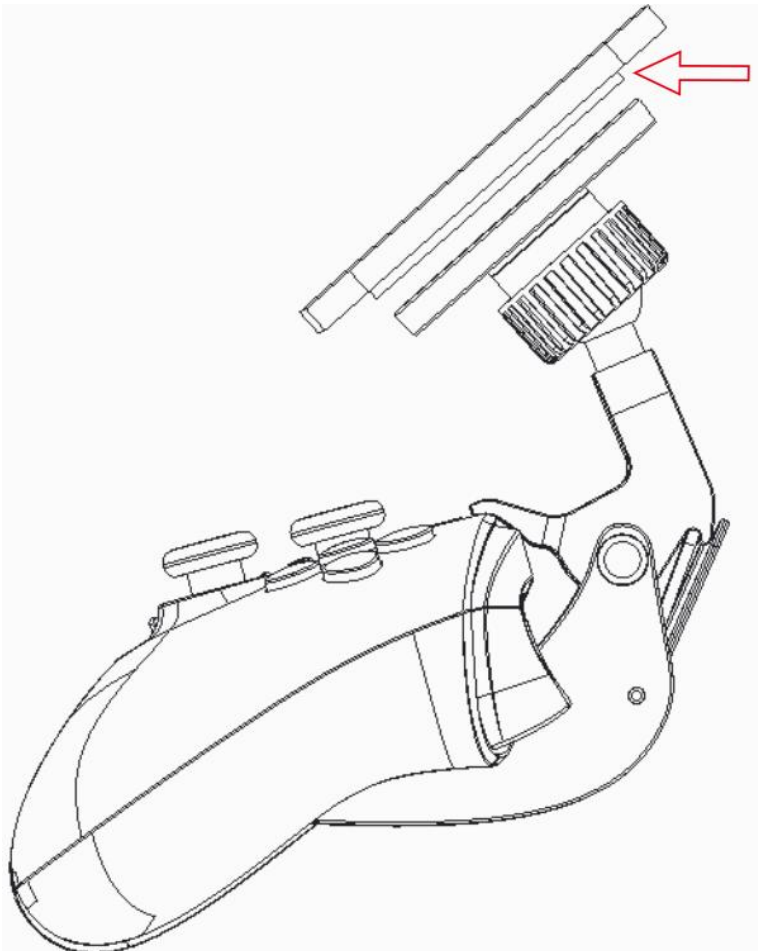

6、 finish installation.

