



Rocker Step

PART NO. IB-NRS-026

FITS:

2004-2015 Nissan Titan Crew Cab
2017-Up Nissan Titan Crew Cab
2016-Up Nissan Titan XD Crew Cab



60-120 min



Cutting Not
Required



Drilling Not
Required


Torque & Tools

Fastener Size	Tightening Torque (ft-lbs)	Wrench Required		Allen Wrench Required	
☐ 6mm	☐ 7-8.5		☐ 10mm		☐ 4mm
☒ 8mm	☒ 18-20		☒ 13mm		☐ 5mm
☐ 10mm	☐ 35-40		☐ 16mm		☐ 6mm
☐ 12mm	☐ 60-70		☐ 18mm		☐ 8mm

BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT
DEPEND ON THE PARTS LIST. READ INSTRUCTIONS CAREFULLY. BUMPER
IS HEAVY, ASSISTANCE IS HIGHLY RECOMMENDED TO AVOID POSSIBLE
INJURY OR DAMAGE TO THE VEHICLE.

Part List

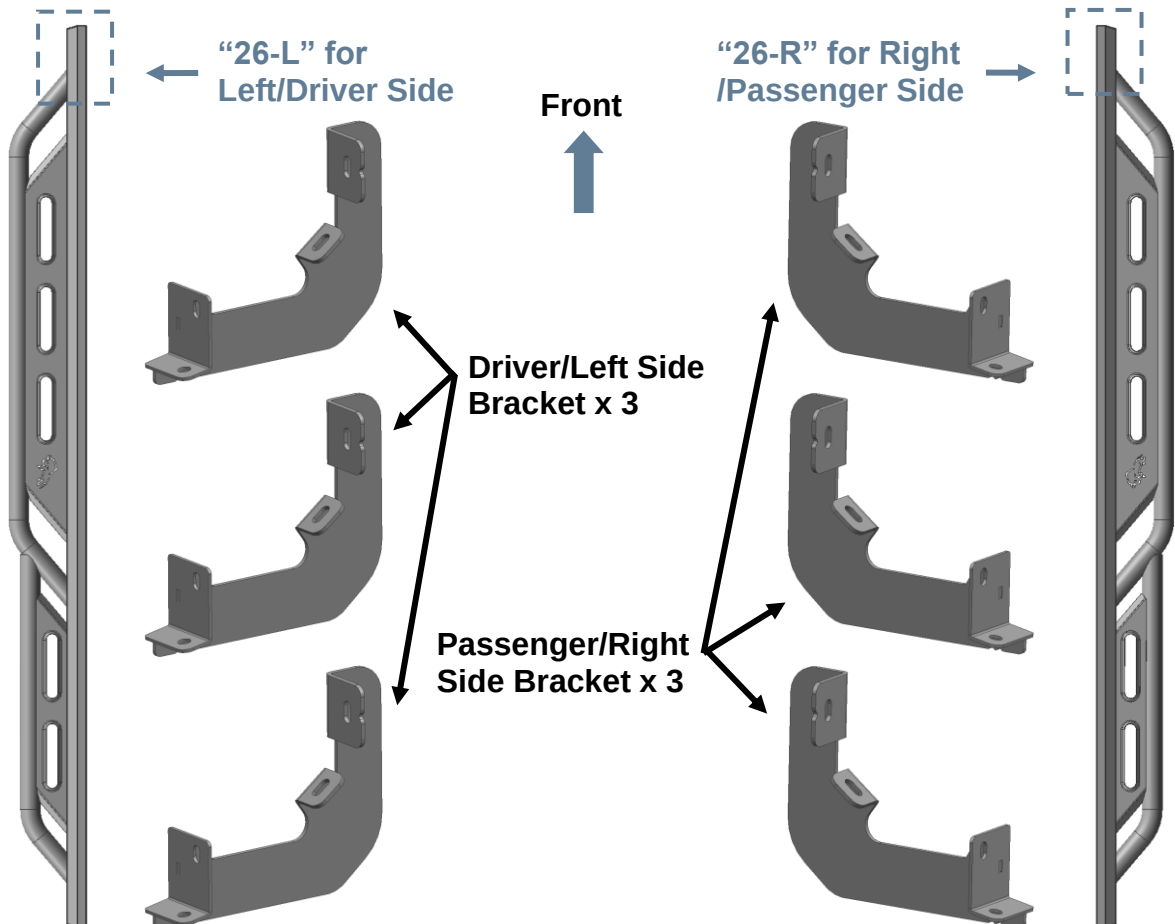




8mm x 30mm
Hex Bolt




8mm Flat Washer



8mm Lock
Washer



8mm Nylon
Lock Nut

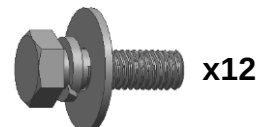


8mm x 25mm
Combo Bolt

PLEASE NOTE THAT THE FOLLOWING PICTURES ARE BASED ON THE DRIVER SIDE INSTALLATION


STEP 1

Start installation at the front of the Driver/Left side of the vehicle and locate the factory threaded holes or stud located on the side of the inner body panel, **(Figs 1 & 2)**. There are (4) mounting locations along the body panel. Bracket installation will use the 1st, 2nd and 3rd mounting locations. **NOTE:** Remove the plastic plug or any insulation on the side panel to locate the threaded holes.

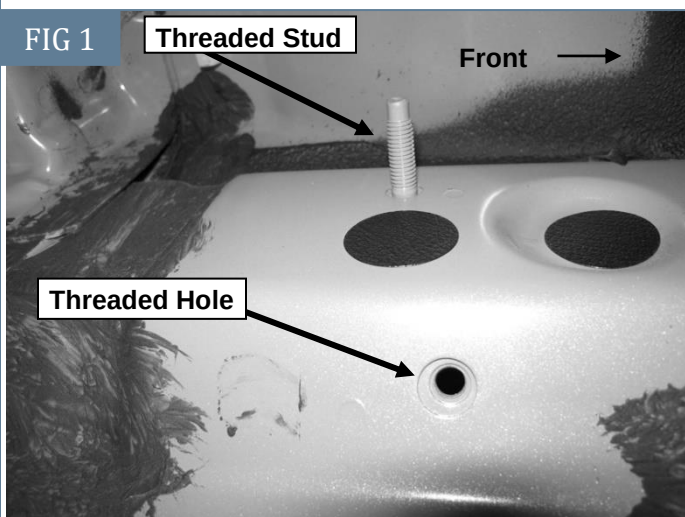

(Fig 1) Up to 2015 driver side mounting location pictured. Note: Remove plastic plugs to locate factory threaded holes

FIG 2

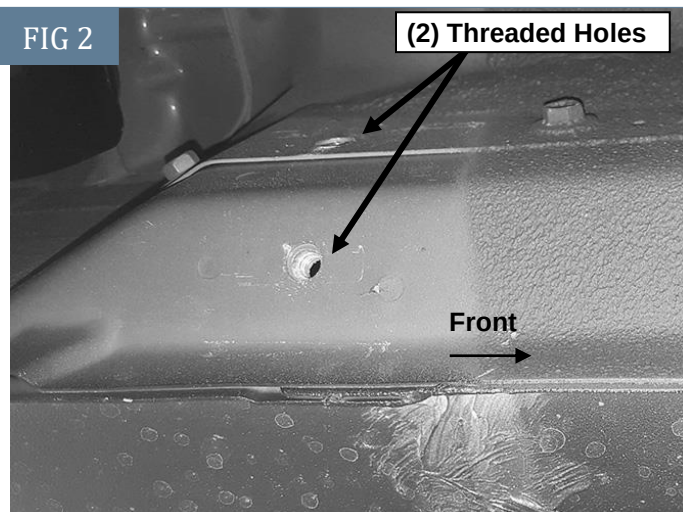


(Fig 2) 2016-on driver side mounting location pictured. Note: two factory threaded holes only

STEP 2

Select (1) Driver/Left Mounting Bracket. Attach the Bracket to the mounting location with:


- Models with threaded stud:** Attach Bracket to upper stud with (1) 8mm Flat Washer and (1) 8mm Nylon Lock Nut. Next, use (1) 8mm Hex Bolt, (1) 8mm Lock Washer and (1) 8mm Flat Washer to attach the Bracket to the lower threaded insert hole on the body panel, **(Fig 3)**. Do not tighten hardware at this time.
- Models without threaded stud:** Attach Bracket to the two threaded holes with (2) 8mm Hex Bolt, (2) 8mm Lock Washer and (2) 8mm Flat Washer, **(Fig 3)**. Do not tighten hardware at this time.

FIG 3

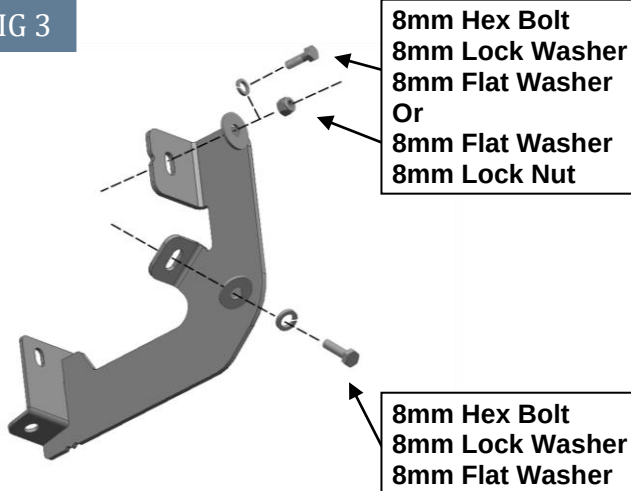

(Fig 3) Driver/Left Mounting Bracket installation

FIG 4

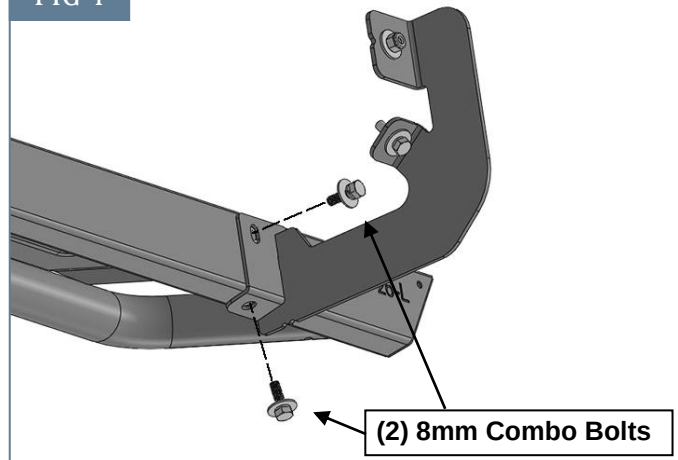

(Fig 4) Attach the Driver/Left Rocker Step to the Mounting Brackets

STEP 3

Repeat **Steps 1 & 2** to install the Mounting Brackets on center and rear locations.

STEP 5

Level and adjust the Rocker Step and fully tighten all hardware.

STEP 4

Select the Driver/Left Rocker Step.

NOTE: The Driver/Left Rocker Step will have a "26-L" on the front. Carefully place Rocker Step on the brackets. **IMPORTANT:** Do not slide the Rocker Step front to back or damage to the finish may result. Attach Rocker Step to the Mounting Brackets with (6) 8mm Combo Bolts, (Fig 5). Do not tighten hardware.

STEP 6

Repeat **Steps 1—5** to attach the Passenger/Right Rocker Step.

STEP 7

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Attention

To protect your investment, do not use any type of polish or wax that may contain abrasives that could damage the finish.

Mild soap may be used also to clean the Running Boards.