

## Flat6 Bi-LED Headlight Upgrade Kit Porsche 356 Headlight Installation Guide



Read all instructions before beginning the install to become familiar with the install procedure.

Be sure power is turned off to the headlights during the install procedure.


Unpack the headlights and all components from the protective packaging. Check that all parts are undamaged in the shipping container before you begin the install.

### 1) Uninstall the existing headlights.

a) Remove the screw at the bottom of the headlight then pull it out.



b) Unplug the H4 connector on the back of the headlight.

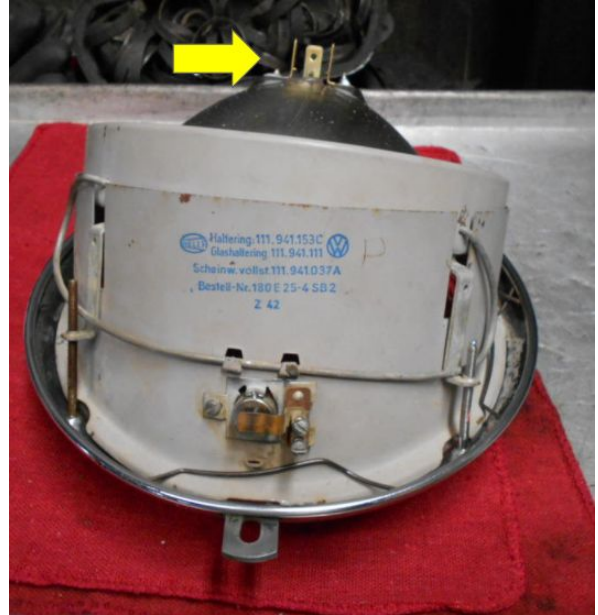


## 2) Install the new headlight assembly.

a) Before installation, you can put a new gasket around the headlight bucket if needed.



b) Connect the existing H4 socket in the headlight H4 plug.


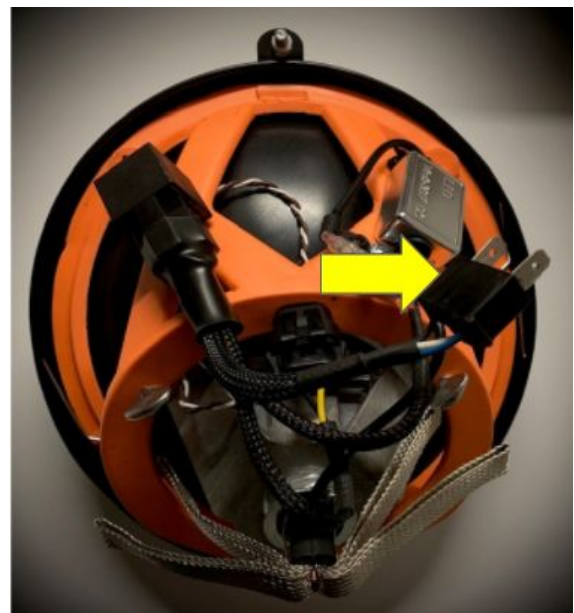


c) Insert the headlight top first in the bucket and put back the bottom screw in place to secure the headlight in place.



### 3) Adjustment of the headlight aiming.


a) Turn the headlights on, only use a low beam to check the aiming of the headlights as described in the following picture.

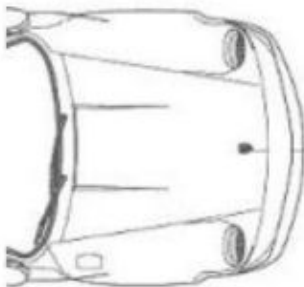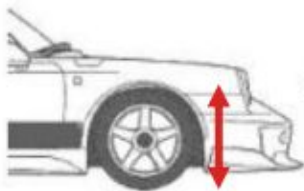

The upper cutoff shadow line with low beams should be 2" lower than the height of the projector from the ground when measured 25' from the vehicle. This measurement is easily taken with the vehicle parked 25' from a wall, measuring the cutoff line on the wall.

The center of the cutoff line should be aligned with the center of each headlight when measured 25' from the vehicle.

b) If needed, remove the headlight from the fender bucket and set the three adjustment screws to align the headlight beam.

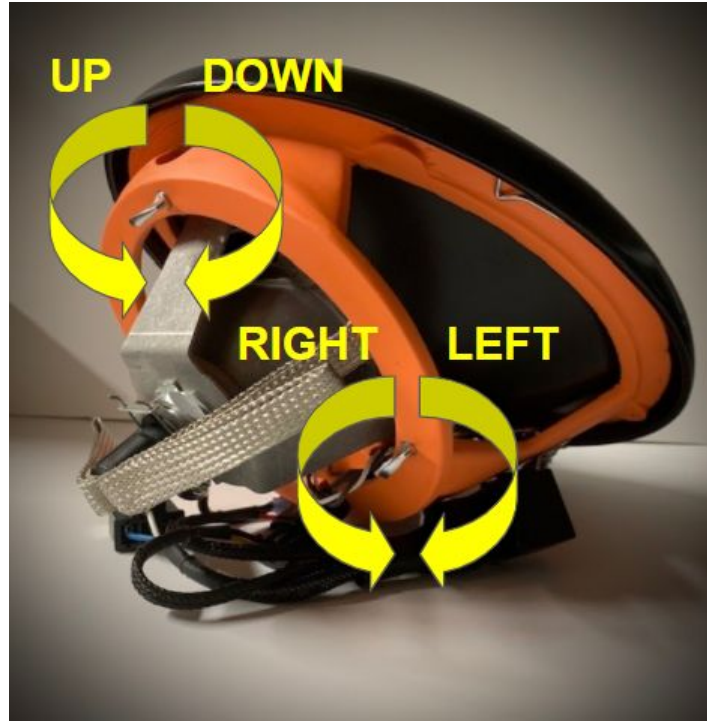

**4) Installation complete.**