

Flat6 Bi-LED Headlight Upgrade Kit Porsche 911 65-94 **LED 4-LED Pods Installation Guide**



Read all instructions before beginning the install to become familiar with the install procedure.

1) Prepare the housing for the installation.

Before installing the 4LED Shroud you need to put the reflector in place inside the housing.
It is recommended that you adjust the aiming of the LED projector before doing this installation to still have access to the three adjustment screws behind the reflector.



2) Put the 4LED Shroud in place.

Pass the 4LED Shroud wire in the reflector hole below the projector.
Then push the 4LED Shroud around the projector.



3) Secure the 4LED Shroud in place using the screw in the projector.


Align the 4LED shroud and put the screws around the projector.



4) Connecting the LED Surround.

Use spade terminals for the three wires coming from the LED module.
i) Connect the black wire from the LED module to vehicle ground wire.
ii) Connect the red to the parking light wire in the headlight bucket

Please see specific wiring instructions for the 964 model.

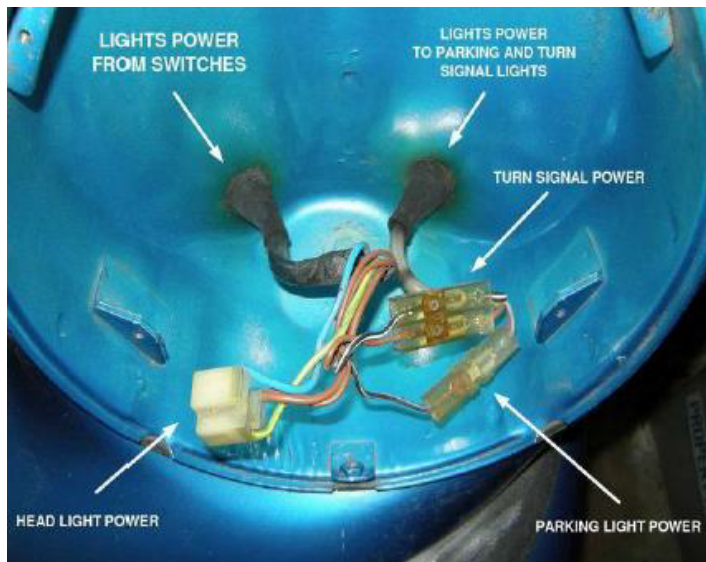

5) Installation complete.