


Flat6 LED Horn Grills Porsche 911 69-73 Installation Guide

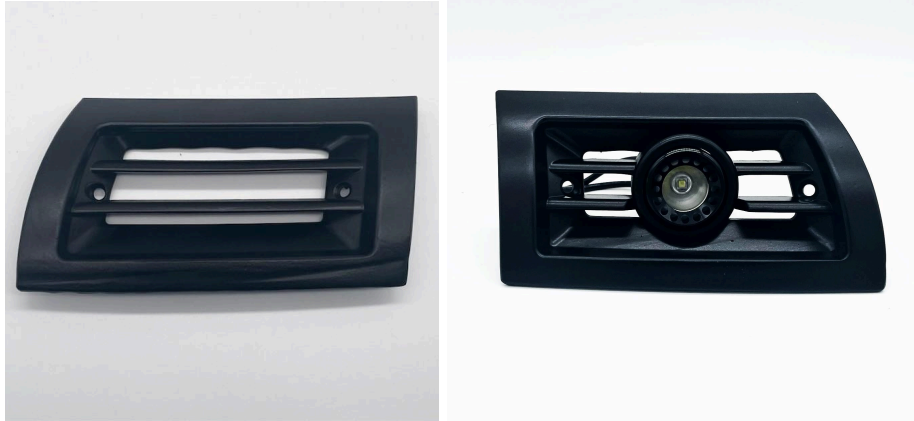

Read all instructions before beginning the install to become familiar with the install procedure.

1) Remove the existing Horn Grills.


First, remove the two screws retaining the horn grill in place and pull it out.



Then, install the new clips provided with the kit or keep the ones you already have.

IMPORTANT NOTE:

Depending on each car, you will certainly have to adjust/bind the brackets in order to make the new grill fits.

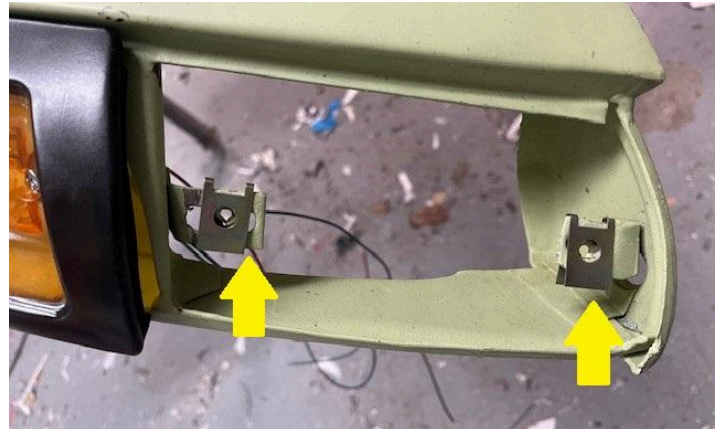

2) Install the new Horn Grills with or without LED Pods.

You just have to adjust the bracket and put in place the new screws.



First connect the LED Pods wires to the Fog Light switch of your car. The LED Pod offers two colors, white and amber:

- Black wire = Ground
- White wire = White color
- Red wire = Amber color

Then you just have to adjust the bracket and put in place the new screws.



3) Installation complete.