

Flat6 Bi-LED Headlight Upgrade Kit Porsche 911 65-94 LED Surround Installation Guide



Read all instructions before beginning the install to become familiar with the install procedure.

1) Cut a groove in the reflector.

Before installing the LED Surround you need to drill a $\frac{1}{4}$ inch hole at the top center of the reflector. Then you cut a small groove in the border of the reflector as shown in the picture. This groove will be used to pass the LED surround wire.



2) Prepare the LED Surround to be installed on the reflector.

The LED Surround is fixed on the reflector by three pieces of double side tape already positioned on the LED Surround. Peel the double side tape in order to stick the LED Surround on the reflector.



3) Installation of the LED Surround on the reflector.


Position the LED Surround wire in the groove at the top of the reflector then press both parts together to be centered with each other.



4) Connecting the LED Surround.

Use spade terminals for the three wires coming from the LED module.

- i) Connect the black wire from the LED module to vehicle ground wire.
- ii) Connect the white red to the parking light wire in the headlight bucket
- iii) Connect the white wire to the turn signal light wire in the headlight bucket.

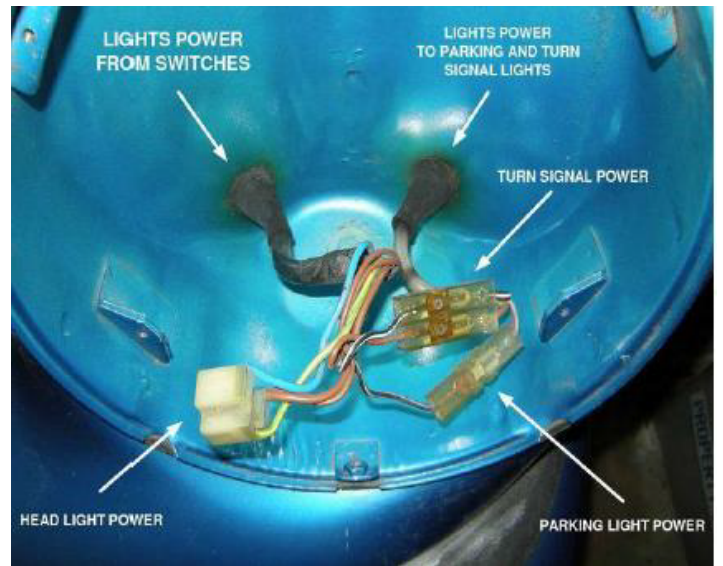

5) Installation complete.