

Flat6 Side Mirror Porsche 911 76-94 Installation Guide



Read all instructions before beginning the install to become familiar with the install procedure.

1) Remove the existing Mirrors.

First, turn counter clockwise the screw at the bottom of the mirror base using a hexagon key.



Then, remove the mirror from the door holes.



2) Install the mirror in the door holes.

First, insert the new mirror brackets inside the door holes.




We also provide aluminum plates to protect the Tail Lights from rocks and dirt.



NOTE FOR ELECTRIC MIRRORS ONLY

3) Connect the Mirror to the wiring harness.

First, pull the wiring harness out and open the rubber cover with a cutter to expose the wires.
Then cut the wire in order to be ready to connect them to the new mirror.
Using the Solder Seal Wire Connector Heat Shrink provided with the kit or other type of connector, connect the wires from the harness directly to the ones from the mirror following the color code provided with the mirrors for the year of your car.

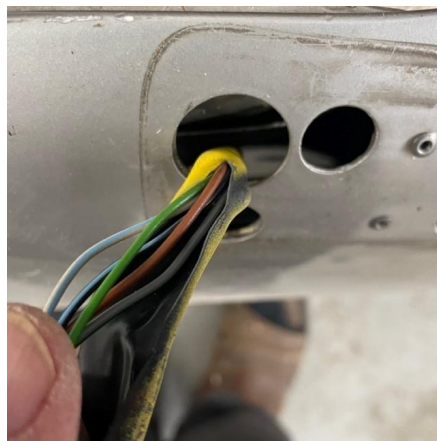

5) Installation complete.