



RENNLINE

32 Catamount Drive Milton VT. 05468

Rennline LED or HID Headlight Parking Light LED Installation Guide



Read all instructions before beginning the install to become familiar with the install procedure.

This kit is designed to be installed into the Rennline LED or HID Headlight Upgrade only. You must purchase the Rennline LED or HID Headlight Upgrade kit separately.

Unpack the Parking Light LED kit. Check to be sure all parts are included and undamaged before you begin the install.

Included with Parking Light LED kit:

1. Two Parking LEDs
2. Four small diameter spade terminals
3. Four large diameter spade terminals



RENNLINE

32 Catamount Drive Milton VT. 05468

1. Mark the location of the parking light on the back of the projector surround. Use the rounded edge of the cutout in the frame indicated below to mark the center location.



2. Remove the projector surround from the headlight frame.
3. Drill a 3/8" hole at the marked location.
4. Thread the parking light through from the front of the projector surround. Secure in place using the supplied nut. Finger tight only.






RENLINE

32 Catamount Drive Milton VT. 05468

5. Use the supplied terminals to complete the wiring:
 - a) Use the small diameter supplied spade terminals for the two wires coming from the LEDs
 - b) Use the larger diameter supplied spade terminals for the connections to the vehicle chassis.
 - c) Connect the black wire from the Parking LED to the vehicle wiring harness ground wire.
 - d) Connect the red wire from the Parking LED to the parking light wire in the vehicle wiring harness.

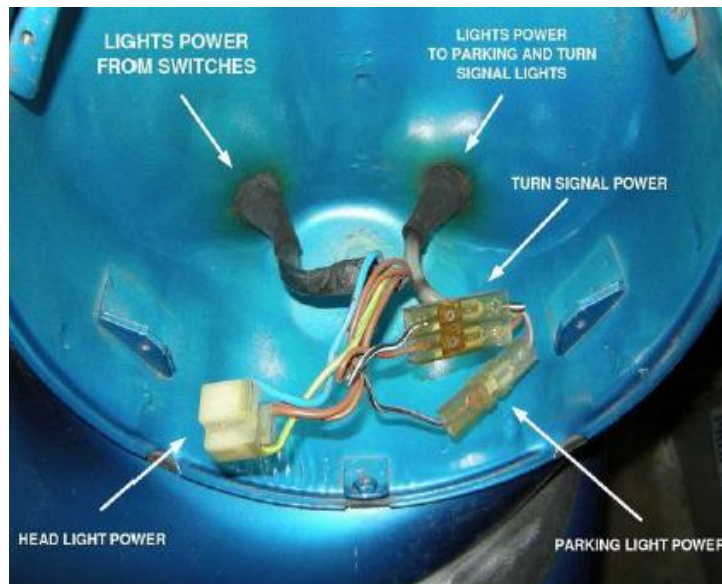

6. Refer to the Renline LED Headlight Upgrade kit Installation Guide to complete the headlight installation.

