



# Artificial Living Wall Panels


- 1 It is recommended that you paint the wall behind the panels a dark color. This ensures that there are no white spots showing through the green wall panels. Alternatively, you can hang a dark colored fabric on the wall (i.e. landscape paper or felt) as shown in step 7

## FOR STEPS 2-4 REFER TO DIAGRAM ON PAGE 2


- 2 Using a level, draw a horizontal line on the wall 5" below where the top of the green wall will be. The line should start 3" from the left edge and end 3" from the right edge.



- 3 If your green wall is only one panel (3') tall then you only need this single line, but if your wall is multiple panels tall then you need to draw an additional horizontal line for each row of panels. Draw each additional line 35-1/2" below the line above.

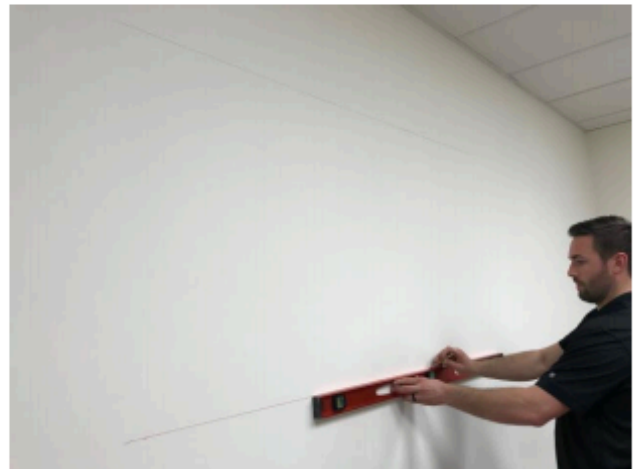


- 4 Mark your mounting points along each horizontal line as shown on the diagram.

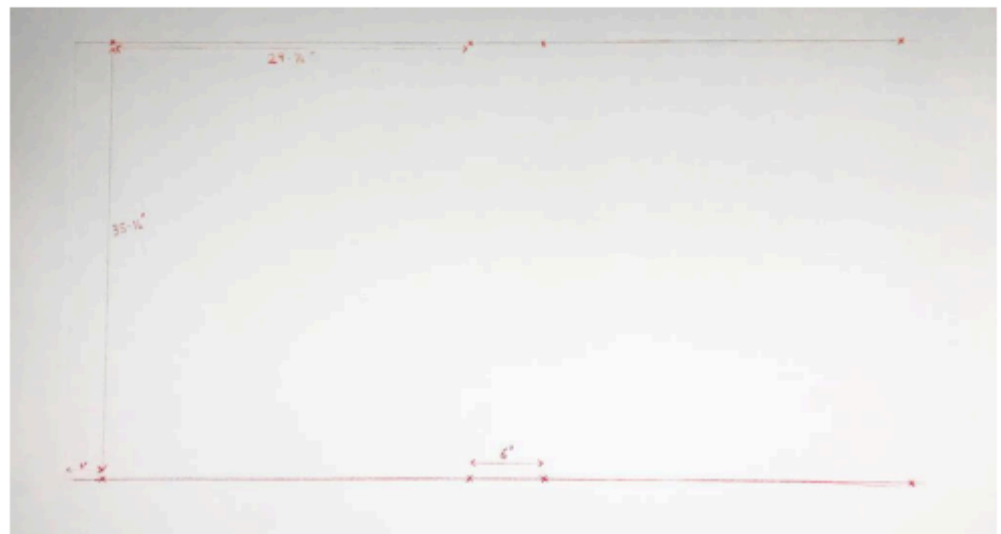



# Artificial Living Wall Panels

## MOUNTING TEMPLATE

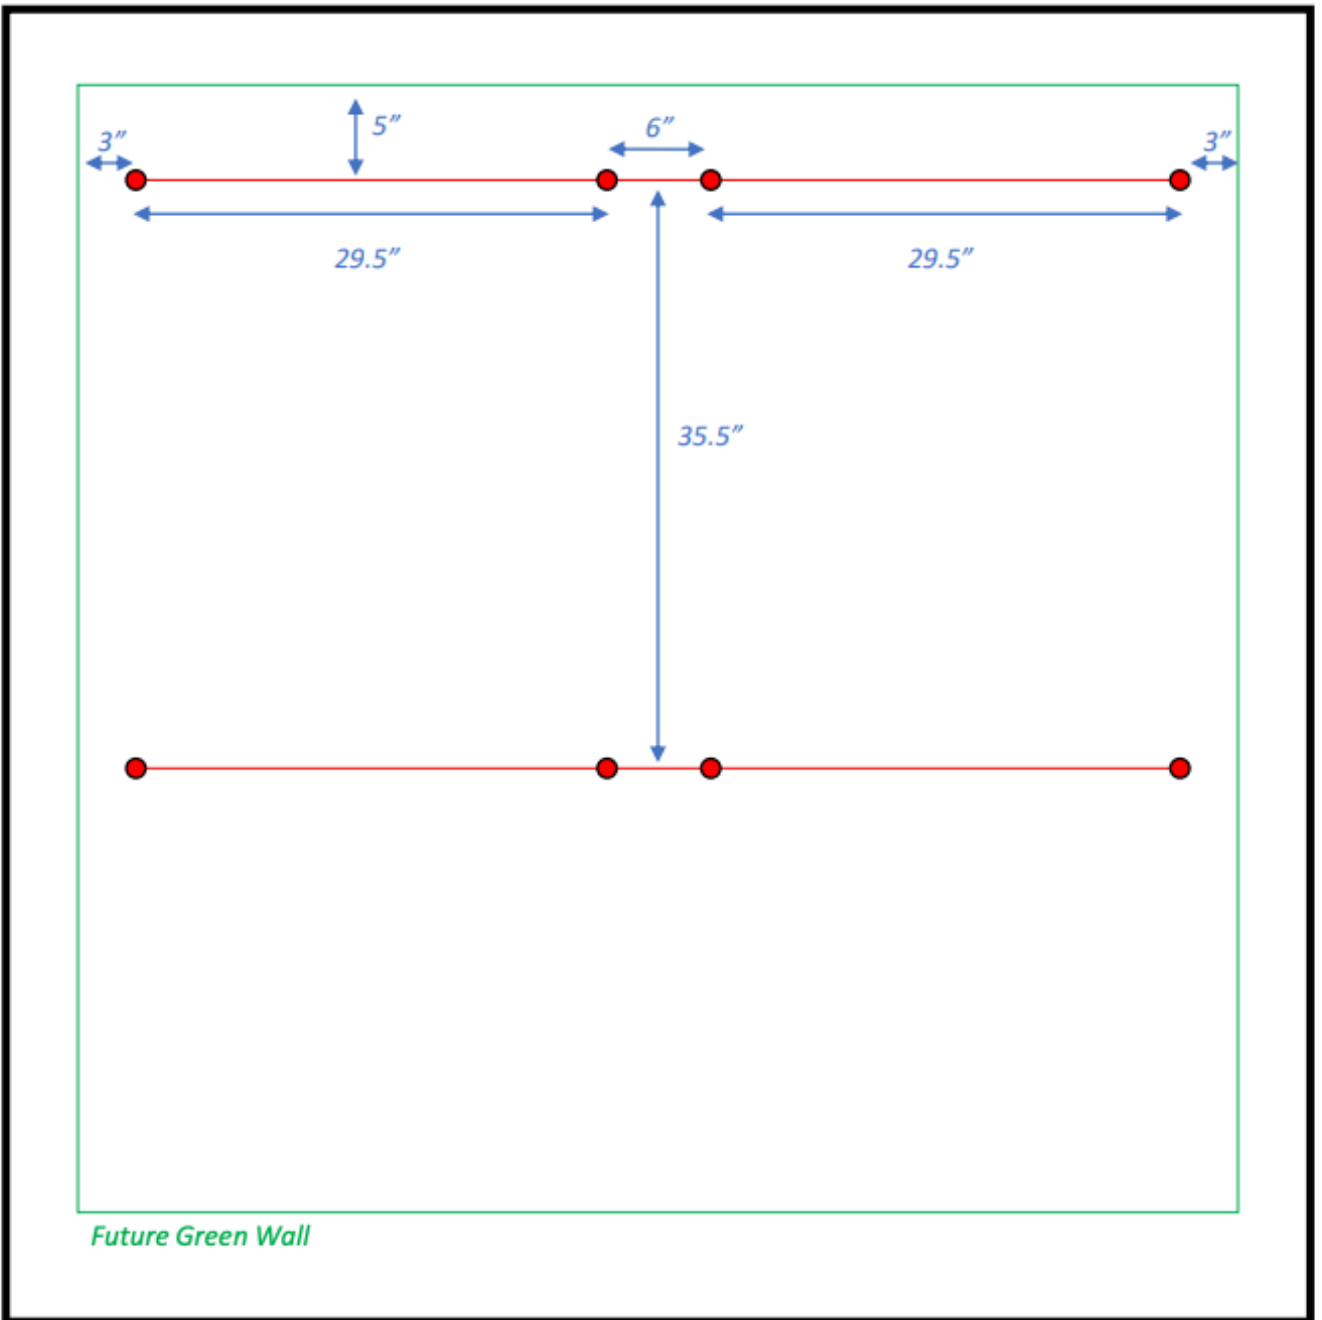

*Underlying Wall*


\*for larger walls, continue horizontally or vertically using the same format






# Artificial Living Wall Panels

- 5 Using a 6mm (15/64") drill bit, drill a hole at each mounting point. Insert a plastic wall anchor into each hole.

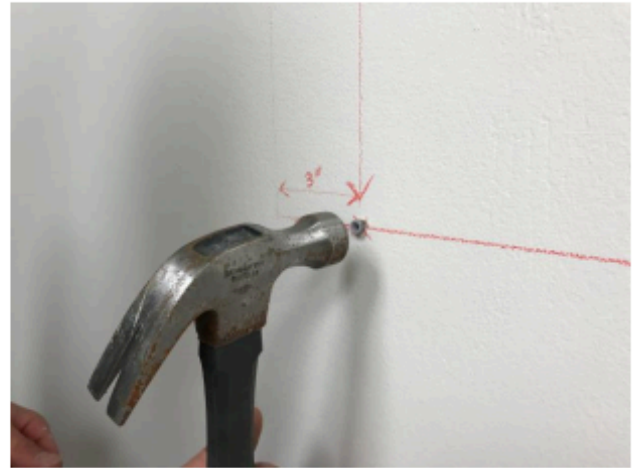

- 6 Attach green wall panel brackets at each point

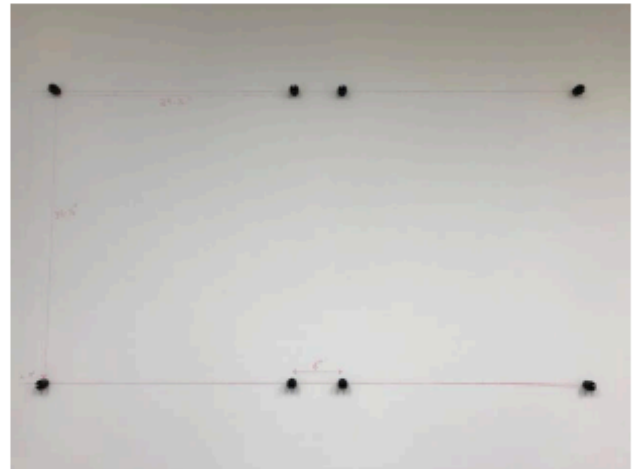




- 7 Recommended – if you have not painted the wall black, hang landscape paper using the green wall panel mounts to hold it to the wall.





# Artificial Living Wall Panels

- 8 Hang panels on to the wall brackets. From the front side of the panel, grab the third horizontal bar down from the top and insert that bar into the wall bracket. See mounting locations marked with blue tape on the photo to the right.
- 9 Use thumb screws to lock panels into place
- 10 Secure the bottom portion of the panel using one of the nylon wire straps and a screw.

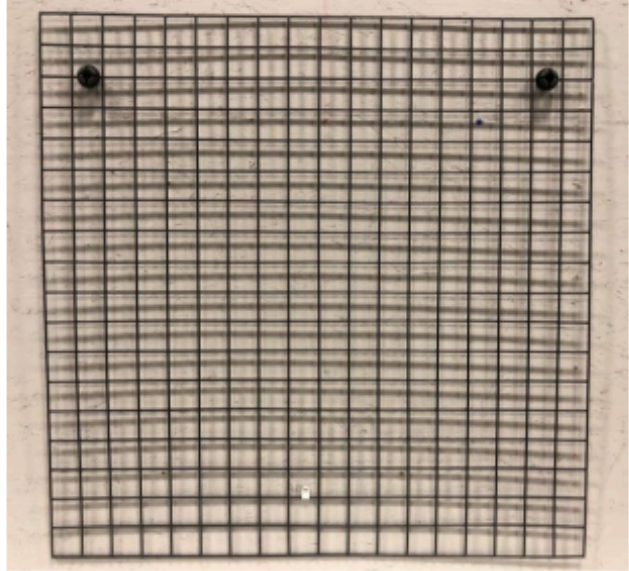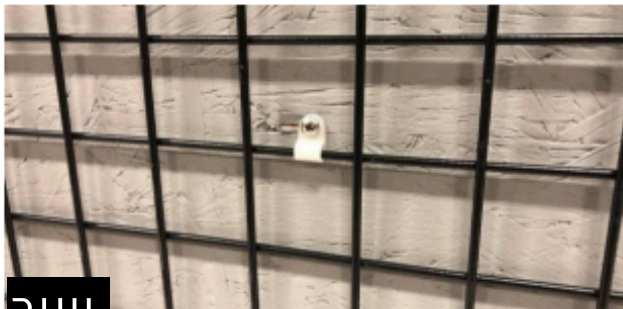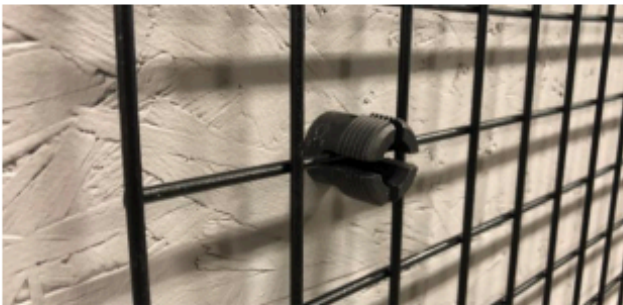

PHIL  
ZEN



# Artificial Living Wall Panels

11

When mounting panels next to each other, take care not to trap the foliage from an adjacent panel behind the panel you are mounting. You can carefully pull any trapped leaves out from behind the edge of the panel.



12

The green wall panels become flattened during transport. The plants need to be reshaped to look more natural. Reshape the plants by gently bending the plants forward off of the panel so that they face more outward instead of upward.





# Artificial Living Wall Panels

13

Optional – add different colored and textured plants to give the green wall a unique look. For indoor installation the plants can just be stuck into the wall. For exterior installations these additional plants need to be zip tied into place.



13

Optional – add frame or trim around the edges

