



MADE IN SALEM, OREGON, USA


FOUR STEPS TO SET UP YOUR VENN AIR CHAIR


INSERT DEFLATED AIR CUSHION

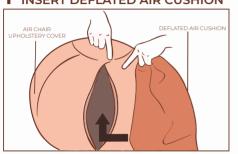

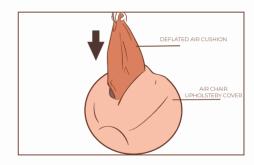

2 ALIGN VALVE AT ZIPPER CLOSE ABOVE VENN TAG

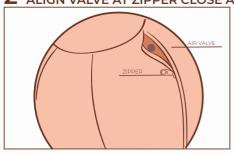

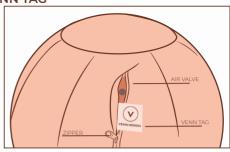


ZIP 95% AND INFLATE





4 TEST FIRMNESS BEFORE CLOSING VALVE

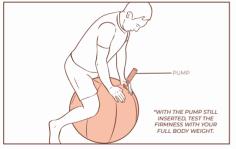



CONTACT US