




Clutch Master Cylinder Brace Install

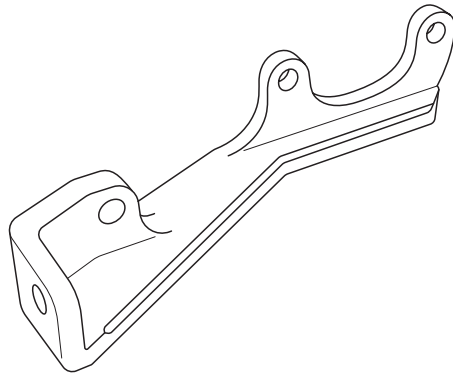

2427 North Forsyth Road, Unit P,
Orlando, FL 32807
(407) 325-2176

How To Install Your Circuit Motorsports Clutch Master Cylinder Brace

1. Remove your top mount intercooler.



2. Remove the pitch stop bolt at the firewall mount.




-
3. Remove the 2 OEM retaining nuts on the clutch master cylinder mounting studs.



4. With the "U" shaped part of the brace facing towards the driver side of the vehicle, mount the brace underneath the clutch master cylinder using the OEM 2 studs.



-
- Using the supplied stainless steel bolt place one nut on the bolt so that it is in front of the brace, then run the stainless steel bolt through to the backside of the brace and place a nut on the backside, leave this loose.
 - Using the supplied gold bolt (the longer of the 2 supplied bolts), reinstall the pitch stop and secure the brace to the pitch stop firewall mount.

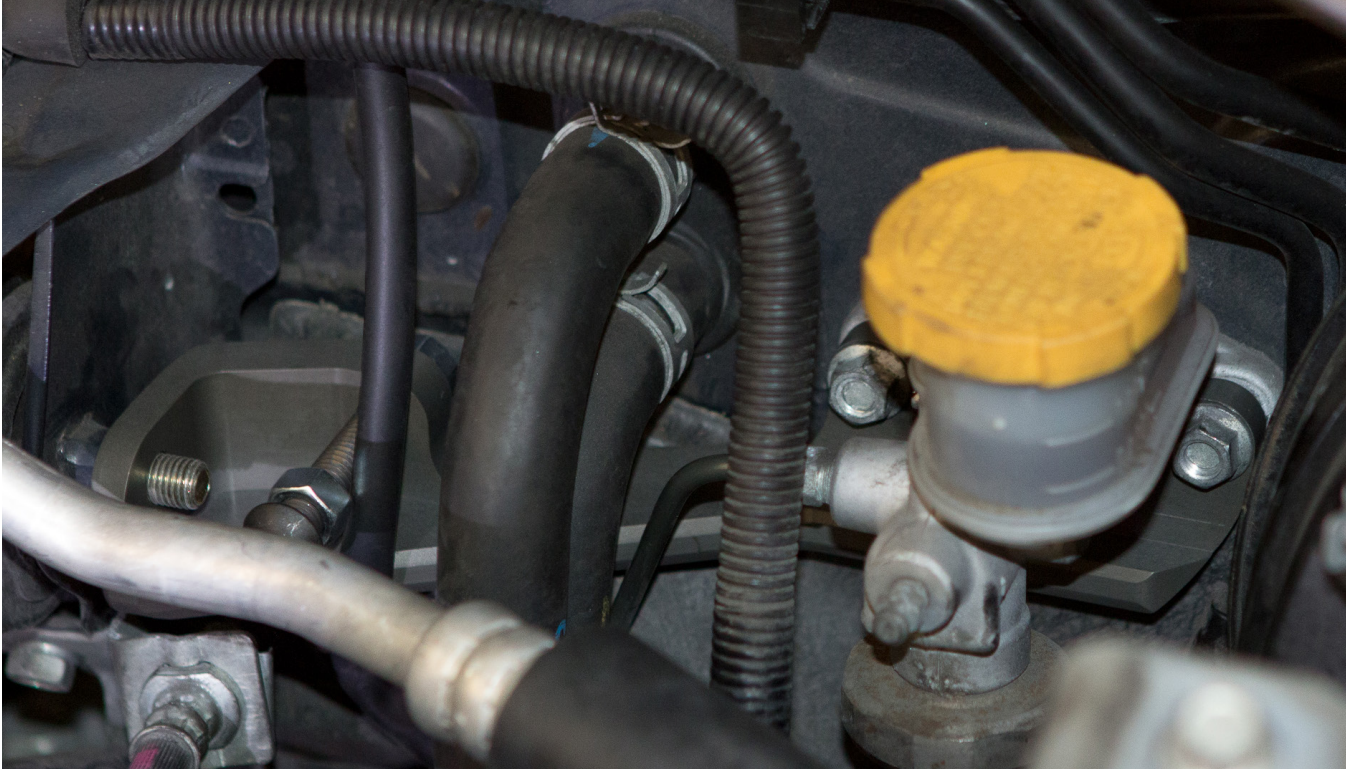

- Tighten the Pitch stop mount bolt nut and the master cylinder stud nuts evenly.



-
8. Now place the delrin pressure cup on the end of the stainless steel bolt, and tighten the silver nuts so that the delrin cup applies pressure against the firewall. This will keep the brace steady under applied forces from firewall flex.



9. Re-install your top mount intercooler and go enjoy your Circuit Motorsports Clutch Brace Master Cylinder Brace!